# **INSTALLATION INSTRUCTIONS**

▲ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER

# **APPLICATIONS**

Make	Model
Honda	Odyssey


### WIRING LOCATION GUIDE

#### **SUVS, MINI & FULL-SIZED VANS (S)**

Representative vehicle shown below

\$3 - Behind driver side rear access panel

# CUSTOM WIRING CONNECTOR

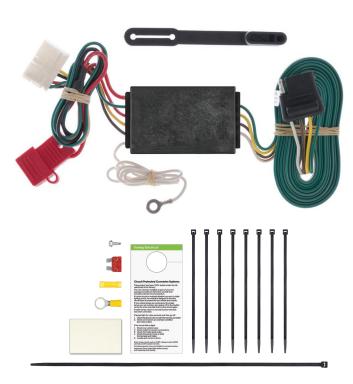



## NOTICE © 🕮

All steps must be followed to ensure the wiring connector will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

## **TOOLS NEEDED**

Flat blade screwdriver Panel trim removal tool



The battery connection must be fuse-protected, 10-amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Signal Circuits - 3.0 amps per side Tail / Running Circuits - 6.0 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

## INSTALLATION / SAFETY INSTRUCTIONS 🗓

#### Step 1

Locate vehicle battery on the driver side under the hood and disconnect the negative battery terminal.

#### Step 2

Open the vehicle tailgate and fold the rear seat on the driver side forward (A).

#### Step 3

Remove the two cargo hooks securing the rear scuff panel. Remove the scuff panel by pulling out on the bottom and then up (B,C).

#### Step 4

Remove the cargo hook securing the driver side panel. Loosen the panel by pulling on it gently. Remove the fuse panel cover near the rear seat (D,E).

#### Step 5

Starting at the rear of the vehicle, route the custom wiring connector behind the interior panel to the fuse panel. Insert the wiring connector into the vehicle connector. Make sure the connectors are fully inserted with locking tabs in place. (F).

#### Step 6

Locate a flat spot inside the vehicle, near the taillight. Adhere the black converter box using the provided double-sided tape (G). Insert the provided 10 amp fuse into the inline fuse holder.

#### Step 7

Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt and paint. Secure the white ground wire using the ring terminal and provided screw.

■ WARNING: Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

#### Step 8

When in use, route the 4-flat to the center of the vehicle. When not in use, roll up and store in a convenient, out of the way location. Secure any loose wires with the provided cable ties.

#### Step 9

Install the provided 10 amp mini fuse in position 2 in the fuse panel (F). It is denoted as 'Trailer Small LT' on the fuse panel cover.

#### Step 10

Reinstall all items removed during install and reconnect negative battery terminal. Install the provided 4-flat dust cover to help prevent corrosion.



