

Step 1

Remove the two small screws on the back of the 7-way socket and slide the center section of the 7-way socket out of the front of the housing.




Step 2

Insert the 9-volt battery leads through the rear of the 7-way socket. Attach the red lead wire (+) to the black terminal (+). Attach the black lead wire (-) to the white terminal (-).



Step 3

Slide the center section back into the 7-way socket and re-install the two small screws. Attach the 9-volt lead cap to the supplied battery. **Reminder:** Remove the 9-volt battery when not demonstrating the Echo™. This will prevent excess battery drain.

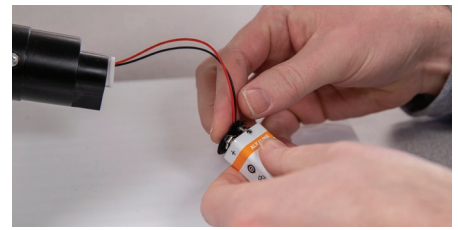

Step 1

Remove the two small screws on the back of the 7-way socket and slide the center section of the 7-way socket out of the front of the housing.



Step 2

Insert the 9-volt battery leads through the rear of the 7-way socket. Attach the red lead wire (+) to the black terminal (+). Attach the black lead wire (-) to the white terminal (-).



Step 3

Slide the center section back into the 7-way socket and re-install the two small screws. Attach the 9-volt lead cap to the supplied battery. **Reminder:** Remove the 9-volt battery when not demonstrating the Echo™. This will prevent excess battery drain.

