

INSTALLATION MANUAL

2055128

This is the first of two manuals required to complete this installation. The second manual is included with your side bars / running boards.

Level of Difficulty

Easy

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

Parts List

Qty	Description
1	Driver / left running board*
1	Passenger / right running board*
3	Driver / left side mounting bracket
3	Passenger / right side mounting bracket
6	U-Nut, M8-1.25
12	Nut, M8
30	Bolt, M8-1.25 x 30mm
12	Serrated-flange nut, M8-1.25
6	Nylock nut, M8-1.25, CL8.8
30	Flat washer, 5/16"
18	Lock washer, M8

*Running boards sold separately

Tools Required

Ratchet	Wrench set
Socket set	Flathead screwdriver or panel trim removal tool

Torque Specifications

M8 bolt | 23 ft-lbs.

Use above torque setting unless otherwise noted

Product Photo



NOTICE

Visit www.ariesautomotive.com for a full-color copy of this instruction manual, as well as helpful videos, guides and much more!

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

Periodic inspection of your product should be performed to ensure all hardware and / or components remain secure.

To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.

Maintenance


Mild automotive detergent may be used to clean the product. Do not use dish detergent, abrasive cleaners, abrasive pads, wire brushes or other similar products that may damage the finish.

Product Registration and Warranty

ARIES stands behind our products with industry-leading warranties. To get copies of the product warranties, register your purchase or provide feedback, visit: warranty.curtgroup.com/surveys

Step 1

Starting on the driver side, locate the six mounting locations along the bottom edge of the vehicle body.

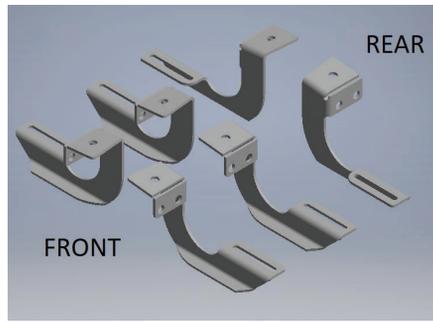

Step 2

Insert the 8mm threaded clip nuts into the square holes on the bottom of the rocker panel at all six mounting locations.



Step 3

Using a flathead screwdriver or a panel trim removal tool, release the clips securing the bottom plastic trim.

Note: The trim doesn't have to be removed all the way- just enough to pull back the plastic trim and remove the bolts.



Step 4

With the plastic trim loose, pull back the trim and insert two M8 bolts and flat washers into the two holes in the pinch weld. Repeat for all six mounting locations.



Step 5

With the M8 bolts and clip nuts installed, slide the brackets over the bolts and install the two M8 flange nuts and an M8 bolt with a lock washer and flat washer.

Snug the hardware, but do not fully tighten until the side bars / running boards are installed

Note: To complete the installation, refer to the manual included with your side bars / running boards.

