

INSTALLATION MANUAL

3500300**Level of Difficulty**

Easy

Parts List

1	Driver / left mirror bracket
1	Passenger / right mirror bracket
1	Backer plate
2	Mirror
4	Hex nut, 5/16"
4	Washer, lock, 5/16"
8	Washer, flat, 5/16"
4	Screw, button head, 5/16"
2	Screw, button head, 1/4"
2	Nut, hex, 1/4"
2	Washer, lock, 1/4"
2	Washer, flat, 1/4"

Tools Required

Ratchet	Socket set
Torque wrench	Allen wrench set

Torque Specifications

1/4" bolt	75 in-lbs.
5/16" bolt	132 in-lbs.

Use above torque setting unless otherwise noted

Product Photo**NOTICE**

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.

Maintenance

To protect the product, wax after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.

For polished, gloss and other smooth finishes, polish may be used to clear small scratches and scuffs on the finish.

Mild automotive detergent may be used to clean the product. Do not use dish detergent, abrasive cleaners, abrasive pads, wire brushes or other similar products that may damage the finish.

Product Registration and Warranty

CURT Group stands behind our products with industry-leading warranties.

Provide feedback and help us to improve our products by registering your purchase at: warranty.curtgroup.com/surveys

Step 1


Starting on the driver side, locate the mounting locations on the tube door.



Step 2

Locate the driver-side mirror bracket and backer plate. Secure the mirror bracket and backer plate to the tube door using two 5/16" screws, four 5/16" flat washers, two 5/16" lock washers, and two 5/16" nuts.

Repeat steps 1 and 2 on the passenger side.

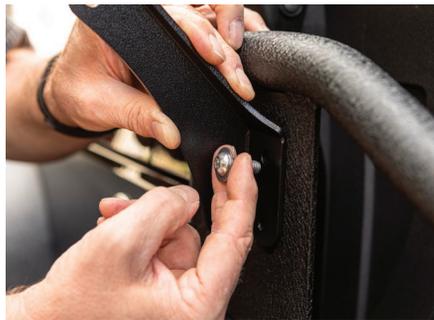

Step 3

Finish securing the backer plate using a 1/4" screw, flat washer, lock washer and nut.

Repeat Step 3 on the passenger side.



Step 4

Using the hardware supplied with the mirrors, fasten the mirrors to the mirror mounting brackets.

Congratulations on the installation of your new ARIES Jeep tube door mirrors.

With the mirrors installed, periodic inspections should be performed to ensure all mounting hardware remains tight.

To protect your investment, see the 'Notes and Maintenance' section on the first page of this instruction manual.

