

INSTALLATION INSTRUCTIONS AND PARTS LIST

VEHICLE APPLICATION: **MODEL 251510 (12.00" X 20.00")**

2015 COLORADO/CANYON

1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.

MOUNTING FRONT SPLASH GUARDS: (SEE SHEET #2)

2. INSTALL THE SPLASH GUARDS AS FOLLOWS:
 - 2.1 USING A 1/4-20 X .75" BOLT, A BLACK FENDER WASHER, AND A 1/4-20 FLANGE NUT (ITEMS # 4, 6, 10) INSTALL THE SUPPORT BRACE (ITEM #8) TO THE MUD GUARD AS SHOWN IN FIG. 1.
 - 2.2 REMOVE TWO FACTORY SCREWS THAT HOLD THE PLASTIC GUARD IN PLACE. **(THESE SCREWS ARE NOT REUSED, BUT THE PLASTIC GUARD WILL REMAIN).**
 - 2.3 POSITION THE SPLASH GUARD AGAINST THE WHEEL WELL FLANGE AND INSTALL A HEX HEAD SEMS SCREW, FENDER WASHER, AND SPACER WASHER (ITEMS #3, 4, 9) THRU THE INSIDE LOWER HOLE AS SHOWN IN FIG. 1., INSTALL A HEX HEAD SEMS SCREW AND A FENDER WASHER (ITEMS #3, 4) IN THE OUTER LOWER HOLE, AND TIGHTEN DOWN.
 - 2.4 REMOVE THE FACTORY INNER FENDER LINER SCREW AND ATTACH THE SUPPORT BRACE USING THE FACTORY SCREW. (FIG 1.)
 - 2.5 TIGHTEN ALL REMAINING FASTENERS.
 - 2.6 REPEAT FOR OPPOSITE SIDE.

MOUNTING REAR SPLASH GUARDS: (SEE SHEET #3)

3. INSTALL THE SPLASH GUARDS AS FOLLOWS:
 - 3.1 REMOVE THE TWO FACTORY SCREWS THAT HOLD THE PLASTIC GUARD IN PLACE AND THE INNER FENDER LINER SCREW (FIG 2). **(THESE SCREWS ARE NOT REUSED, BUT THE PLASTIC GUARD WILL REMAIN).** **NOTE: IF THE VEHICLE HAS A FACTORY FENDER WELL LINER REMOVE THE INSIDE SCREW HOLDING THE FENDER LINER ON AS SHOWN IN FIG. 2.**
 - 3.2 POSITION THE SPLASH GUARD AGAINST THE WHEEL WELL FLANGE AND INSTALL THREE HEX HEAD SEMS SCREWS WITH FENDER WASHERS (ITEMS #3, 4) THROUGH THE THREE LOWER HOLES AS SHOWN IN FIG. 2. AND TIGHTEN DOWN.
NOTE: FOR VEHICLES WITHOUT FACTORY WHEEL WELL LINERS USE A 1/4-20 X 1.25" BLACK BUTTON HEAD SCREW, A 1/4-20 FLANGE NUT, AND 2 FENDER WASHERS (ITEMS #4, 5, 6)
 - 3.3 WITH THE SPLASHGUARD LEVELED AND TIGHTENED, DRILL A 3/16" HOLE THROUGH THE WHEEL WELL FLANGE AND INSTALL THE 1/4" SELF TAPPING SCREW AND FENDER WASHER (ITEMS #7, 4) DO NOT OVER TIGHTEN THIS SCREW.
 - 3.4 TIGHTEN ALL REMIANING FASTENERS.
 - 3.5 REPEAT FOR OPPOSITE SIDE.



(A LUVERNE Company)

1200 E. Birch St.

Brandon, SD 57005

552840 SHEET 1 OF 3 27MAY15

SERVICE PARTS LIST

MODEL NO. - 251510

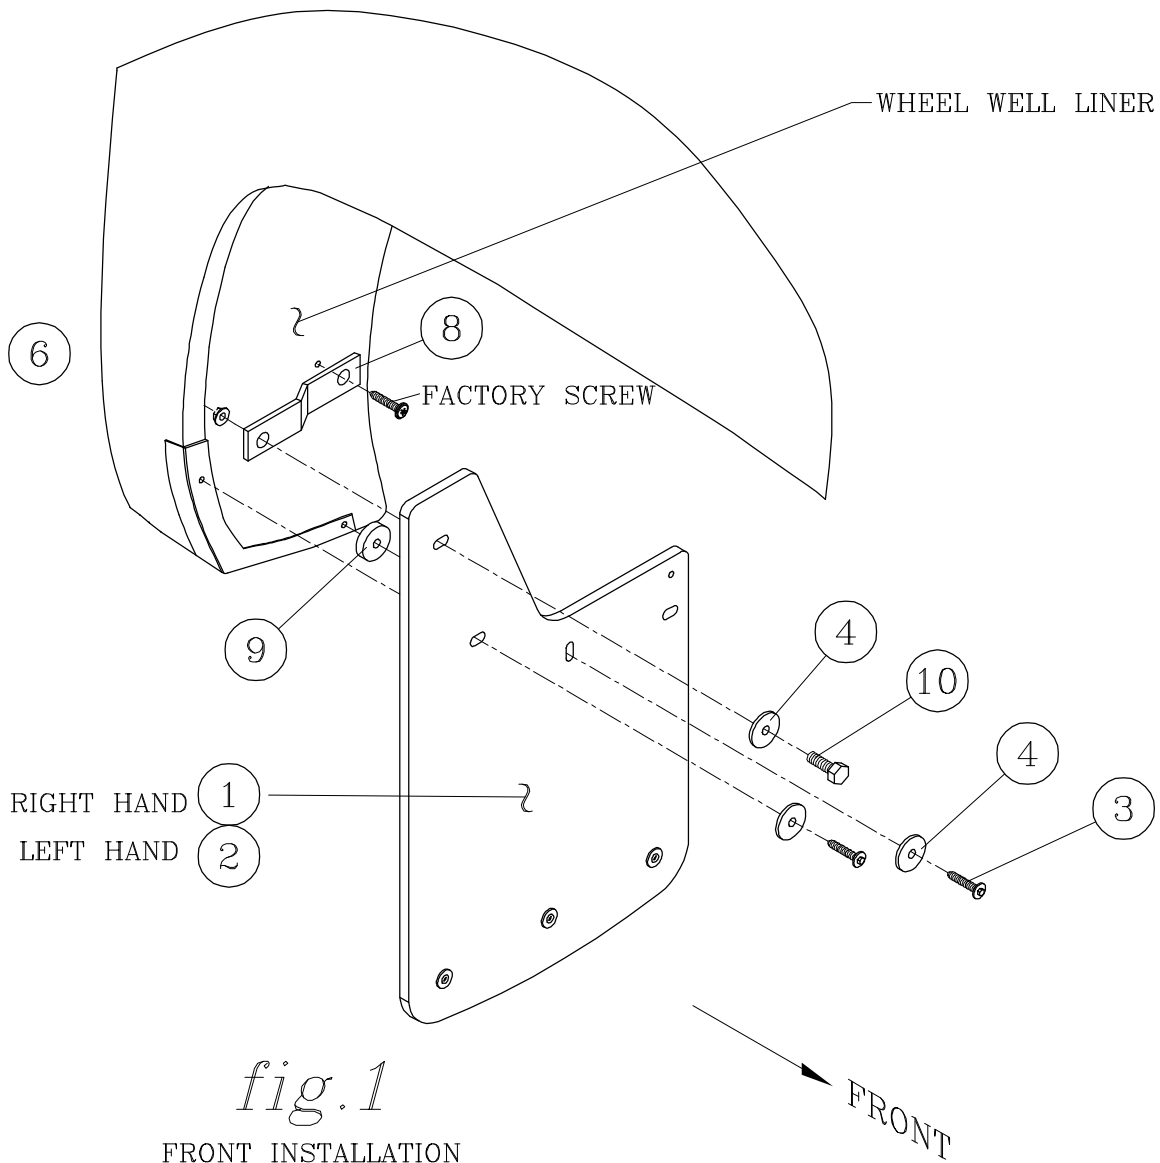


fig.1

FRONT INSTALLATION
RIGHT (PASSENGER) SIDE SHOWN

ITEM	PART NO.	QTY	DESCRIPTION
1	552837	1	SPLASH GUARD-RUBBER,12 X 20,15+ COLORADO,RH
2	552836	1	SPLASH GUARD-RUBBER,12 X 20,15+ COLORADO,LH
3	105514	6	SCREW - SEMS, 7MM, HEX HD, M4.2 X 30MM
4	108521	10	WASHER - FENDER, 1/4 X 1, SST, 18-8, BZP
5	108053	2	SCREW-BUTTON HEAD, 1/4"-20 X 1.25", BZP
6	100012	2	NUT-HEX, FLANGE, 1/4-20
7	108449	2	SCREW-SELF TAPING, 1/4" X 1", SST
8	552838	2	BRACE-SUPPORT, FRONT, 251510
9	107182	2	WASHER-SPACER, NYL, BLK, .380" X 1" X .25"
10	100006	2	SCREW - HEX HEAD, 1/4-20 X 3/4"

LIVERNE
TRUCK EQUIPMENT

(A LIVERNE Company)

1200 E. Birch St.

Brandon, SD 57005

552840 SHEET 2 OF 3 27MAY15

SERVICE PARTS LIST

MODEL NO. - 251510

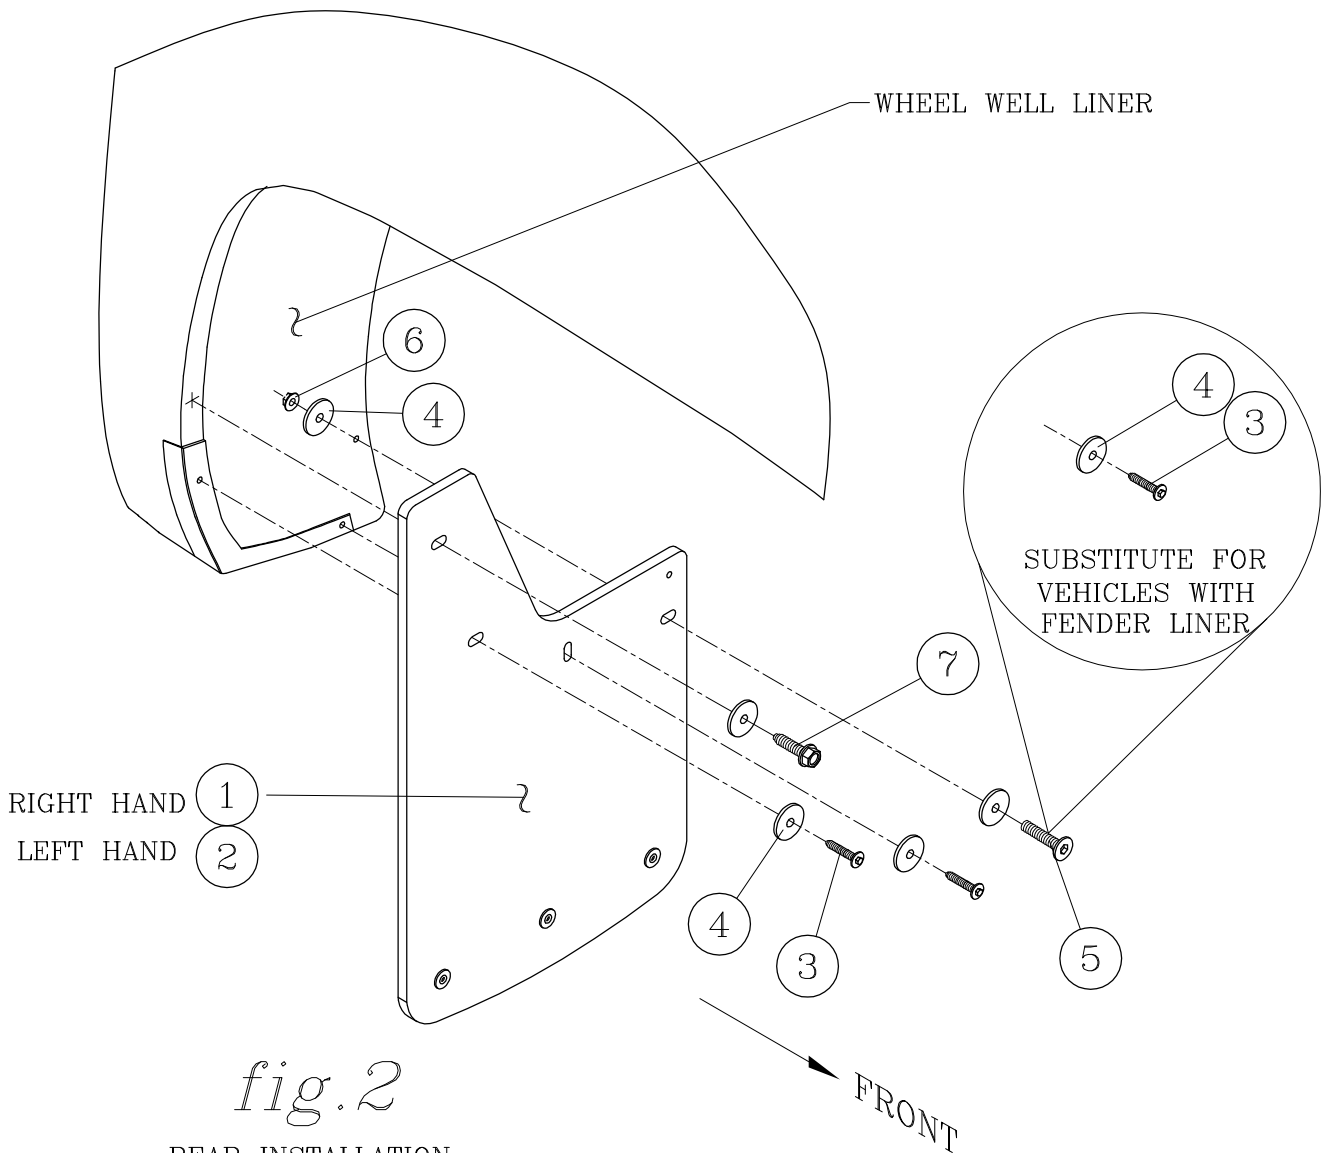


fig.2

REAR INSTALLATION
RIGHT (PASSENGER) SIDE SHOWN

ITEM	PART NO.	QTY	DESCRIPTION
1	552837	1	SPLASH GUARD-RUBBER,12 X 20,15+ COLORADO,RH
2	552836	1	SPLASH GUARD-RUBBER,12 X 20,15+ COLORADO,LH
3	105514	6	SCREW - SEMS, 7MM, HEX HD, M4.2 X 30MM
4	108521	10	WASHER - FENDER, 1/4 X 1, SST, 18-8, BZP
5	108053	2	SCREW-BUTTON HEAD, 1/4"-20 X 1.25", BZP
6	100012	2	NUT-HEX, FLANGE, 1/4-20
7	108449	2	SCREW-SELF TAPING, 1/4" X 1", SST
8	552838	2	BRACE-SUPPORT, FRONT, 251510
9	107182	2	WASHER-SPACER, NYL, BLK .380" X 1" X .25"
10	100006	2	SCREW- HEX HEAD, 1/4-20 X 3/4"



(A LIVERNE Company)

1280 E. Birch St.

Brandon, SD 57005

552840 SHEET 3 OF 3 27MAY15