

INSTALLATION INSTRUCTIONS AND PARTS LIST

VEHICLE APPLICATION:
MODEL 251525 (12" X 20") FRONT MUDGUARDS
2019 FORD RANGER SERIES TRUCKS

1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
2. STARTING ON THE PASSENGER SIDE ATTACH BRACKET (ITEM #3) TO THE STUDS STICKING OUT UNDER THE PASSENGER SIDE, AS SHOWN SECURE WITH 2 NUTS (ITEM #10) LEAVE FINGER TIGHT.
3. POSITION THE MUDGUARD (ITEM #1) AGAINST THE WHEEL WELL FLANGE AND INSTALL 2 HEX HEAD BOLTS (ITEM #5) AND 2 WASHERS (ITEM #6) THROUGH THE LOWER HOLES IN MUD GUARD AND INTO THE BRACKET SLOT. SECURE WITH 2 WASHERS (ITEM #6)) AND 2 NUTS (ITEM #7) LEAVE FINGER TIGHT.
4. WITH THE MUD GUARD IN PLACE ADJUST AND TIGHTEN ALL HARDWARE
5. NOW WITH THE MUD GUARD POSITIONED SO THAT IT IS LEVEL INSTALL THE 2 WASHERS (ITEMS #6 #8) AND TAP SCREW (ITEM #9) INTO THE 2 TOP HOLES ON THE MUD GUARD.
6. REPEAT FOR THE OPPOSITE SIDE.



SERVICE PARTS LIST

2019 FORD RANGER
MODEL: 251725

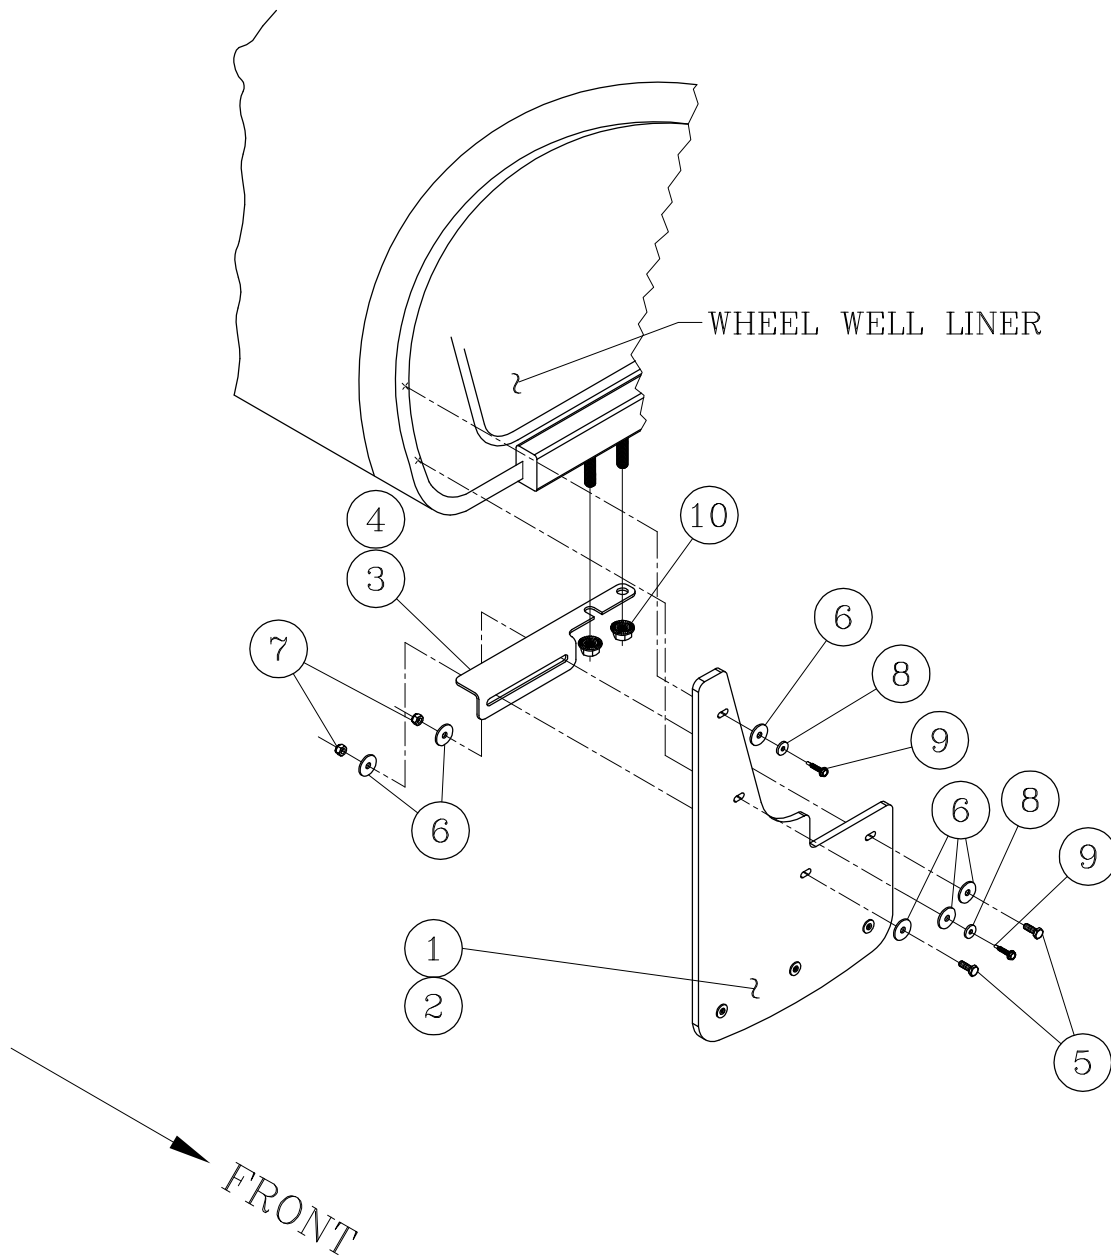


fig.1

FRONT INSTALLATION
RIGHT (PASSENGER) SIDE SHOWN

ITEM	QTY	DESCRIPTION
1	1	MUDGUARD-RUBBER, 20" RANGER,RH
2	1	MUDGUARD-RUBBER, 20" RANGER,LH
3	1	BRACE-SUPPORT, FRONT RH
4	1	BRACE-SUPPORT, FRONT LH
5	4	HHCS-STL,1/4-20 X .75" BLK ZP
6	12	WSHR-FNDR, 1/4 X1, SST,18-8,BZP
7	4	NUT-HEX,NYL, 1/4-20,SST
8	4	WASHER, FLAT,3/16, BZP
9	4	HHCS,8-18X1 TEK SC#2 BLK ZP
10	4	NUT-HEX,M12

