

INSTALLATION MANUAL

4055124

Level of Difficulty

Easy

This is the first of two manuals required to complete this installation. The second manual is included with your running boards / side steps.

Parts List

6	VersaTrac™ mounting bracket, universal
12	Hex bolt, M8 (B)
12	Flat washer, M8 (B)
12	Lock washer, M8 (B)
12	Hex nut, M8 (B)
12	Clip nut, M10
24	Hex bolt, M10 (S)
36	Flat washer, M10 (S)
24	Lock washer, M10 (S)
12	Hex nut, M10 (S)

(S) = Silver hardware, (B) = Black hardware
Running boards / side steps sold separately

Tools Required


Ratchet	Level
Torque wrench	Socket set

Torque Specifications

Metric	M6 bolt	3 ft-lbs.
	M8 bolt	7 ft-lbs.
	M10 bolt	16 ft-lbs.
	M12 bolt	28 ft-lbs.
SAE	1/4" bolt	3 ft-lbs.
	5/16" bolt	7 ft-lbs.
	3/8" bolt	16 ft-lbs.
	7/16" bolt	20 ft-lbs.
	1/2" bolt	28 ft-lbs.

Use above torque setting unless otherwise noted

Product Photo

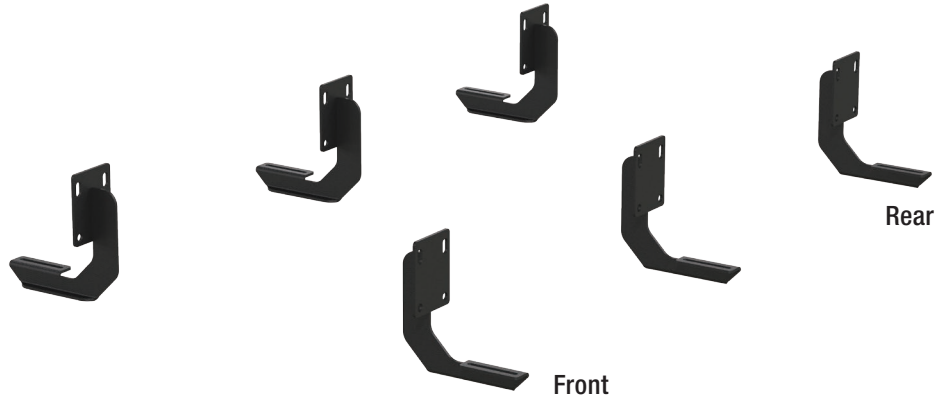

Notes and Maintenance

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

Mild automotive detergent may be used to clean the product. Do not use dish detergent, abrasive cleaners, abrasive pads, wire brushes or other similar products that may damage the finish.

Refer to the table to the left when securing hardware during the installation process to help prevent damage to the product or vehicle.

Product Registration

CURT Group stands behind our products with industry leading warranties. You can help us continue to improve our product line and help us understand your needs by registering your purchase by visiting:



warranty.curtgroup.com/surveys

At CURT Group, customer is king. We value your feedback and we use that information to make improvements on our products. Please, take a minute and let us know how we are doing.

Step 1

Starting on the driver side, locate the five mounting tabs along the bottom edge of the vehicle.

This installation will use the first, third and fifth mounting tabs.

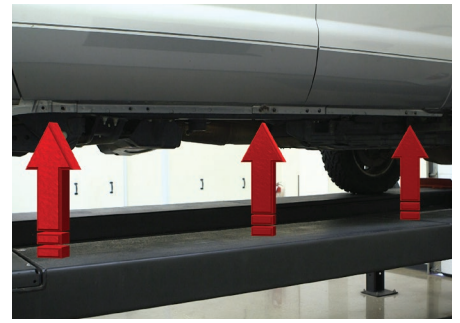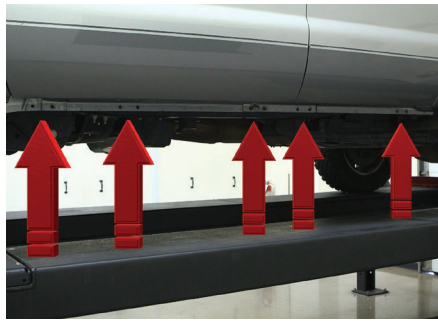

Step 2

Starting at the front driver-side mounting location, insert an M10 clip nut into the square hole and align it over the adjacent round hole.

Place a bracket onto the vehicle and secure with an M10 hex bolt, lock washer and flat washer.

Snug the hardware, but do not fully tighten.



Step 3

Finish securing the front mounting bracket to the vehicle using an M10 hex bolt and flat washer from the outside of the bracket and an M10 hex nut, lock washer and flat washer on the inside.

Repeat this step for the remaining bottom bolt location.



Step 4

Locate the middle bracket mounting tab and insert two M10 clip nuts and align them with the adjacent round holes.

Place a bracket onto the vehicle and secure with two M10 hex bolts, two lock washers and two flat washers on the top mounting locations.

Finish securing the middle mounting bracket to the vehicle using two M10 hex bolts and two flat washers from the outside of the bracket and two M10 hex nuts, two lock washers and two flat washers on the inside.



Step 5

Repeat steps 2 and 3 to install the rear bracket over the mounting tab location from step 1.

Repeat steps 1 through 5 on the passenger side of the vehicle.

Note: To complete the installation, refer to the manual included with your running boards / side steps.

