## INSTALLATION INSTRUCTIONS AND PARTS LIST

## VEHICLE APPLICATION: MODEL 501544 (20.25" X 23.00") DUAL WHEEL SPLASH GUARDS 2015 AND NEWER GM SILVERADO/ SIERRA 3500 HD SERIES DUAL WHEEL TRUCKS


- 1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
- 2. PEEL AWAY THE PROTECTIVE VINYL COVERING AND CLEAN THE STAINLESS STEEL SPLASH GUARD INSERTS TO REMOVE ANY VINYL COVERING RESIDUE. (A GOOD GLASS CLEANER IS SUGGESTED).
- 3. PREPARE THE SPLASH GUARDS AND VEHICLE FOR SPLASH GUARD INSTALLATION AS FOLLOWS:
  - 3.1. FORM THE TOP OF THE SPLASH GUARD ASSEMBLY (ITEM #1 THRU #4) TO MATCH THE CONTOUR OF THE WHEEL WELL.
  - 3.2. REMOVE THE FACTORY FENDER STIFFENER BRACE SCREW. (THIS FASTENER IS REUSED IN THIS INSTALLATION).
  - 3.3. REMOVE THE TWO FACTORY WHEEL WELL FLANGE SCREWS. (THESE FASTENERS ARE NOT REUSED IN THIS INSTALLATION).
- 4. INSTALL THE SPLASH GUARDS AS FOLLOWS:
  - 4.1. ATTACH THE MOUNTING BRACKET (ITEM #5) TO THE SPLASH GUARD AS SHOWN. USE 1/4-20 X 3/4" CARRIAGE BOLT (ITEM #6), 1/4" FLAT WASHER (ITEM #8) AND 1/4-20 SERRATED FLANGE NUT (ITEM #7).
  - 4.2. POSITION THE SPLASH GUARD AGAINST THE WHEEL WELL FLANGE AND RE-INSTALL THE FACTORY STIFFENER BRACE SCREW THRU THE MOUNTING BRACKET AS SHOWN.
  - 4.3. INSTALL M6-1.0 X 30MM BTN HD SOC SCREWS (ITEM #9) AND 1/4" FLAT WASHER (ITEM #8) AS SHOWN. (USE THE OUTBOARD HOLES IN THE SPLASH GUARD AS SHOWN).
  - 4.4. MOVE THE SPLASH GUARDS IN OR OUT AS DESIRED, LEVEL THE SPLASH GUARDS AND TIGHTEN THE FASTENERS.



1200 E. Birch St.

Brandon, SD 57005

552319 SHEET 1 OF 2 28APR14

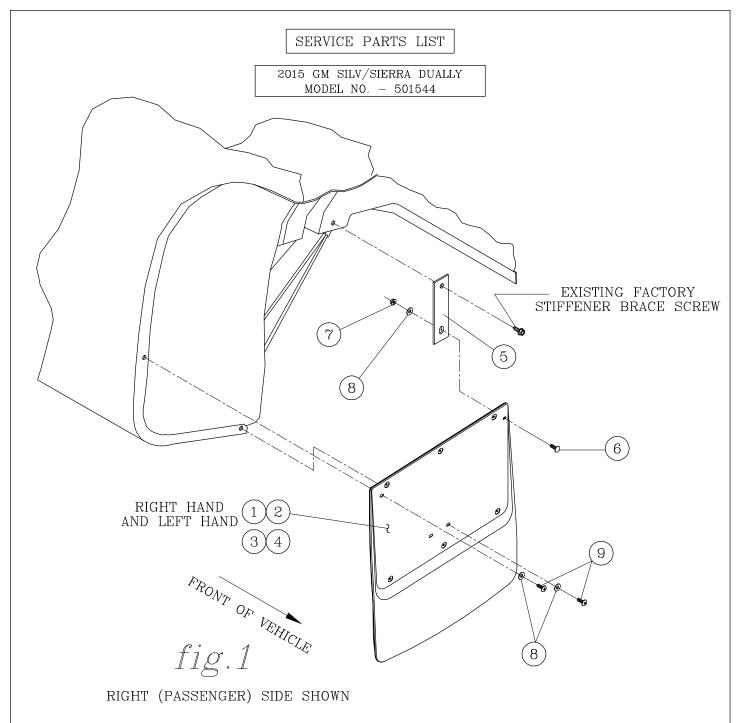



552319 SHEET 2 OF 2 28APR14