

INSTALLATION MANUAL

570715

Level of Difficulty

Easy

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

Parts List

Qty	Description
6	Mounting bracket, front
2	Mounting bracket, rear
16	Hex screw, M8 X 1.25 X 30
16	Lock washer, M8
16	Fender washer, M8


Tools Required

Ratchet	Socket extensions
Socket, 13mm	

Torque Specifications

M8 bolt	16 ft-lbs.
Use above torque setting unless otherwise noted	

Product Photo

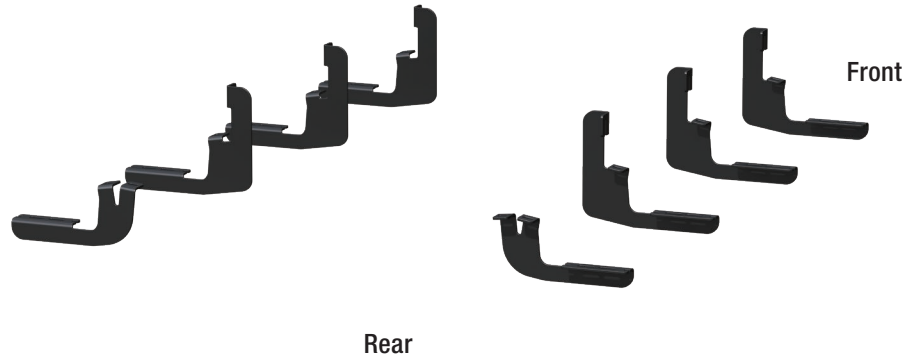

NOTICE

Visit LUVERNETRUCK.com for a full-color copy of this instruction manual, as well as helpful videos, guides and much more!

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

Periodic inspection of your product should be performed to ensure all hardware and / or components remain secure.

To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.

Product Registration and Warranty

LUVERNE stands behind our products with industry-leading warranties. To get copies of the product warranties, register your purchase or provide feedback, visit: warranty.curtgroup.com/surveys

Maintenance

Mild automotive detergent may be used to clean the product. Do not use dish detergent, abrasive cleaners, abrasive pads, wire brushes or other similar products that may damage the finish.

Step 1

Locate the four mounting locations along the rocker panel of the vehicle.

Step 2

Install the front bracket to the vehicle using the M8 hardware.

Repeat for next two locations.



Step 3

Install the rear bracket to the vehicle using the M8 hardware.



Step 4

Repeat steps 1-3 for opposite side of the vehicle.
