

INSTALLATION INSTRUCTIONS AND PARTS LIST

APPLICATION: MODEL 570939/400939 W2W MEGA/GRIP STEP BRACKETS ON:
09-16 RAM 1500 PICKUPS



1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
2. ASSEMBLE THE LOAD REACTION STUDS AND HARDWARE AS FOLLOWS.

NOTE: USE A 4" STUD (ITEM #19) FOR THE FRONT BRACKET AND A 3" STUD (ITEM #18) FOR THE REAR BRACKETS.

- 2.1. ON THE SHORT THREADED END OF THE LOAD REACTION STUD (ITEM #18, 19), INSTALL A 3/8" SERRATED FLANGE NUT (ITEM #17) BACKWARDS TO THE BOTTOM OF THE THREAD. THEN INSTALL A 3/8" FLAT WASHER (ITEM #16) AND RUBBER "CUSHION" WASHER (ITEM # 15) TIGHT UP AGAINST THE SERRATED FLANGE NUT. (THE END OF THE STUD MUST BE RECESSED IN THE RUBBER WASHER APPROX. 3/16").
 - 2.2. ON THE LONG THREADED END OF THE STUD, INSTALL A 3/8" SERRATED FLANGE NUT (ITEM # 17) BACKWARDS TO NEAR TO THE BOTTOM OF THE THREADS
3. ATTACH THE LOAD REACTION STUD ASSEMBLIES TO THE MOUNTING BRACKETS AS SHOWN. INSERT THE STUD, FROM WHAT WILL BE THE INBOARD OR FRAME SIDE THRU THE LOWEST HOLE IN THE BENT FLANGE OF THE BRACKET THAT WILL ALLOW THE RUBBER WASHER TO SEAT FIRM AGAINST THE SIDE WALL OF THE FRAME. INSTALL A FLANGE NUT (ITEM #17) ON THE OUTBOARD END OF THE STUD (FINGER TIGHT ONLY).
 4. ON THE RIGHT SIDE OF THE VEHICLE, REMOVE THE FACTORY FRONT, CENTER, AND REAR BODY MOUNT BOLTS (ONE SIDE OF THE VEHICLE AT A TIME), THESE WILL NOT BE REUSED. INSTALL THE MOUNTING BRACKETS PER THE FOLLOWING INSTRUCTIONS:
 - 4.1. USING A M12 – 110MM BOLT (ITEM #13) AND A 2.0" WASHER (ITEM #14) INSTALL THE FRONT MOUNTING BRACKET (ITEM #1, 2) TO THE FRONT BODY MOUNT AS SHOWN (LEAVE THESE FASTENERS FINGER TIGHT).
 - 4.2. USING A M12 – 110MM BOLT (ITEM #13) AND A 2.0" WASHER (ITEM #14) INSTALL THE CENTER MOUNTING BRACKET (ITEM #3, 4) TO THE CENTER BODY MOUNT AS SHOWN (LEAVE THESE FASTENERS FINGER TIGHT).
 - 4.3. IF THERE IS A CAST IRON DAMPENER ON THE REAR BODY MOUNT PLEASE REMOVE (THIS WILL NOT BE REUSED).
 - 4.4. USING A M12 – 110MM BOLT (ITEM #13) AND A 1/2" FLAT WASHER (ITEM #21) INSTALL THE REAR MOUNTING BRACKET (ITEM #5, 6) TO THE REAR BODY MOUNT AS SHOWN (LEAVE THESE FASTENERS FINGER TIGHT).
 - 4.5. ATTACH THE REAR OUTBOARD MOUNTING BRACKET (ITEM #7, 8) TO THE REAR INBOARD MOUNTING BRACKET (ITEM #5, 6), IN THE LOWER MOUNTING HOLES, USING THREE 3/8-16 X 1.0 SCREW, 3/8" FLAT WASHERS AND 3/8" FLANGE NUTS. (ITEMS #16, 17, 20)



5. ATTACH THE MOUNTING BRACKETS TO THE BOX OF THE VEHICLE AS FOLLOWS:
 - 5.1 ATTACH THE INBOARD MOUNTING BRACKETS (ITEM #9, 10) TO THE FRAME AS SHOWN USING 1/2-13 X 1.00 HEX SCREW, 1/2" WASHER, AND 1/2-13 SERRATED FLANGE NUTS (ITEM #21, 22, 23). LEAVE THIS BRACKET LOOSE AT THIS TIME. **NOTE THAT THESE MOUNTING BRACKETS ARE NOT THE SAME FROM LEFT TO RIGHT.**
 - 5.2 ATTACH THE W2W SUPPORT BRACKET (ITEM #12) TO THE INBOARD MOUNTING BRACKET USING TWO 3/8-16X 1" HEX SCREWS, TWO 3/8" WASHERS, AND TWO 3/8-16 FLANGE NUTS (ITEMS #16, 17, 20) AND TO THE FRAME AS SHOWN USING A 1/2"-13 X 1" HEX SCREW, A 1/2" WASHER, AND A 1/2"-13 SERRATED FLANGE NUT (ITEMS #21, 22, 23). LEAVE THIS BRACKET LOOSE AT THIS TIME.
 - 5.1. INSTALL THE W2W OUTBOARD MOUNTING BRACKET (ITEM #11) TO THE INBOARD W2W BRACKET AS SHOWN USING TWO BLACK 5/16"-18 X 1" HEX SCREWS, TWO BLACK 5/16" WASHERS AND TWO BLACK 5/16"-18 FLANGE NUTS (ITEMS #24, 25, 26). LEAVE THIS BRACKET LOOSE AT THIS TIME
6. ATTACH THE STEP PLATE PER THE INSTRUCTIONS INCLUDED WITH YOUR STEP PLATE ASSEMBLY.
7. TIGHTEN ALL BOLTS AND NUTS ON THE REAR W2W BRACKET, TIGHTEN THE 1/2"-13 FLANGE NUTS TO 60 LB FT. TIGHTEN ALL REMAINING BODY MOUNT BOLTS.
8. POSITION THE LOAD REACTION STUD ASSY SO THAT THE RUBBER CUSHION IS SNUG UP AGAINST THE SIDE OF THE FRAME. TIGHTEN THE 3/8" FLANGE NUTS ON EITHER SIDE OF THE BRACKET TO 19LB. FT.



SERVICE PARTS LIST


| ITEM | PART NO. | QTY | DESCRIPTION |
|------|----------|-----|---|
| 1 | 552850 | 1 | BRKT-MTG, MS, FRONT, LH, BODY MOUNT |
| 1 | 552862 | 1 | BRKT-MTG, GRIP, FRONT, LH, BODY MOUNT |
| 2 | 552851 | 1 | BRKT-MTG, MS, FRONT, RH, BODY MOUNT |
| 2 | 552863 | 1 | BRKT-MTG, GRIP, FRONT, RH, BODY MOUNT |
| 3 | 552852 | 1 | BRKT-MTG, MS, CENTER, LH, BODY MOUNT |
| 3 | 552864 | 1 | BRKT-MTG, GRIP CENTER, LH, BODY MOUNT |
| 4 | 552853 | 1 | BRKT-MTG, MS, CENTER, RH, BODY MOUNT |
| 4 | 552865 | 1 | BRKT-MTG, GRIP, CENTER, RH, BODY MOUNT |
| 5 | 552854 | 1 | BRKT-MTG, REAR, LH, INBOARD, BODY MOUNT |
| 6 | 552855 | 1 | BRKT-MTG, REAR, RH, INBOARD, BODY MOUNT |
| 7 | 552856 | 1 | BRKT-MTG, MS, REAR, LH, OUTBOARD |
| 7 | 552868 | 1 | BRKT-MTG, GRIP, REAR, LH, OUTBOARD |
| 8 | 552857 | 1 | BRKT-MTG, MS, REAR, RH, OUTBOARD |
| 8 | 552869 | 1 | BRKT-MTG, GRIP, REAR, RH, OUTBOARD |
| 9 | 551693 | 1 | BRKT-MTG, MS, W2W, LH, INBOARD |
| 9 | 551881 | 1 | BRKT-MTG, GRIP, W2W, LH, INBOARD |
| 10 | 551694 | 1 | BRKT-MTG, MS, W2W, RH, INBOARD |
| 10 | 551882 | 1 | BRKT-MTG, GRIP, W2W, RH, INBOARD |
| 11 | 551721 | 2 | BRKT-MTG, MS, W2W, OUTBOARD |
| 11 | 552125 | 2 | BRKT-MTG, GRIP, W2W, OUTBOARD |
| 12 | 552875 | 2 | BRKT-MTG, W2W, SUPPORT |
| 13 | 103444 | 6 | SCREW-HEX HEAD, M12 – 1.75 X 110MM, ZP |
| 14 | 105909 | 4 | WSHR-FLAT, 2.0 X .509 X .179, ZP |
| 15 | 102592 | 6 | WSHR, RUBBER, .354 ID X 1.00 OD X .75 THK |
| 16 | 100062 | 16 | WSHR, FLAT, 3/8", .438 ID X 1.00 OD X .083" THK |
| 17 | 100181 | 28 | NUT, SERR FLG, HEX, 3/8-16 UNC, ZP |
| 18 | 104697 | 4 | STUD, STL, 3/8-16 X 3.00", ZP |
| 19 | 104686 | 2 | STUD, -DBL ENDED, STL, 3/8-16 X 4.00", ZP |
| 20 | 100040 | 10 | SCR-HEX HD, 3/8-16 X 1.0" UNC, ZP |
| 21 | 100118 | 6 | WASHER, FLAT, 1/2" ZP |
| 22 | 100085 | 4 | SCR-HEX HD, 1/2"-13 X 1", ZP |
| 23 | 100123 | 4 | NUT-HEX, FLG, 1/2"-13 |
| 24 | 106996 | 4 | NUT-SERR FLG, SST, 5/16"-18, BZP |
| 25 | 106997 | 4 | SCR-HEX HD, 5/16"-18 X 1.00", BZP |
| 26 | 106998 | 4 | WASHER, SST, 5/16", BZP |



SERVICE PARTS LIST

MODEL NO.-570939/400939

FIG. 1
CREW/QUAD CAB

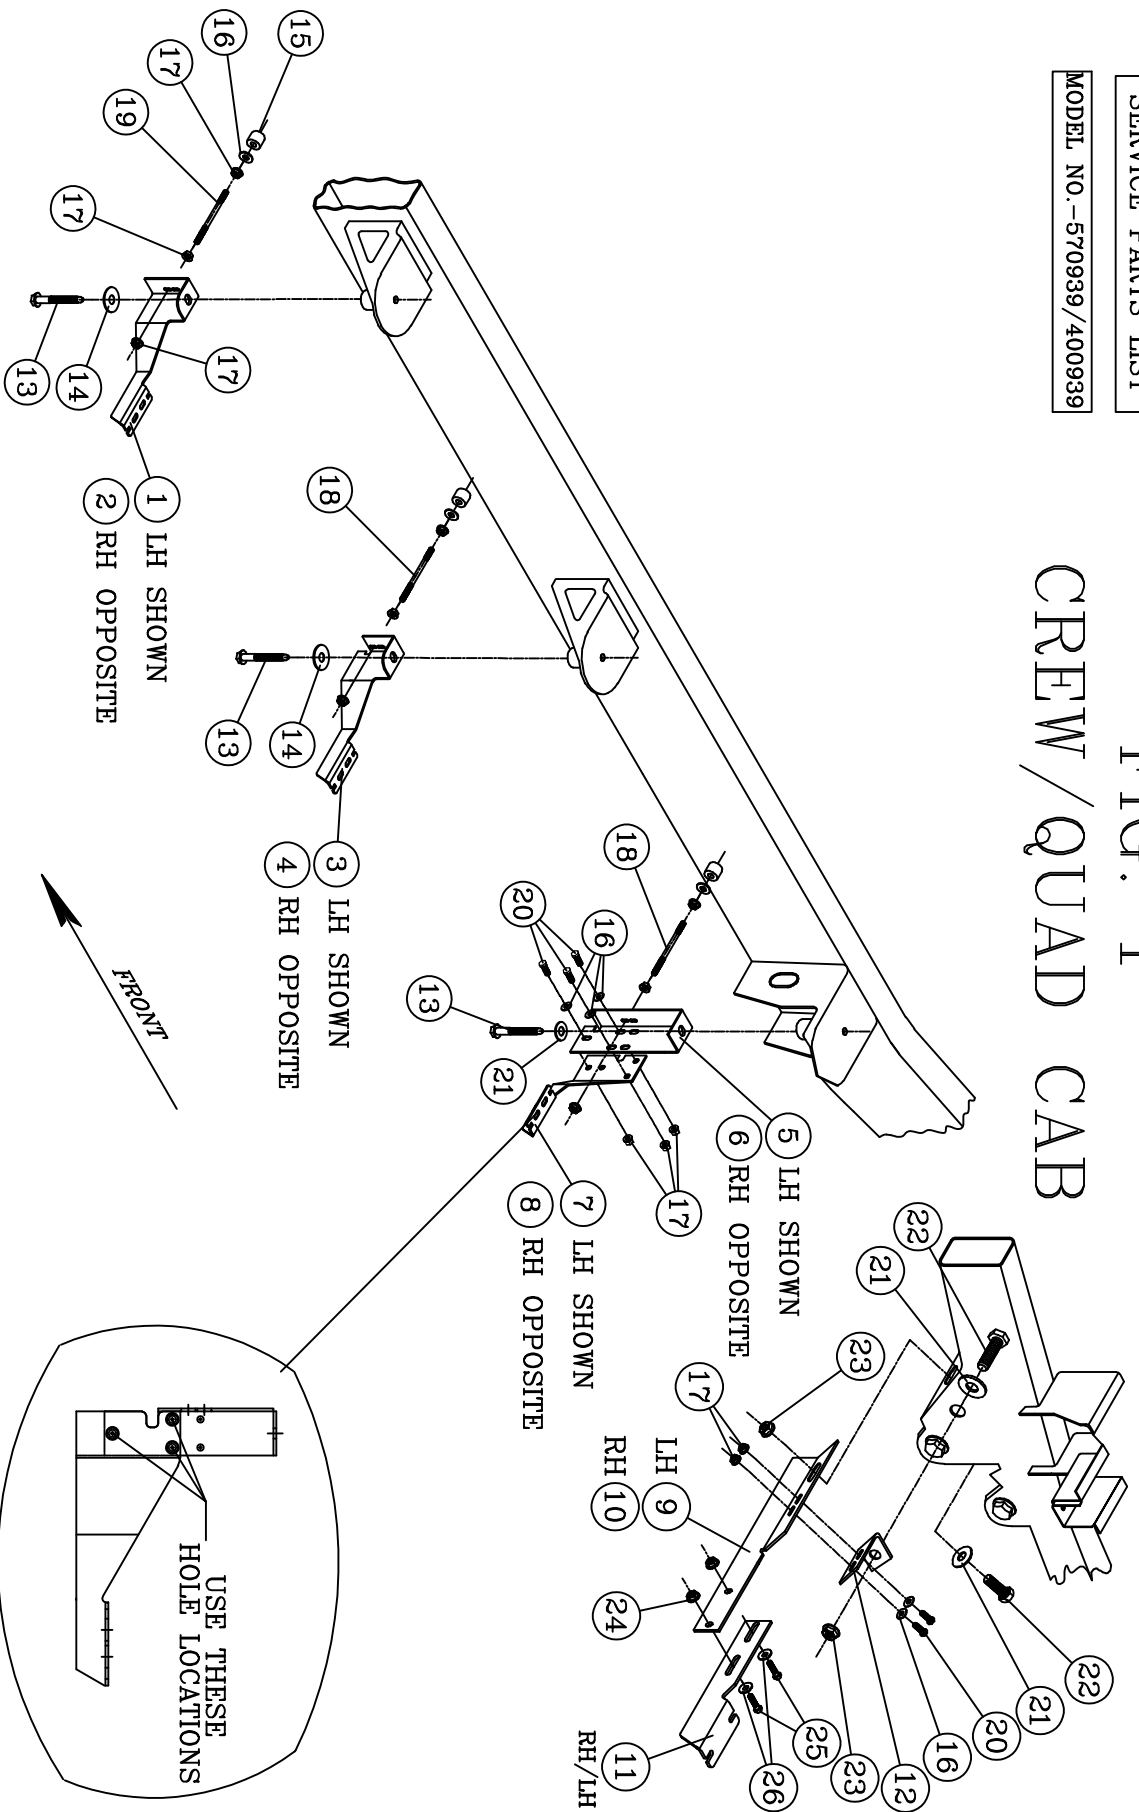

LEFT (DRIVER) SIDE SHOWN
-RIGHT (PASSENGER) SIDE OPPOSITE-

LEFT (DRIVER) SIDE SHOWN