

# INSTALLATION INSTRUCTIONS AND PARTS LIST

APPLICATION: MODEL 571663 MEGA STEP BRACKETS ON:  
2016+ NISSAN TITAN CREW CAB PICKUPS  
**ROCKER PANEL MOUNT APPLICATION**



## NO DRILL APPLICATION

1. READ INSTRUCTIONS COMPLETELY AND CHECK TO MAKE SURE THAT ALL REQUIRED PARTS (LISTED ON SERVICE PARTS LIST) ARE ON HAND BEFORE STARTING THE INSTALLATION.
2. INSTALL BRACKETS (ITEM #1), USING THE SUPPLIED FASTENERS (ITEM #2) M8 X 1.25, X 30mm SCREW, (ITEM #3) 5/16 LOCK WASHER, & (ITEM #4) 5/16 FLAT WASHER, IN THE THREADED HOLES OF THE ROCKER PANEL. AS SHOWN IN FIG 1.
3. **NOTE: REMOVE ANY FACTORY PLUGS FROM THREADED MOUNTING HOLES IF EQUIPPED.**
4. TIGHTEN ALL M8 FASTENERS TO 19 LB/FT.
5. INSTALL BOARD PER SUPPLIED INSTRUCTIONS.



## SERVICE PARTS LIST

ITEM	PART NO.	QTY	DESCRIPTION
1	552964	8	BRKT-MTG, MEGA STEP/O-MEGA STEP, 571663
2	102549	16	M8-1.25 X 30MM SCREW, ZP
3	100030	16	5/16 LOCK WASHER, ZP
4	100034	16	5/16 FLAT WASHER, ZP

SERVICE PARTS LIST

MODEL NO. -571663

USE THESE 2 HOLES  
FOR DRIVERS SIDE (LEFT),  
FOR THE PASSENGER  
SIDE (RIGHT) USE  
THE OPPOSITE 2 HOLES

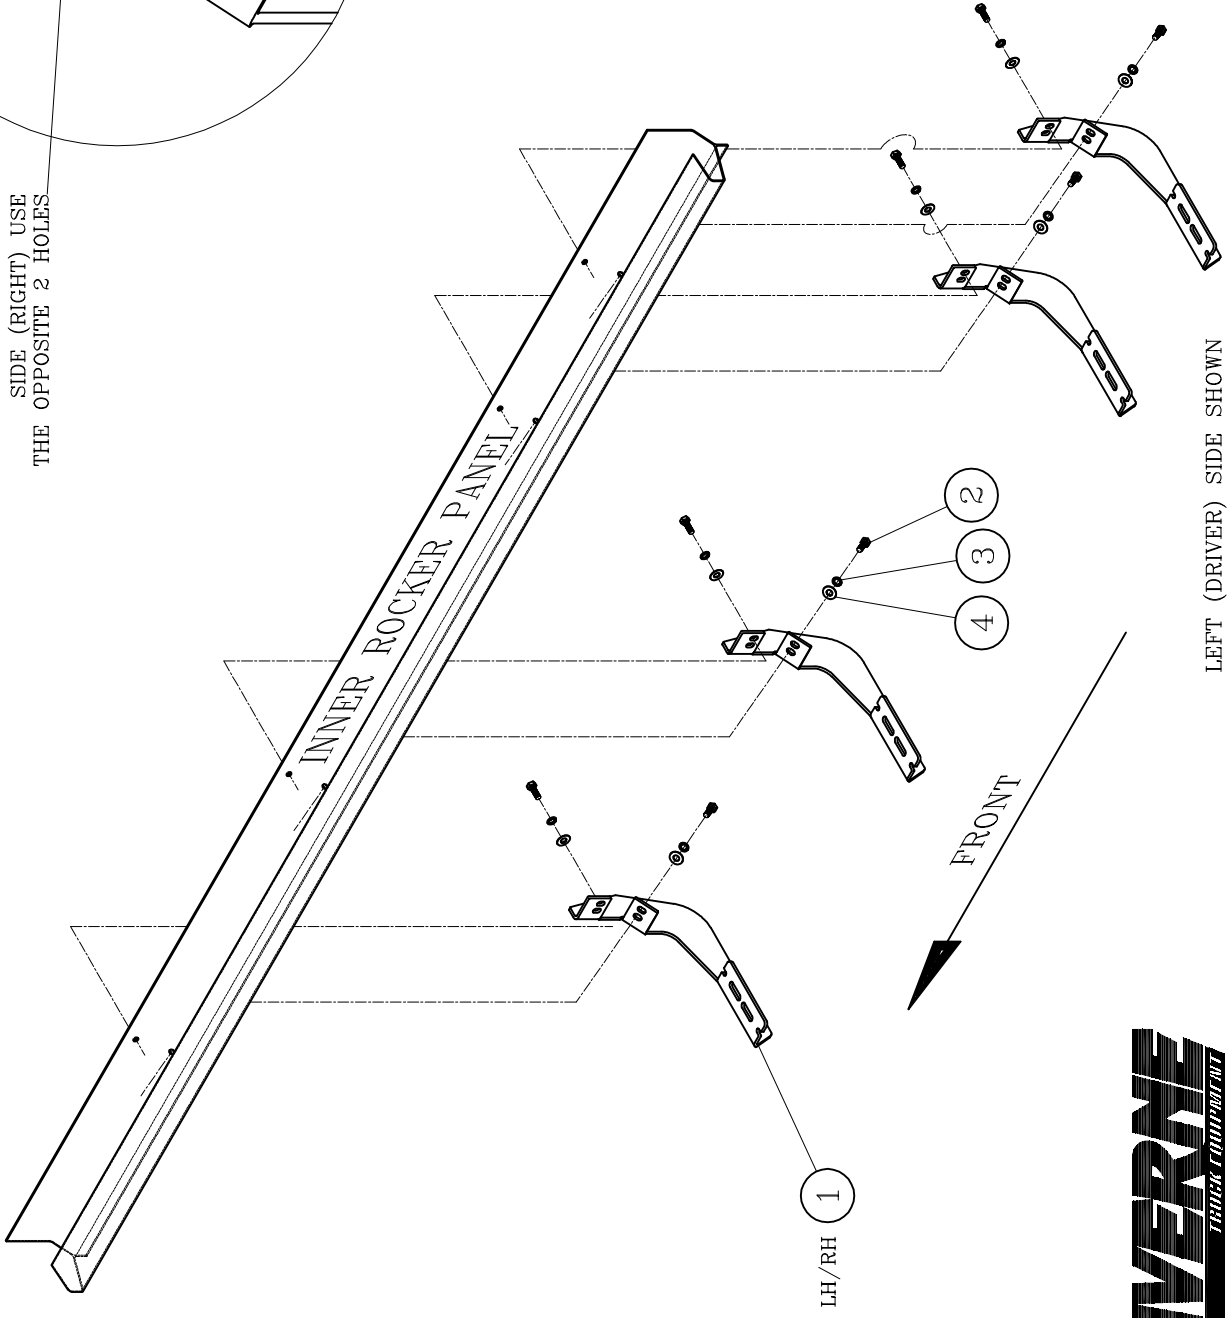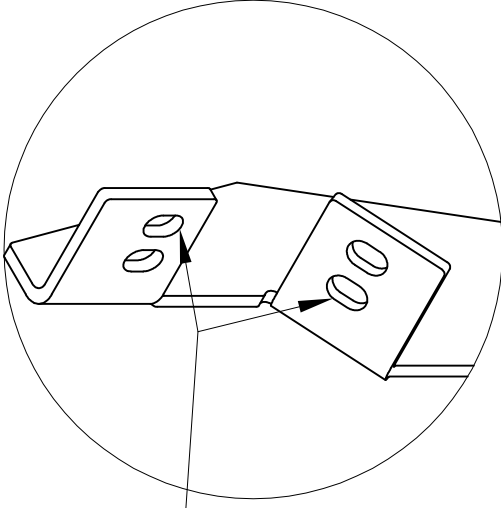

LEFT (DRIVER) SIDE SHOWN  
- RIGHT (PASSENGER) SIDE OPPOSITE -

