

INSTALLATION MANUAL

585001

Level of Difficulty

Easy

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

Parts List

Qty	Description
1	O-mega II Step
2	End Caps
6	Square Head Bolt - 5/16" x 1"
6	Flange Nut - 5/16"
1	Step Pad
5	Self-Drilling Screw

Tools Required

Wrench-1/2"	Drill
Phillips Bit	1/8" Drill Bit

Torque Specifications

5/16" bolt	19 ft-lbs.
5/16" bolt for End Caps	5 ft-lbs.

Use above torque setting unless otherwise noted

Product Registration and Warranty

LUVERNE stands behind our products with industry-leading warranties. To get copies of the product warranties, register your purchase or provide feedback, visit: warranty.curtgroup.com/surveys

Product Photo



NOTICE

Visit www.luvernetruck.com for a full-color copy of this instruction manual, as well as helpful videos, guides and much more!

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

Periodic inspection of your product should be performed to ensure all hardware and / or components remain secure.

To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.

Maintenance


Mild automotive detergent may be used to clean the product. Do not use dish detergent, abrasive cleaners, abrasive pads, wire brushes or other similar products that may damage the finish.

Step 1

Read instructions completely and check to make sure that all required parts (listed on the service parts list) are on hand before starting the installation.

Step 2

Insert hardware into the slots as shown, place end caps over the ends of the boards and tighten hardware.

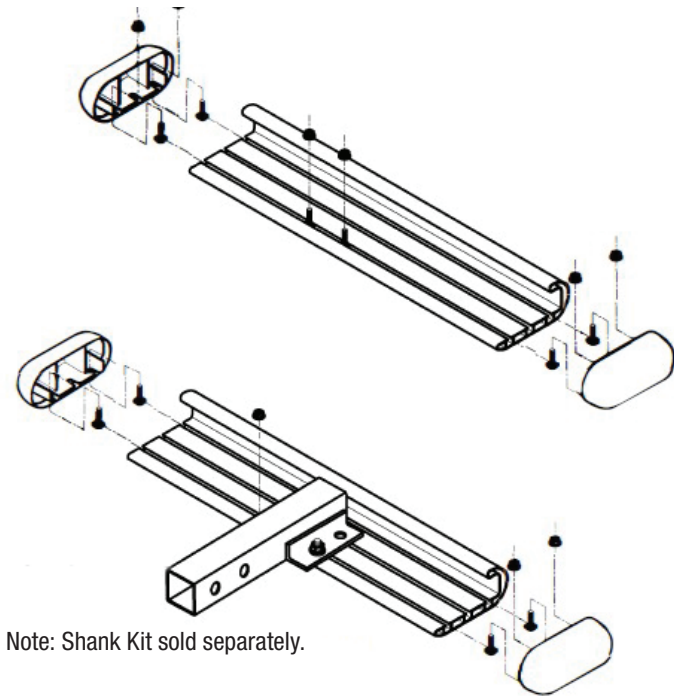

Step 3

Center the step pad on the board, drill a 1/8" pilot hole at each screw location and secure using the self drilling screws

