


11240 INSTALLATION INSTRUCTIONS



YEARS: 2012-PRESENT

MAKE: CHEVROLET

MODEL: SONIC

STYLE: SEDAN



WARNING: NEVER EXCEED YOUR VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY For more information log onto www.curtmfg.com & for helpful towing tips log onto www.hitchinfo.com

WEIGHT CARRYING:

TRAILER WEIGHT: 2000 LBS. TONGUE WEIGHT: 200 LBS.

WARNING

ALL NON-TRAILER (WHEEL-LESS) LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS. PLEASE SEE THE CURT CATALOG OR VISIT US ONLINE AT WWW.CURTMFG.COM FOR FURTHER INFORMATION.

PRO INSTALL TIME: **20 MIN.**NOVICE INSTALL TIME: **40 MIN.**

IF YOU ARE HESITANT TO UNDERTAKE
THIS TASK ON YOUR OWN, CONTACT AN AUTHORIZED
CURT INSTALLER FOR ADDITIONAL ASSISTANCE.

INSTALLATION TIPS:

- 1. BEFORE YOU BEGIN INSTALLATION, READ ALL INSTRUCTIONS THOROUGHLY.
- 2. TO EASE INSTALLATION, 2 PEOPLE MAY BE REQUIRED.
- 3. USING PROPER TOOLS WILL GREATLY IMPROVE THE QUALITY OF THE INSTALL AND REDUCE THE TIME REQUIRED.
- 4. NEED HELP OR HAVE SOME QUESTIONS? CALL TECHNICAL SUPPORT AT 877-287-8634

INSTALLATION REQUIRES: 11/16" **TORQUE WRENCH** RATCHET SOCKET **DRILL BIT** SAFETY 1" **DRILL GLASSES**

SCAN FOR

MORE INFO

LEVEL OF DIFFICULTY: EASY

EASY MODERATE

CHALLENGING



FISHWIRE HARDWARE



REVERSE FISHWIRE HARDWARE (2017 MODELS)




HOLE ENLARGEMENT REQUIRED

VEHICLE PHOTO:



REPRESENTATIVE PHOTO

HITCH ILLUSTRATION:

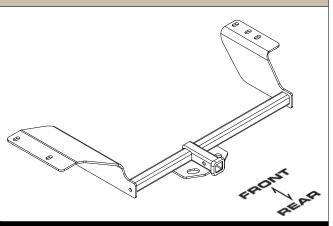


MAKE SURE YOUR HITCH MATCHES

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE ALL FASTENERS ARE TIGHT AND ALL STRUCTURAL COMPONENTS ARE SOUND

CURT Manufacturing LLC. warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, CURT Manufacturing LLC. may repair or replace the product at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. CURT Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.

INSTALLATION WALKTHROUGH:

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	4	10-10282	BOLT,CAR,7/16-14 UNC,1-1/2,GRD8,YZ
2	4	CM-SP2	.250 x .88 x 2.25" SPACER
3	4	20-00103	NUT,SER-FLANGE,7/16-14 UNC,GRD8,YZ
4	4	7_16 FISHWIRE	7/16" FISHWIRE

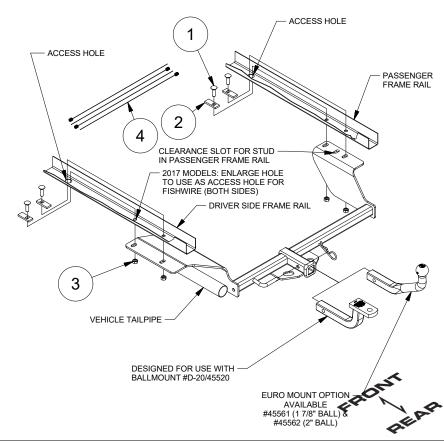

1. Fishwire CM-SP2 spacers and 7/16-14 carriage bolts through access hole in frame rail and down through attachment hole, (2) places, each side.

NOTE: On 2017 models; enlarge forward-most attachment hole to one inch using drill and 1" drill bit. Use as new access hole to fishwire 7/16" carriage bolts and CM-SP2 spacers into the frame rail. Reverse fishwire in access hole to use as attachment point.





- 2. Raise hitch into position, lifting driver side first over tailpipe, then lifting passenger side.
- 3. Secure with 7/16" hex flange nuts.
- 4. Tighten all 7/16-14 fasteners to 70 ft.-lbs.

Installation is complete.





For more information log onto www.curtmfg.com

11240

CHEVROLET SONIC SEDAN

9/11/2020


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2000 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT.

DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.

** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY**

HAVING INSTALLATION OUESTIONS? CALL TECHNICAL SUPPORT AT 877-287-8634

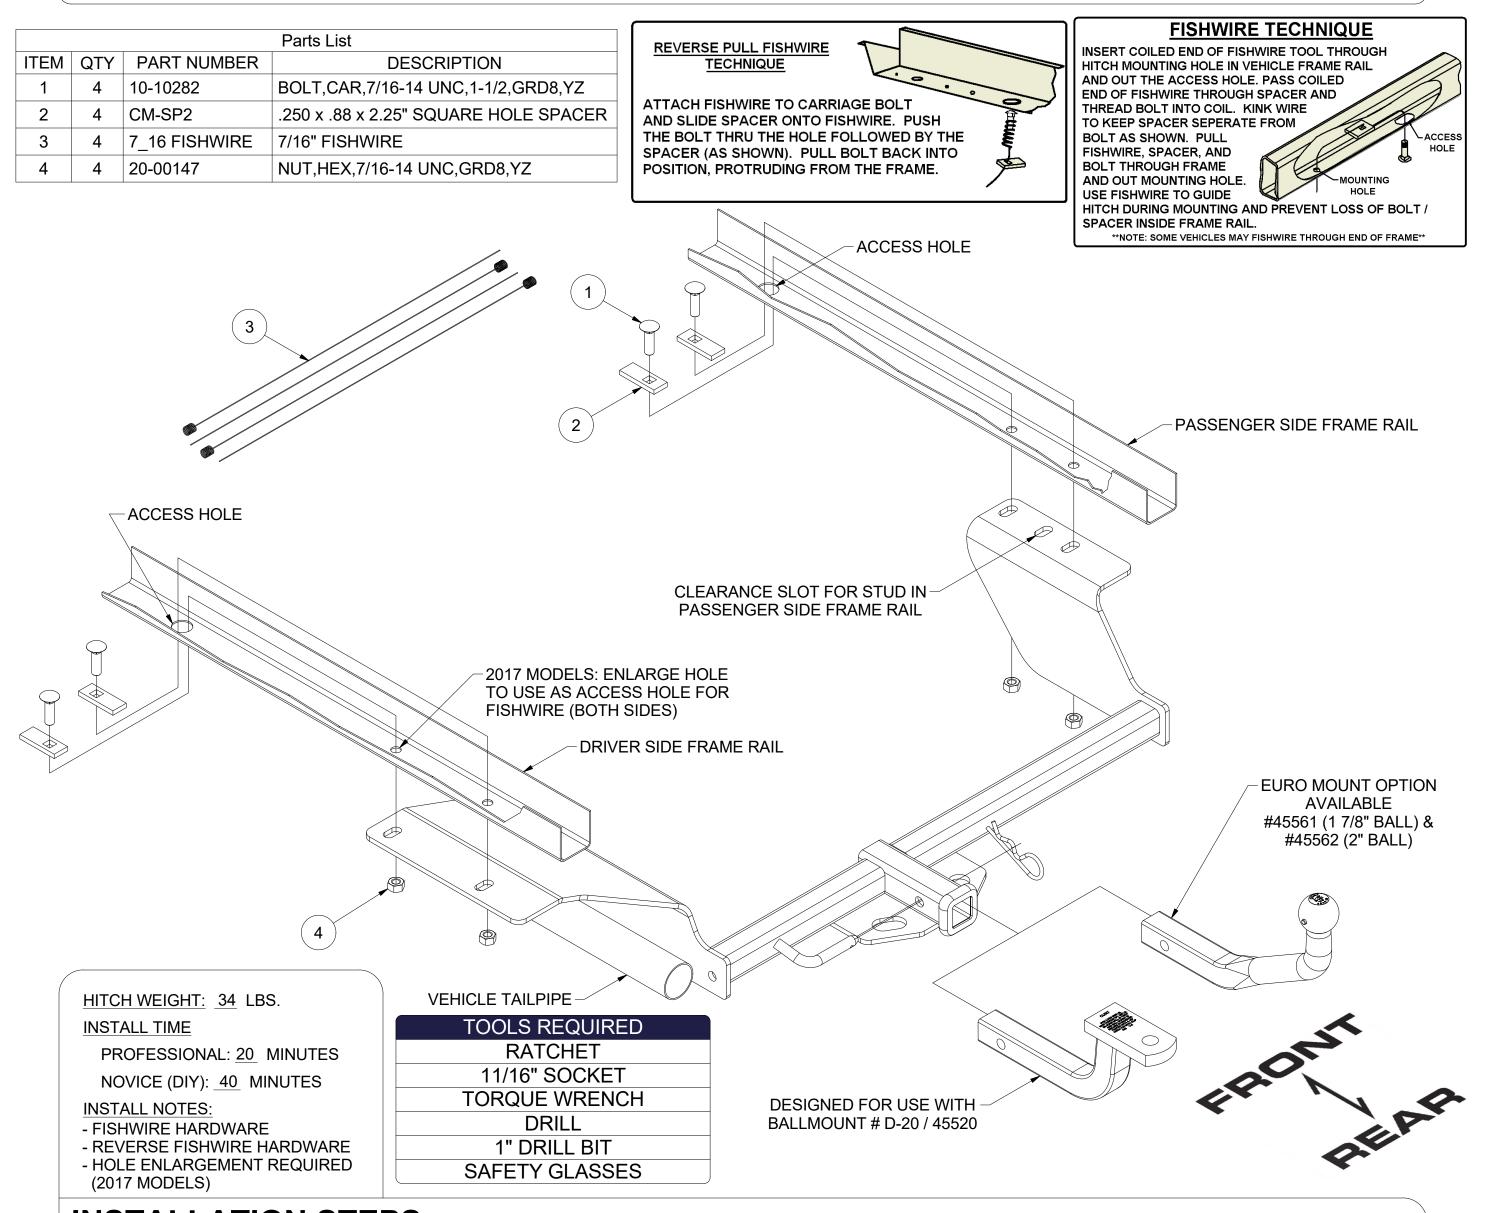

INSTALLATION STEPS

1. Fishwire CM-SP2 spacers and 7/16-14 carriage bolts through access hole in frame rail and down through attachment hole, (2) places, each side.

NOTE: On 2017 models; enlarge forward-most attachment hole to one inch using drill and 1" drill bit. Use as new access hole to fishwire 7/16" carriage bolts and CM-SP2 spacers into the frame rail. Reverse fishwire in access hole to use as attachment point.

- 2. Raise hitch into position, lifting driver side first over tailpipe, then lifting passenger side.
- 3. Secure with 7/16" hex flange nuts.
- 4. Torque all 7/16-14 fasteners to 70 ft.-lbs.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing LLC., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing LLC., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.