11251

93-01 NISSAN ALTIMA

1/11/2021

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT.

DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.


WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.


** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY**

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-877-287-8634

PASSENGER SIDE-

FRAME RAIL

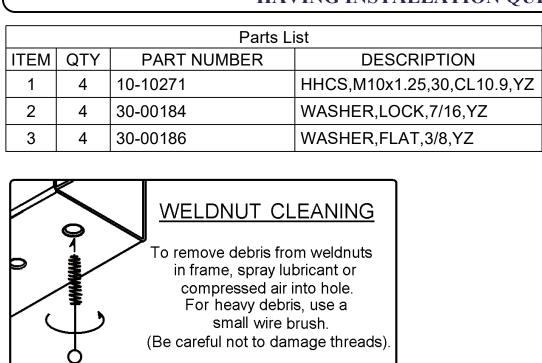

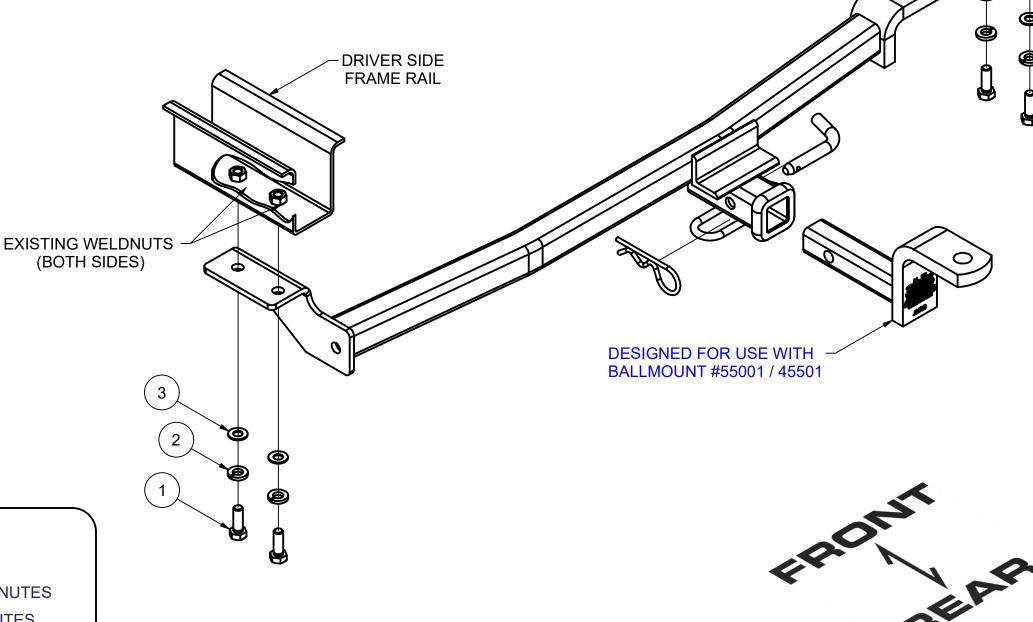

<u>HITCH WEIGHT:</u> 21 LBS. INSTALL TIME

PROFESSIONAL: 30 MINUTES NOVICE (DIY): 60 MINUTES INSTALL NOTES:

- NO DRILLING REQUIRED
- REMOVE TIE DOWN BRACKET

INSTALLATION STEPS

- 1. This hitch mounts with existing weldnuts to the bottom surface of both frame rails.
- 2. Under the rear of the car, locate the left and right frame rails. Remove the tie down brackets bolted to these frame rails. Return these to the vehicle's owner for reinstallation should the hitch ever be removed.
- 3. Lift the hitch into position over the vehicle's exhaust tips. Install fasteners as shown. NOTE: Some models may need the plastic tabs to be trimmed slightly to align the mounting holes.
- 4. Torque all 10mm fasteners to 48 lb-ft.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.