

YEARS: 2014-PRESENT

MAKE: NISSAN

MODEL: VERSA NOTE

STYLE: HATCHBACK

**WARNING: NEVER EXCEED YOUR VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY**  
 For more information log onto [www.curtmfg.com](http://www.curtmfg.com) & for helpful towing tips log onto [www.hitchinfo.com](http://www.hitchinfo.com)

**WEIGHT CARRYING:**  
 TRAILER WEIGHT: 2,000 LBS.  
 TONGUE WEIGHT: 200 LBS.

**WARNING:**  
 ALL NON-TRAILER (WHEEL-LESS) LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS. PLEASE SEE THE CURT CATALOG OR VISIT US ONLINE AT [WWW.CURTMFG.COM](http://WWW.CURTMFG.COM) FOR FURTHER INFORMATION.

**PRO INSTALL TIME: 15 MIN.**  
**NOVICE INSTALL TIME: 30 MIN.**

IF YOU ARE HESITANT TO UNDERTAKE THIS TASK ON YOUR OWN, CONTACT AN AUTHORIZED CURT INSTALLER FOR ADDITIONAL ASSISTANCE.

**INSTALLATION REQUIRES:**


|   |   |  |
|---|---|--|
| <br><b>RATCHET</b>      | <br><b>TORQUE WRENCH</b> | <br><b>11/16" 3/4" SOCKET</b> |
| <br><b>SCREW DRIVER</b> | <br><b>ROTARY TOOL</b>   | <br><b>SAFETY GLASSES</b>     |
|   |   |  |
|   |   |  |

**INSTALLATION TIPS:**

- BEFORE YOU BEGIN INSTALLATION, READ ALL INSTRUCTIONS THOROUGHLY.
- TO EASE INSTALLATION, 2 PEOPLE MAY BE REQUIRED.
- USING PROPER TOOLS WILL GREATLY IMPROVE THE QUALITY OF THE INSTALL AND REDUCE THE TIME REQUIRED.
- NEED HELP OR HAVE SOME QUESTIONS? CALL TECHNICAL SUPPORT AT 877.287.8634

**LEVEL OF DIFFICULTY: MODERATE**

| EASY  | MODERATE                   | CHALLENGING |
|---|----------------------------|-------------|
|    | - NO DRILLING REQUIRED     |             |
|  | - FASCIA TRIMMING REQUIRED |             |
|   |                            |             |
|   |                            |             |

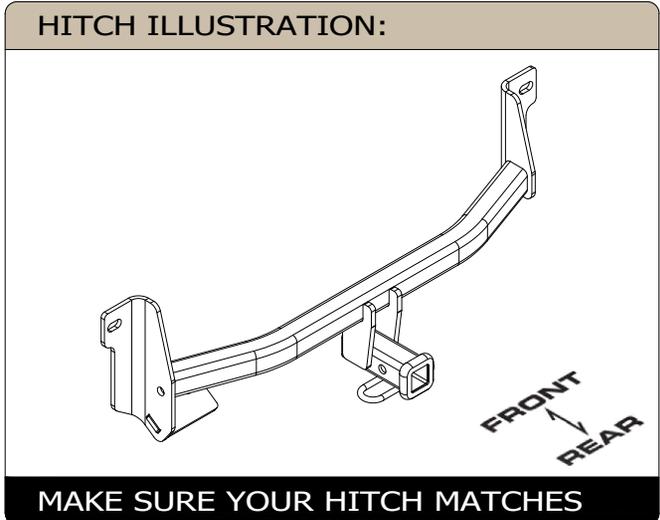

**PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE ALL FASTENERS ARE TIGHT AND ALL STRUCTURAL COMPONENTS ARE SOUND**

CURT Manufacturing LLC. warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, CURT Manufacturing LLC. may repair or replace the product at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. CURT Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.

For more information log onto [www.curtmfg.com](http://www.curtmfg.com)


This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C.Regulation V-5 and SAE J684.

SCAN FOR MORE INFO

## INSTALLATION WALKTHROUGH:

Parts List


| ITEM | QTY | PART NUMBER | DESCRIPTION                           |
|------|-----|-------------|---------------------------------------|
| 1    | 4   | CM-SP16     | .250 x 1.50 x 2.00" ROUND HOLE SPACER |
| 2    | 1   | 10-10272    | BOLT,CAR,1/2-13 UNC,1-3/4,GRD8,YZ     |
| 3    | 2   | 10-10282    | BOLT,CAR,7/16-14 UNC,1-1/2,GRD8,YZ    |
| 4    | 1   | 20-00062    | NUT,SER-FLANGE,1/2-13 UNC,GRD8,YZ     |
| 5    | 2   | 20-00103    | NUT,SER-FLANGE,7/16-14 UNC,GRD8,YZ    |

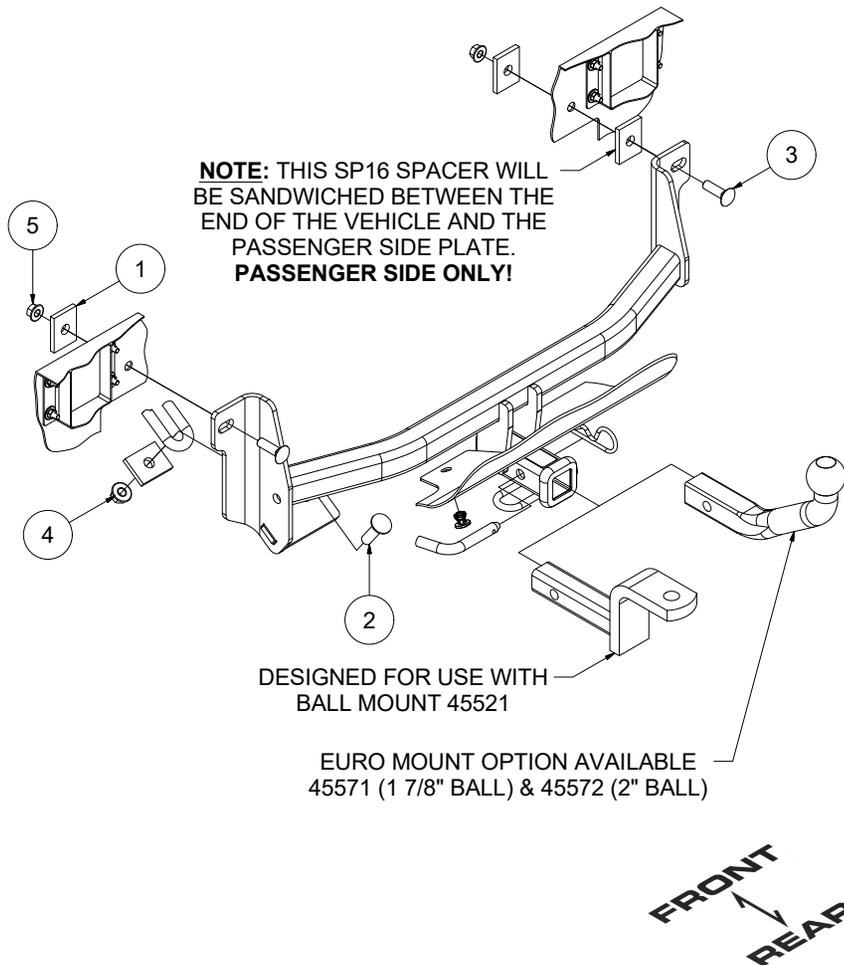

1. Remove (3) fascia fasteners. Retain fasteners for reinstallation.




2. Mark and trim rear fascia. **Note:** Dimensions are approximate, confirm fit prior to trimming. See Fascia Trim Diagram

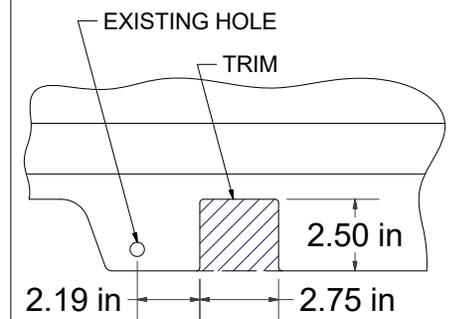

## INSTALLATION WALKTHROUGH:

3. Gently flex the bottom of the rear fascia back and raise hitch into position. Insert a 7/16"-14 x 1 1/2" carriage bolt through the driver side plate and out the existing hole. Insert a 7/16"-14 x 1 1/2" carriage bolt through the passenger side plate, a SP16 spacer, and out the existing hole. Secure both sides with a SP16 spacer and a 7/16"-14 hex flange nut.

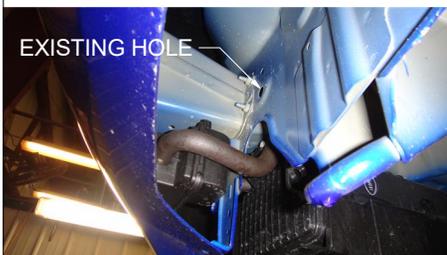

4. Insert a 1/2"-13 x 1 3/4" carriage bolt through the tow loop plate and out the tow loop. Secure with a SP16 spacer and a 1/2"-13 hex flange nut.



5. Torque all 7/16" hardware to 70 ft-lbs.  
Torque all 1/2" hardware to 110 ft-lbs.  
Reinstall (3) fascia fasteners removed in Step (1).

INSTALLATION COMPLETE



# 11378

# NISSAN VERSA NOTE

8/5/2020

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT.

**\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\***



WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.

**\*\* FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY\*\***


HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 877-287-8634

| Parts List |     |             |                                       |
|------------|-----|-------------|---------------------------------------|
| ITEM       | QTY | PART NUMBER | DESCRIPTION                           |
| 1          | 4   | CM-SP16     | .250 x 1.50 x 2.00" ROUND HOLE SPACER |
| 2          | 1   | 10-10272    | BOLT,CAR,1/2-13 UNC,1-3/4,GRD8,YZ     |
| 3          | 2   | 10-10282    | BOLT,CAR,7/16-14 UNC,1-1/2,GRD8,YZ    |
| 4          | 1   | 20-00062    | NUT,SER-FLANGE,1/2-13 UNC,GRD8,YZ     |
| 5          | 2   | 20-00103    | NUT,SER-FLANGE,7/16-14 UNC,GRD8,YZ    |

| TOOLS REQUIRED |
|----------------|
| RATCHET        |
| TORQUE WRENCH  |
| 11/16" SOCKET  |
| 3/4" SOCKET    |
| SCREW DRIVER   |
| ROTARY TOOL    |
| SAFETY GLASSES |

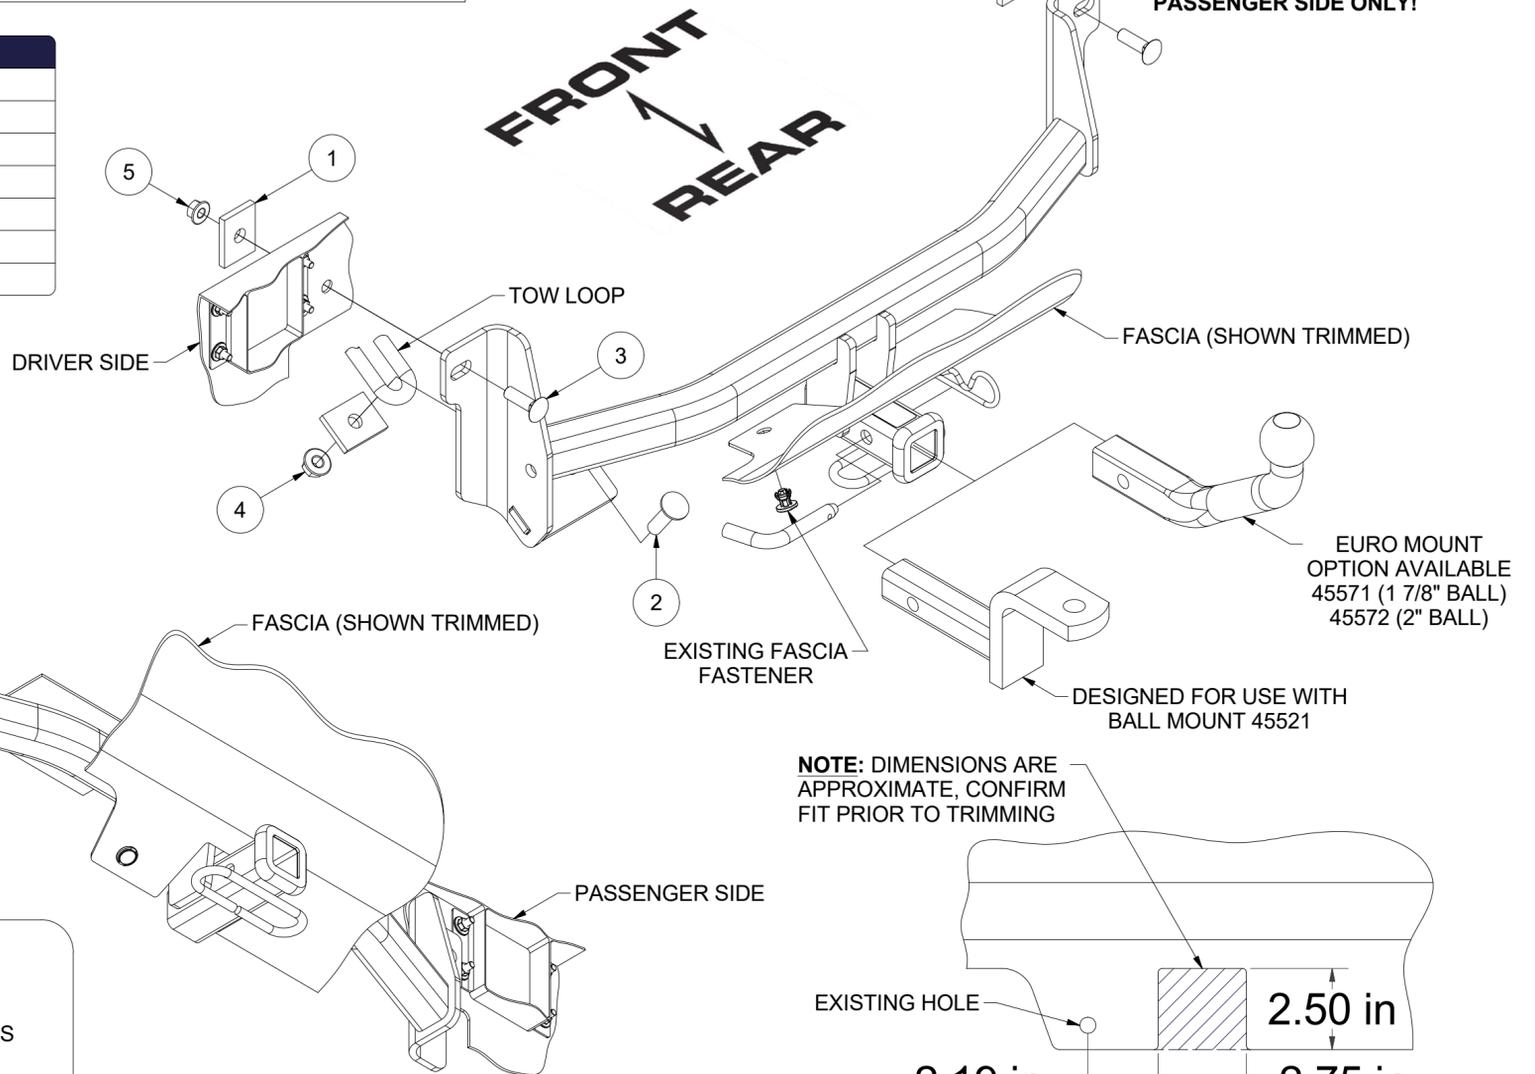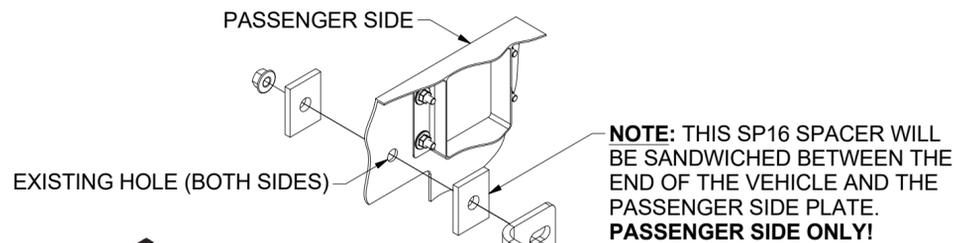

NOTE: DIMENSIONS ARE APPROXIMATE, CONFIRM FIT PRIOR TO TRIMMING

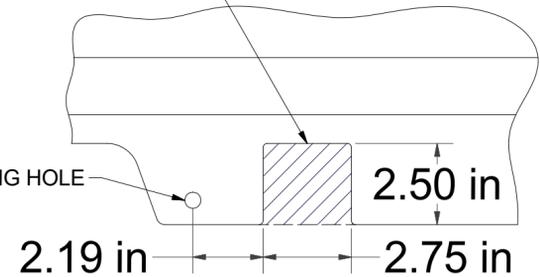

**FASCIA TRIM DIAGRAM**

HITCH WEIGHT: 16 LBS.

INSTALL TIME

PROFESSIONAL: 15 MINUTES

NOVICE (DIY): 30 MINUTES

INSTALL NOTES:

- NO DRILLING
- FASCIA TRIMMING REQUIRED

**INSTALLED HITCH**

## INSTALLATION STEPS

1. Remove (3) fascia fasteners. Retain fasteners for reinstallation.
2. Mark and trim rear fascia. **Note:** Dimensions are approximate, confirm fit prior to trimming. See Fascia Trim Diagram
3. Gently flex the bottom of the rear fascia back and raise hitch into position. Insert a 7/16"-14 x 1 1/2" carriage bolt through the driver side plate and out the existing hole. Insert a 7/16"-14 x 1 1/2" carriage bolt through the passenger side plate, a SP16 spacer, and out the existing hole. Secure both sides with a SP16 spacer and a 7/16"-14 hex flange nut.
4. Insert a 1/2"-13 x 1 3/4" carriage bolt through the tow loop plate and out the tow loop. Secure with a SP16 spacer and a 1/2"-13 hex flange nut.
5. Torque all 7/16" hardware to 70 ft-lbs.  
Torque all 1/2" hardware to 110 ft-lbs.
6. Reinstall (3) fascia fasteners removed in Step (1).

**PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.**

Curt Manufacturing LLC., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing LLC., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.