

11731

95-98 NISSAN 240 SX

12/14/2012


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT.

DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.


WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.

** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY**

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-877-287-8634

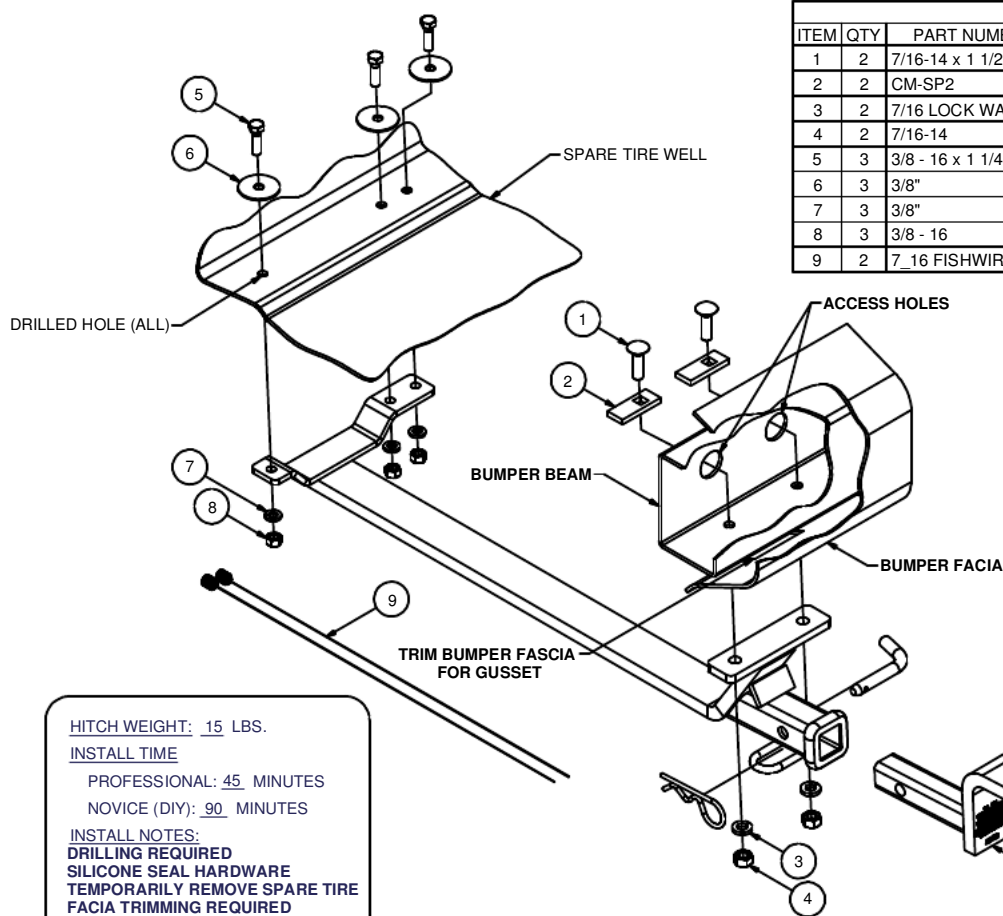

Parts List				
ITEM	QTY	PART NUMBER	DESCRIPTION	
1	2	7/16-14 x 1 1/2	CARRIAGE BOLT	
2	2	CM-SP2	.250 x .88 x 2.25" SQUARE HOLE SPACER	
3	2	7/16 LOCK WASHER	HELICAL LOCK WASHER	
4	2	7/16-14	HEX NUT	
5	3	3/8 - 16 x 1 1/4	HEX BOLT	
6	3	3/8"	FENDER WASHER	
7	3	3/8"	LOCK WASHER	
8	3	3/8 - 16	HEX NUT	
9	2	7/16 FISHWIRE	7/16" FISHWIRE	

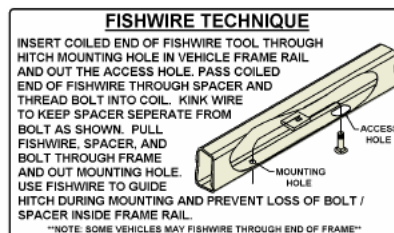

FRONT
REAR

HITCH WEIGHT: 15 LBS.

INSTALL TIME

PROFESSIONAL: 45 MINUTES

NOVICE (DIY): 90 MINUTES

INSTALL NOTES:

DRILLING REQUIRED

SILICONE SEAL HARDWARE

TEMPORARILY REMOVE SPARE TIRE

FACIA TRIMMING REQUIRED

FISHWIRE HARDWARE

DESIGNED FOR USE WITH
BALL MOUNT # D-55001 / 45501

INSTALLATION STEPS

1. This hitch mounts to the bottom of the bumper beam, and to the forward section of the spare tire well.
2. Temporarily remove the spare tire and contents from the spare tire well. Lift the hitch into position centered and square with the vehicle. Trim the bumper facia to allow the gusset to sit flush with the bumper beam.
3. Using the hitch as a template, drill (2) holes for 7/16" fasteners at the bumper beam. Install fasteners as shown. (See fishwire technique diagram) Please note that the spacers are installed in the bumper beam with the 7/16" bolts.
4. Using the hitch as a template, drill (3) holes for 3/8" fasteners at the spare tire well. Install fasteners with fender washers inside of spare tire well.
5. Torque all 3/8" fasteners to 45 lb-ft and all 7/16" fasteners to 70 lb-ft.
6. Use silicone sealent to seal hardware installed through the spare tire well.
7. Reinstall the spare tire and its contents back into the spare tire well.

**PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS
ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.**

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.