## 95-97 VOLVO 960, 1998 VOLVO S90 & V90

## 11/19/2012


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 3500 LBS. TRAILER WEIGHT & 300 LBS. TONGUE WEIGHT.

\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\*

 $WARNING: ALL\ NON-TRAILER\ LOADS\ APPLIED\ TO\ THIS\ PRODUCT\ MUST\ BE\ SUPPORTED\ BY\ AUXILIARY\ STABILIZING\ STRAPS.$ 

\*\* FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY\*\*

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

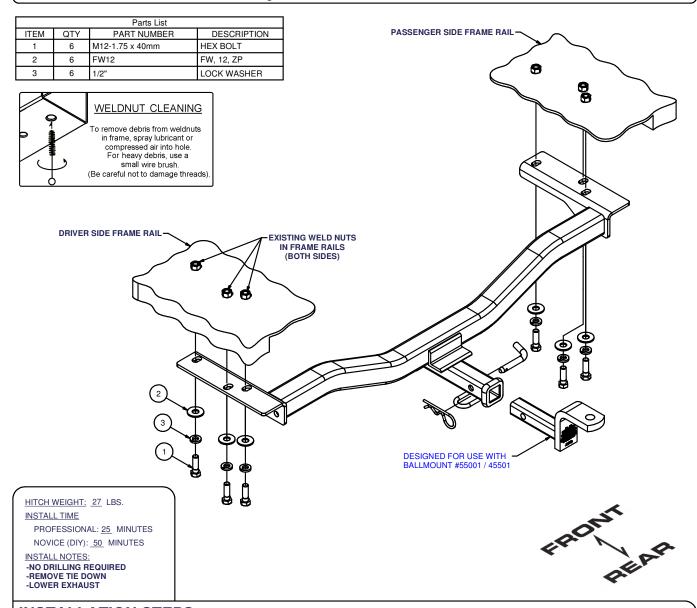

## **INSTALLATION STEPS**

- 1. This hitch mounts to the existing weld nuts in the frame rails. Remove the tie down bracket from driver side frame rail and return it to the owner of the vehicle for reinstallation should the hitch ever be removed. Temporarily unbolt both exhaust hangers to ease installation.
- 2. Lift the hitch into position over the passenger side exhaust and locate the frame rails. Install fasteners in weld nuts as shown in diagram.
- 3. Torque all 12mm fasteners to 79 lb-ft.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.