

12224

**2000-2003 NISSAN MAXIMA,  
2000-2001 INFINITI I30 & 2002-2004 I35**

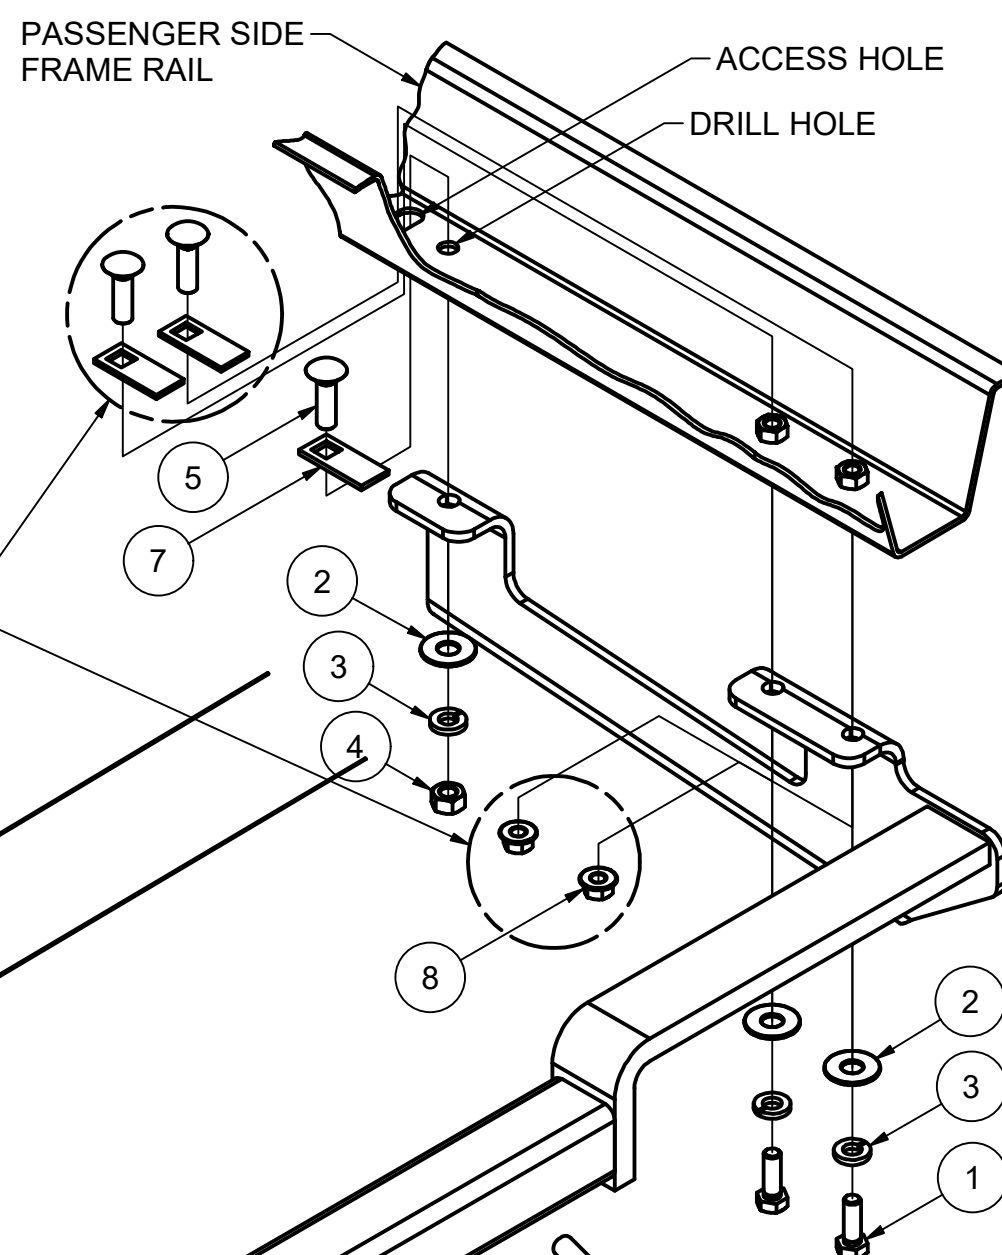
11/12/2020

**GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 3,500 LBS. TRAILER WEIGHT & 350 LBS. TONGUE WEIGHT.****\*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\*****WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY AUXILIARY STABILIZING STRAPS.****\*\* FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY\*\*****HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 877-287-8634**

Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	6	10-10271	HHCS,M10x1.25,30,CL10.9,YZ
2	7	30-00166	WASHER,FLAT,7/16,YZ
3	7	30-00184	WASHER,LOCK,7/16,YZ
4	1	20-00147	NUT,HEX,7/16-14 UNC,GRD8,YZ
5	3	10-10282	BOLT,CAR,7/16-14 UNC,1-1/2,GRD8,YZ
6	2	7_16 FISHWIRE	7/16" FISHWIRE
7	3	CM-SP108	.125 x 2.00 SPACER
8	2	20-00103	NUT,SER-FLANGE,7/16-14 UNC,GRD8,YZ

**FISHWIRE TECHNIQUE**

INSERT COILED END OF FISHWIRE TOOL THROUGH HITCH MOUNTING HOLE IN VEHICLE FRAME RAIL AND OUT THE ACCESS HOLE. PASS COILED END OF FISHWIRE THROUGH SPACER AND THREAD BOLT INTO COIL. KINK WIRE TO KEEP SPACER SEPARATE FROM BOLT AS SHOWN. PULL FISHWIRE, SPACER, AND BOLT THROUGH FRAME AND OUT MOUNTING HOLE. USE FISHWIRE TO GUIDE HITCH DURING MOUNTING AND PREVENT LOSS OF BOLT / SPACER INSIDE FRAME RAIL.

**\*\*NOTE: SOME VEHICLES MAY FISHWIRE THROUGH END OF FRAME\*\***USE THIS HARDWARE ON  
VEHICLES WITHOUT WELDNUTSSOME VEHICLES DO NOT  
HAVE THESE WELDNUTSDRIVER SIDE  
FRAME RAIL**FRONT**  
**REAR****HITCH WEIGHT:** 33 LBS.**INSTALL TIME**

PROFESSIONAL: 30 MINUTES

NOVICE (DIY): 60 MINUTES

**INSTALL NOTES:**

-DRILLING REQUIRED

**INSTALLATION STEPS**

- 1) This hitch mounts to existing weld nuts in both frame rails. Remove tie down brackets from the driver and passenger side frame rails and return them to the customer. One additional mounting hole will be drilled in the passenger side frame rail.
- 2) Position the hitch on the car with hitch main body strap passing over the exhaust tips and side plates fitting under the car's frame rails. Align six holes in the side plates with the frame weld nuts, and install fasteners using flat and lock washers as shown.
- 3) Using the hitch as a template, drill the passenger side frame rail for one 7/16" diameter bolt in forward end of the hitch bracket. Fishwire one carriage bolt with backing plate into this hole through existing access hole in frame.
- 4) Torque all 10mm fasteners to 48 lb-ft, and all 7/16" fasteners to 59 lb-ft.

**PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS  
ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.**

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.