

1988-00 CHEVY/GMC 1500(OLD STYLE) 1992-00 CHEVY/GMC 4DR CREW CAB ONLY

6/23/2020

13082

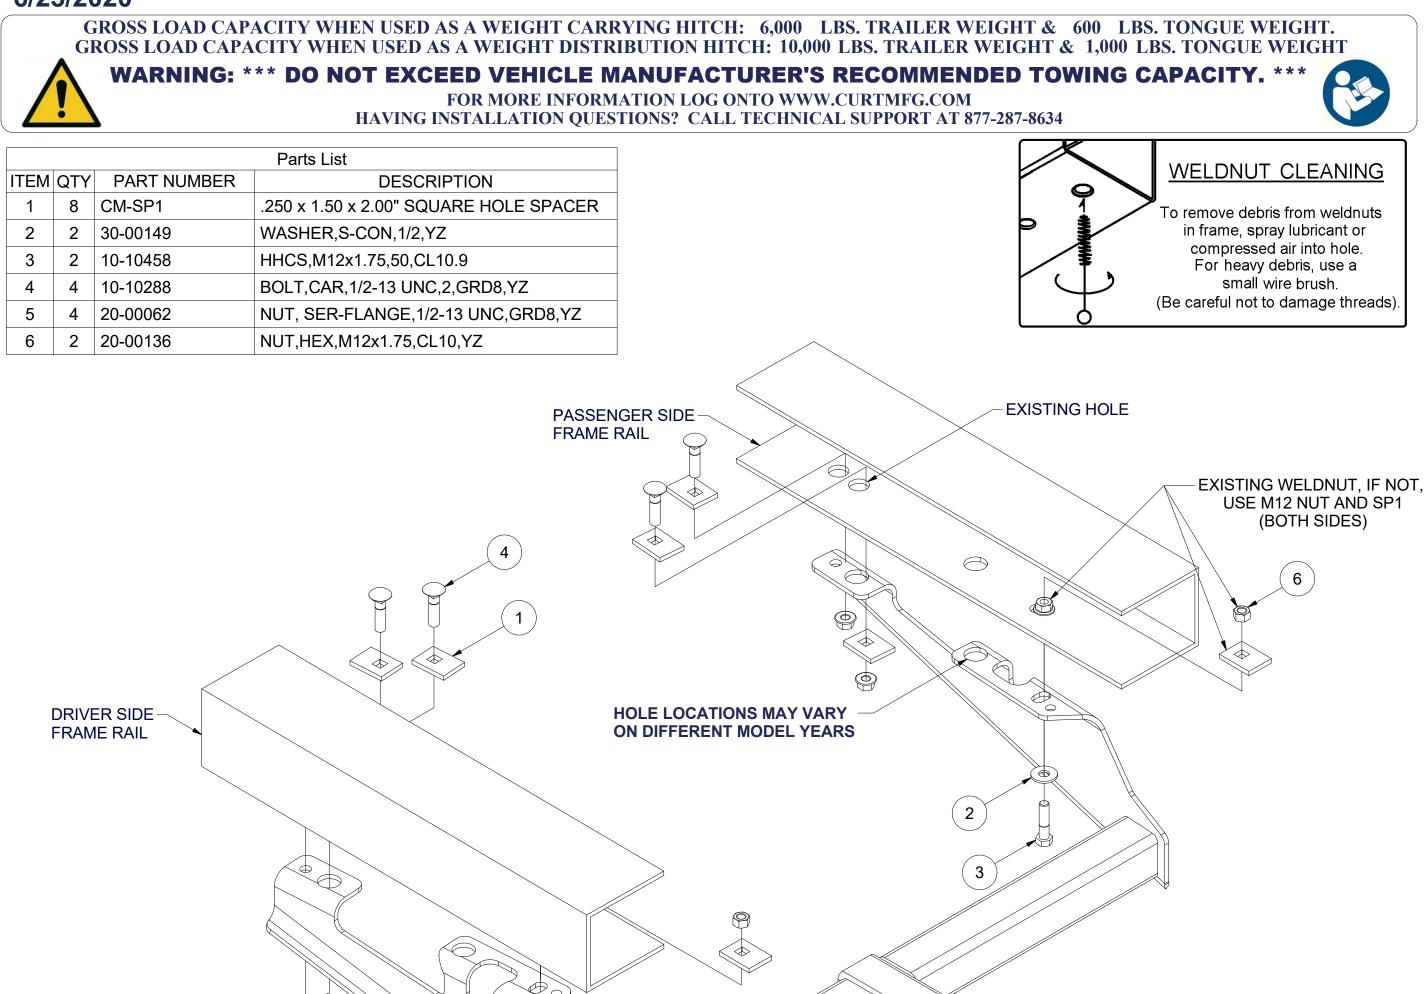

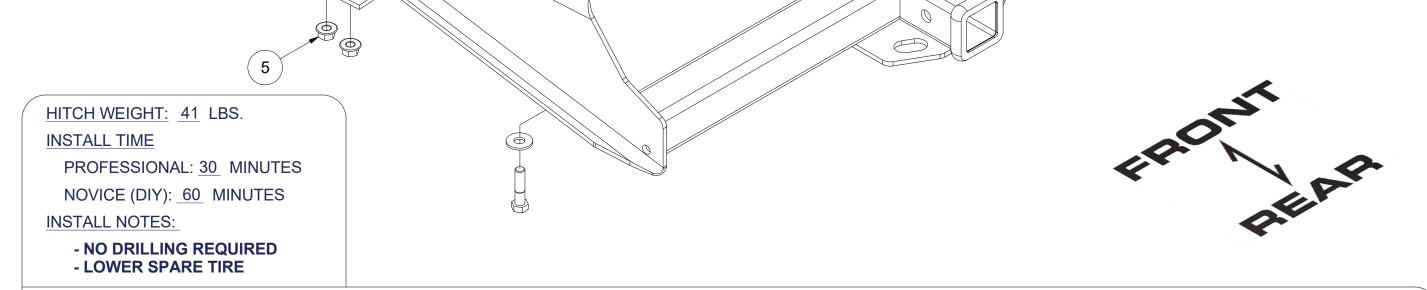

INSTALLATION STEPS

- 1) Lower the spare tire. The rear bolt in the bottom of the frame on each side must be removed, if equipped with factory step bumper. Clean away any mud and undercoating present.
- 2) Position the receiver against the frame. The large cut outs in the hangers should clear rivets and cross member bolts.
- 3) Secure the hitch to vehicle using all existing holes in vehicle frame as illustrated above.
- 4) Reposition spare tire slightly forward to clear hitch. Oversized spare tire may have to be relocated.
- 5) Torque all 1/2" fasteners to 110 lb.-ft. and all M12 fasteners to 86 lb.-ft.



PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Scan for more information This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C.Regulation V-5 and SAE J684.