

13161

CHEVROLET TAHOE PPV

08/21/2020

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 6,000 LBS. TRAILER WEIGHT & 600 LBS. TONGUE WEIGHT.

*****DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.*****


WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.

**** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY****

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-877-287-8634


Parts List			
ITEM	QTY	PART NUMBER	DESCRIPTION
1	6	10-10524	HHCS,M14x2,50,CL10.9,YZ
2	6	30-00164	WASHER,S-CON,9/16,YZ

CONICAL TOOTHED WASHER ORIENTATION DIAGRAM

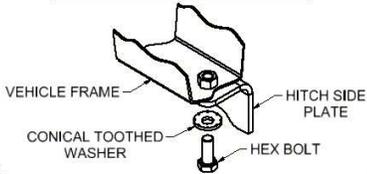

TOOLS REQUIRED

- 21mm SOCKET
- RATCHET
- TORQUE WRENCH
- SAFETY GLASSES
- SPRAY LUBRICANT

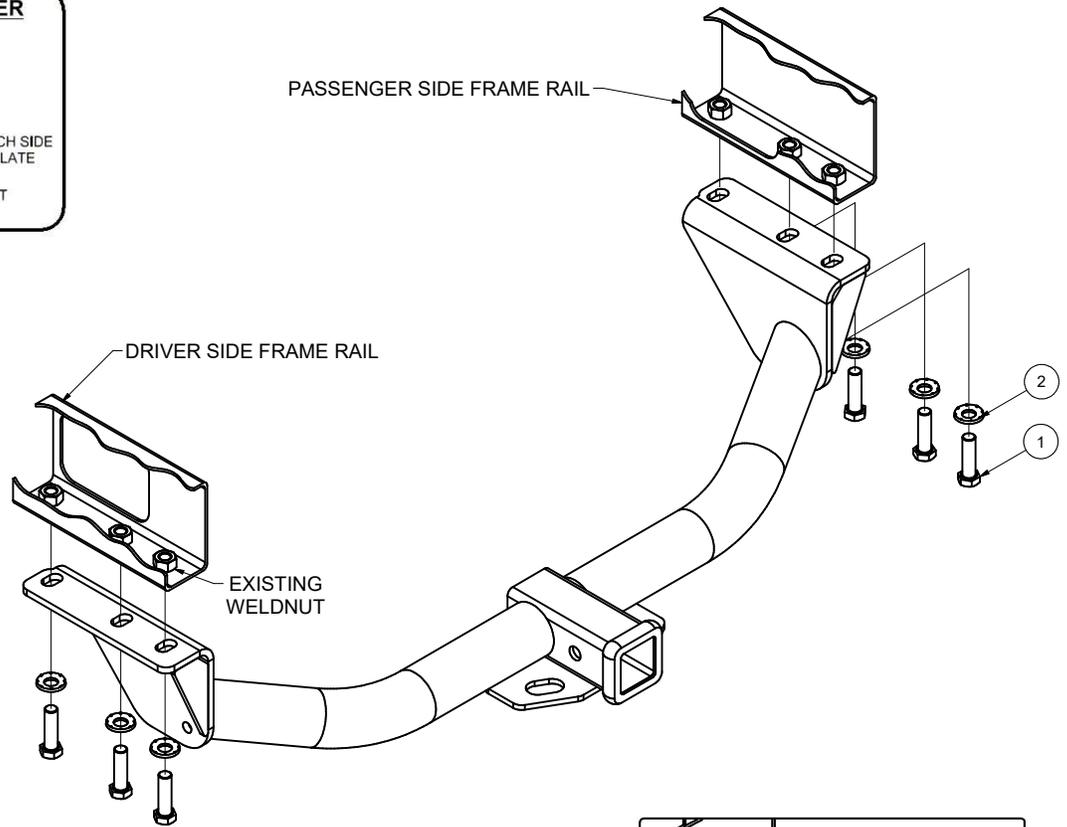


HITCH WEIGHT: 34 LBS.

INSTALL TIME

- PROFESSIONAL: 15 MINUTES
- NOVICE (DIY): 30 MINUTES

INSTALL NOTES:

- NO DRILLING REQUIRED
- WELDNUT CLEANING

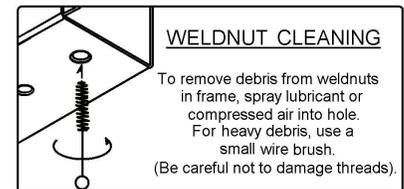

INSTALLATION STEPS

1. If present, remove (6) existing bolts from both frame rails and discard. Clean weldnuts as necessary with spray lubricant and small wire brush.
2. Lift hitch into place and install (6) M14 bolts and conical washers as shown.
3. Torque all M14 fasteners to 150 lb.-ft.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing LLC., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing LLC., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.