



INSTALLATION MANUAL

13655

Level of Difficulty

Moderate

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

Weight Carrying Capacity

Gross trailer weight (GTW) 8,000 lbs.

Tongue weight (TW) 800 lbs.

Weight Distribution Capacity

Weight distribution (WD) 8,000 lbs.

WD tongue weight (WDTW) 800 lbs.

Parts List

Item	Qty	Description
1	1	WELDMENT ASSEMBLY
2	8	HHCS,M12x1.25,40,CL10.9,YZ
3	8	WASHER, S-CON,1/2,YZ
4	4	.250 x 1.00 x 1.50" ROUND HOLE SPACER

Tools Required

Ratchet	Torque wrench
Socket, 19mm	Socket extension, 6"

* For a tools reference guide visit curtmfg.com/trailer-hitch-installation

WARNING

Never exceed the vehicle manufacturer's recommended towing capacity.

Product Photo



NOTICE

Visit www.curtmfg.com for a full-color copy of this instruction manual, as well as helpful videos, guides and much more!

Before you begin installation, read all instructions thoroughly.

This installation requires:

- Temporary bumper removal

Proper tools will improve the quality of installation and reduce the time required.

Periodic inspection of the trailer hitch should be performed to ensure all mounting hardware remains tight and structural components are secure.

To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.

SAFETY INSTRUCTIONS

Safety glasses should be worn at all times while installing this product.




Product Registration and Warranty

CURT stands behind our products with industry-leading warranties. To get copies of the product warranties, register your purchase or provide feedback, visit: warranty.curtgroup.com/surveys

ASSEMBLY

Parts List

Item	Qty	Description
1	1	WELDMENT ASSEMBLY
2	8	HHCS,M12x1.25,40,CL10.9,YZ
3	8	WASHER, S-CON,1/2,YZ
4	4	.250 x 1.00 x 1.50" ROUND HOLE SPACER

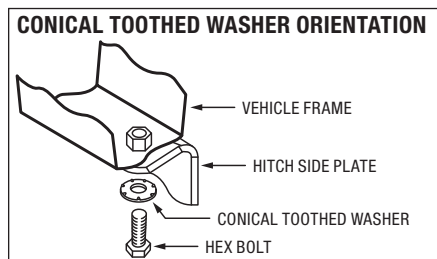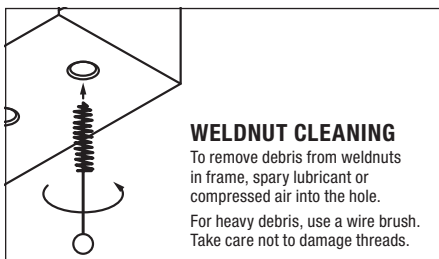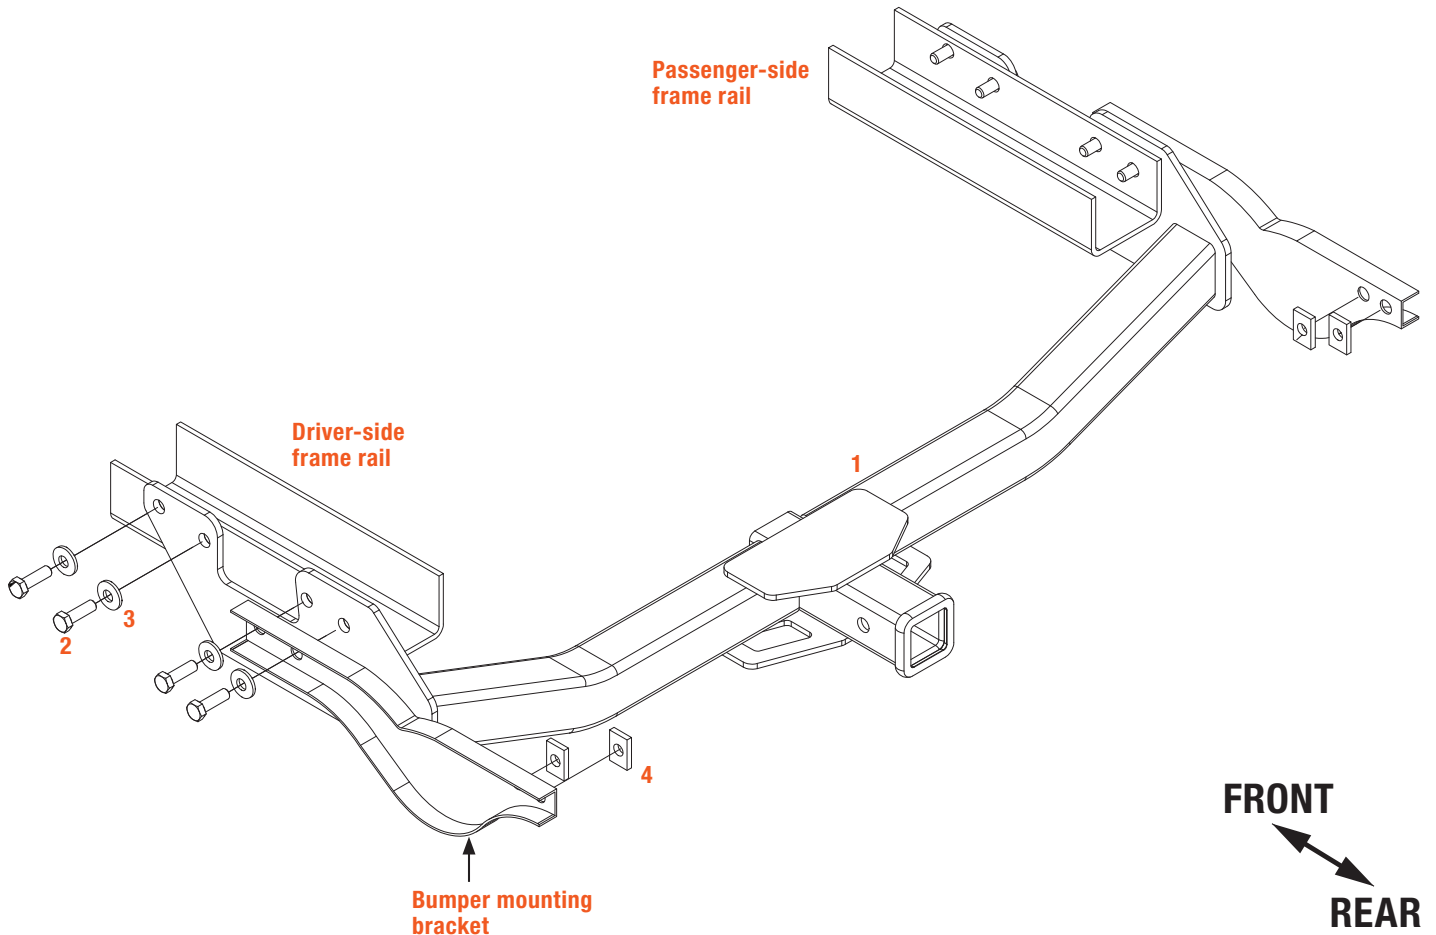

Step 1

Rear bumper removal - remove two (2) M12 bolts on the bumper bracket from the frame rail, complete this on both sides of the vehicle and set bumper aside for reinstallation later.

Step 2

Hitch installation - using caution and with assistance position the hitch into place and loosely install the M12 bolts with conical washers through the forward most holes on the hitch to the frame weldnuts, complete this on both sides of the vehicle.

CAUTION

Make sure the 'toothed side' of washer is facing away from the bolt head.

Step 3

Bumper reinstallation – remove two (2) M12 bolts that attach the bumper mounting brackets to the bumper, do this on both sides of the vehicle. Reinstall the bumper mounting bracket to the bumper with two (2) spacers on the inside for each hole. Loosely insert M12 bolts and conical washers through the two forward most holes of the bumper mounting bracket and sandwich the hitch bracket with the vehicle frame.

Step 4

Torque all hardware with a torque wrench to 86.2 Lb.-Ft. (116.9 N*m)

TOWING BASICS & SAFETY INFORMATION

For information on safely towing your trailer, visit curtmfg.com/understanding-towing.
