



INSTALLATION MANUAL

13656

Level of Difficulty

Moderate

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

Weight Carrying Capacity

Gross trailer weight (GTW)	7,500 lbs.
Tongue weight (TW)	750 lbs.

Parts List

Item	Qty	Description
1	1	HITCH WELDMENT ASSEMBLY
2	2	HHCS,M14X2,120,CL10.9,YZ
3	1	HHCS,7/16-14 UNC,1-1/2,GRD8,YZ
4	1	NUT, SER-FLANGE,7/16-14 UNC,GRD8,YZ
5	1	WASHER,S-CON,7/16,YZ
6	2	WASHER,S-CON,9/16,YZ
7	2	WASHER,FLAT,7/16,YZ

Tools Required

Ratchet	Socket extension
Torque wrench	Drill
Socket, 13mm	Socket, 16mm
Socket, 18mm	Socket, 21mm
Socket, 22mm	Socket, 24mm
Socket, 5/8"	Socket, 11/16"
Drill bit, 1/2"	

* For a tools reference guide visit curtmfg.com/trailer-hitch-installation

⚠ WARNING

Never exceed the vehicle manufacturer's recommended towing capacity.

Product Photo



NOTICE

Visit www.curtmfg.com for a full-color copy of this instruction manual, as well as helpful videos, guides and much more!

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.

This installation requires:

- Temporary bumper removal

Periodic inspection of the trailer hitch should be performed to ensure all mounting hardware remains tight and structural components are secure.

To help prevent damage to the product or vehicle, refer to the specified torque specifications when securing hardware during the installation process.

SAFETY INSTRUCTIONS

Safety glasses should be worn at all times while installing this product.




Product Registration and Warranty

CURT stands behind our products with industry-leading warranties. To get copies of the product warranties, register your purchase or provide feedback, visit: warranty.curtgroup.com/surveys

ASSEMBLY

Parts List

Item	Qty	Description
1	1	HITCH WELDMENT ASSEMBLY
2	2	HHCS,M14X2,120,CL10.9,YZ
3	1	HHCS,7/16-14 UNC,1-1/2,GRD8,YZ
4	1	NUT, SER-FLANGE,7/16-14 UNC,GRD8,YZ
5	1	WASHER,S-CON,7/16,YZ
6	2	WASHER,S-CON,9/16,YZ
7	2	WASHER,FLAT,7/16,YZ

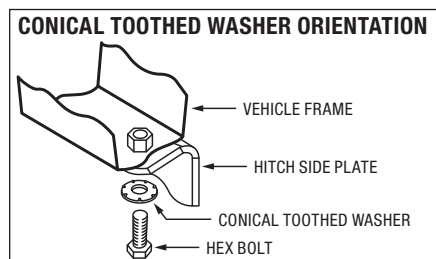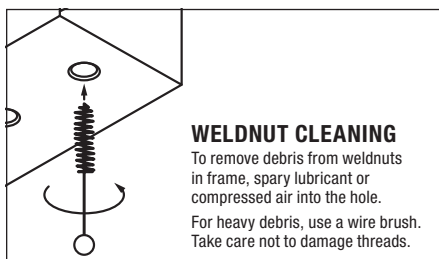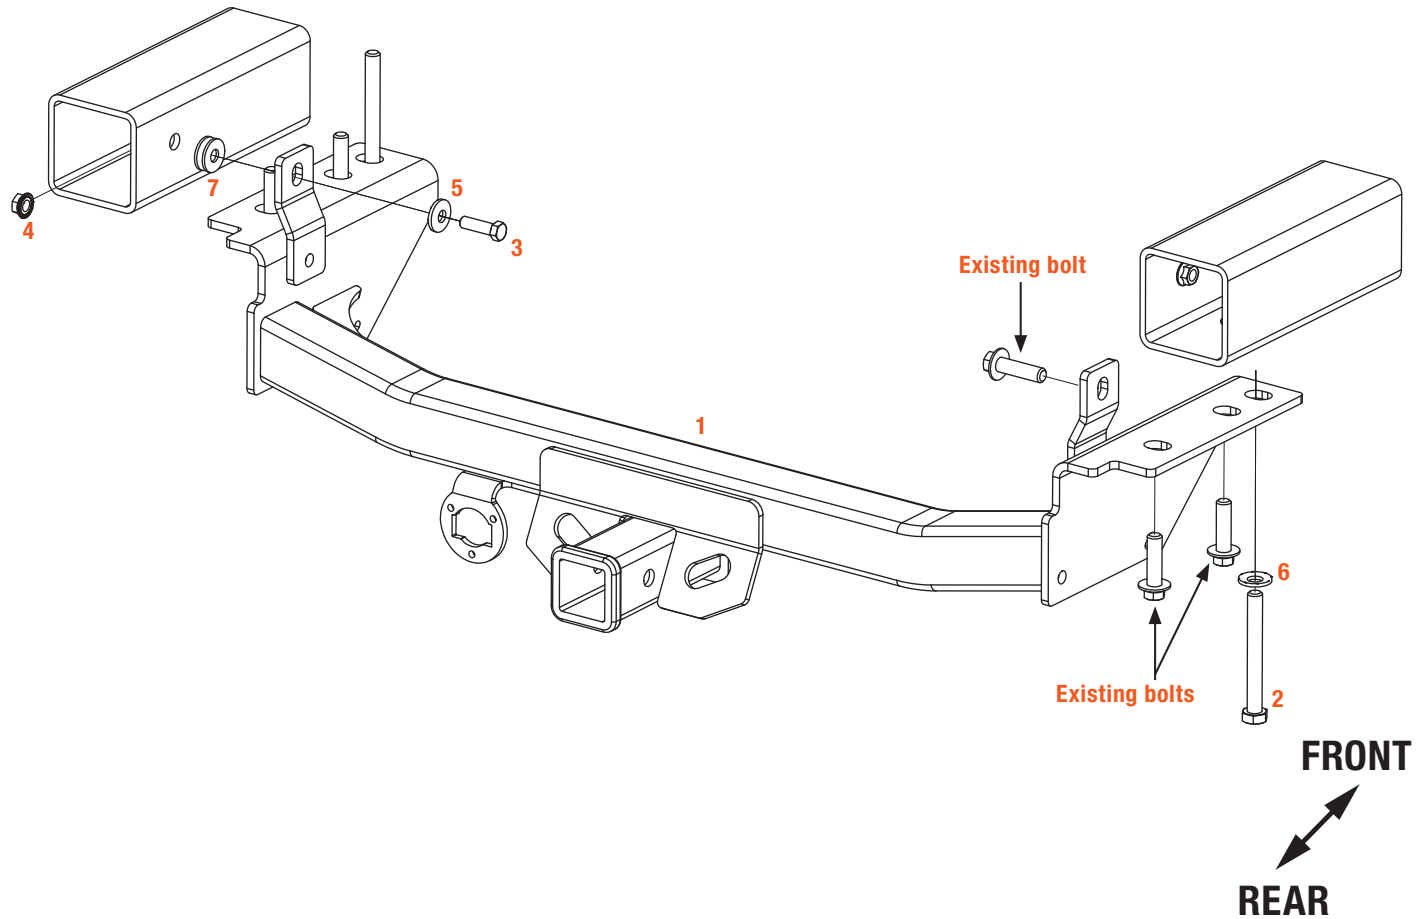

Step 1

Remove the bolts securing the bumper, then detach the bumper from its base and set it aside for later reinstallation.

Step 2

Unscrew the spare tire carrier eye lanyard.

Step 3

With proper help place the hitch into position and loosely place the M14x120mm bolt with a conical toothed washer in the forward most hole. Do this on both sides of the vehicle.

Note: Make sure the 'toothed side' of washer is facing away from the bolt head shown as in the Conical-Toothed Washer Orientation diagram

Step 4

Place the bumper base onto the hitch using the original hardware.

Step 5

Install the original M14 bolt into the vertical dongle mounting bracket on the passenger side of the hitch.

Step 6

Tighten till snug the five (5) original M14 bolts and the two (2) M14x120mm bolts, the three mounting holes on the bottom mounting surface of the hitch, and the dongle mounting bracket on the passenger side.

Step 7

Using the dongle mounting bracket on the driver side of the hitch as a template, use a 1/2" drill bit to drill a hole into the chassis.

Step 8

Place the conical toothed washer onto the 7/16 bolt and place it through the drilled hole from step 7 with two (2) flat washers between the hitch mounting dongle and chassis.

Note: Make sure the 'toothed side' of washer is facing away from the bolt head shown in the Conical-Toothed Washer Orientation diagram

Step 9

Torque all M14 hardware to 126.2 lb-ft (171 N*M), and torque the 7/16 bolt (3) to 59.3 lb-ft (80.4 N*M).

Step 10

Reinstall the bumper to the vehicle and the eye lanyard to the spare tire.

TOWING BASICS & SAFETY INFORMATION

For information on safely towing your trailer, visit curtmfg.com/understanding-towing.