
## **BALL MOUNT TONGUE SLEEVE**

45007

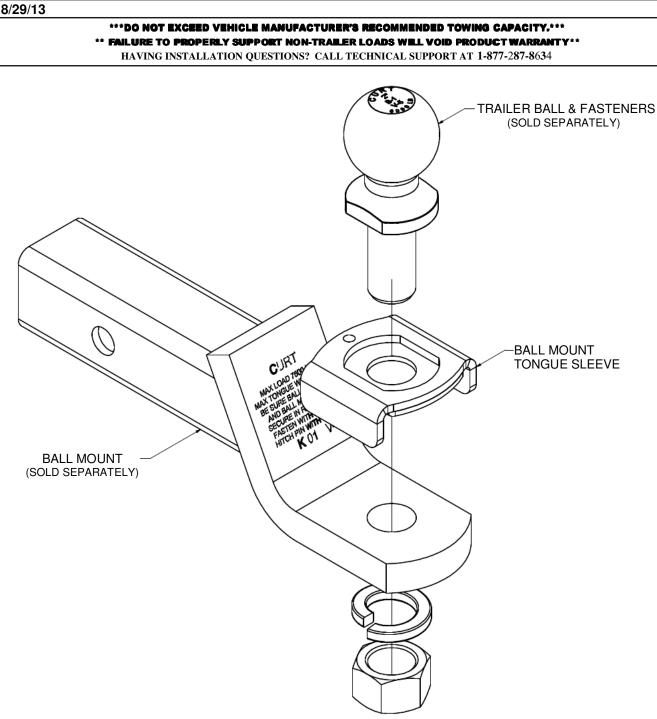

## **INSTALLATION STEPS**

- 1. Slide the ball mount tongue sleeve over the ball mount tongue.
- 2. Insert trailer ball through the tongue sleeve and ball mount, align the flat on the trailer ball with the flat on the tonge sleeve.
- 3. Torque trailer ball to spec using lock washer and nut.

## PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.