

INSTALLATION MANUAL

Level of Difficulty

Easy

Installation difficulty levels are based on time and effort involved and may vary depending on the installer level of expertise, condition of the vehicle and proper tools and equipment.

Wiring Location(s)

Under dash

Tools Required

Cutting tool	Light
--------------	-------

⚠ WARNING

Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Product Photo



NOTICE

Before you begin installation, read all instructions thoroughly.

Proper tools will improve the quality of installation and reduce the time required.


All steps must be followed to ensure the product will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

Maintenance

Periodic inspection of all wires and connections should be performed to ensure there is no visible damage or loose connections.

Step 1A - Palisade / Telluride

From under the dash on the driver side, locate the OBD2 or OBDII connector for vehicle diagnostics.

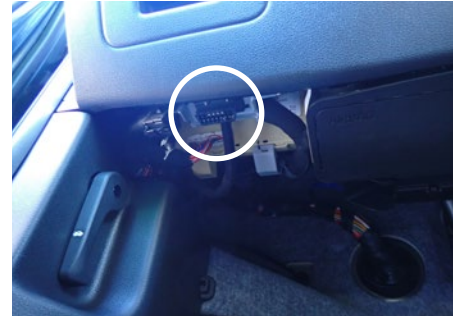

Step 2A - Palisade / Telluride

Just to the left of the housing, there is a group of wires taped up. Un-tape these wires and install the custom brake control harness and brake controller.



Step 3A - Palisade / Telluride

Follow the steps in the instruction manual included with your brake controller for installation and set-up.

Step 1B - Santa Cruz

From under the dash on the driver side of the steering column, there is a 4-pin cream-colored housing. Install the custom brake control harness and brake controller into the housing.



Step 2B - Santa Cruz

Follow the steps in the instruction manual included with your brake controller for installation and set-up.