

# 55371

KIA SPORTAGE

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.



### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

4/02/09

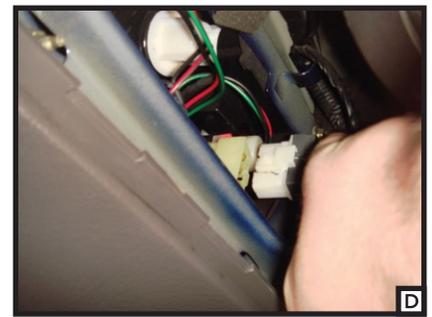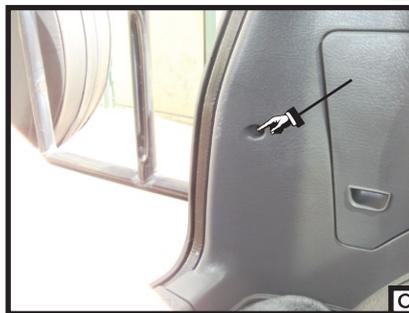

## English

1. Open the vehicles hatch. Remove the rear cargo area floor covering and rear scuff panel.**[A]** On the drivers and passenger sides remove the access panels and partially remove the rear trim panel by removing one phillips head screw holding it in place.**[B][C]**
2. On the drivers side behind the rear access panel locate the vehicles taillight wiring harness it will have connectors that are similar to those on the T-connector. Separate the connectors being sure not to damage the locking tabs.**[D]** Insert the T-connector end with the yellow wire in-between the separated connectors.**[E]** Make sure the connectors are fully inserted with locking tabs in place.
3. Route the T-connector end with the green wire out from behind the rear trim panel across the removed scuff panel and behind the passenger side trim panel. Repeat step 2 on the passenger side using the green wire.
4. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white wire using eyelet and screw provided.
5. Adhere the black converter box to the frame of the car using the double-sided tape provided. Secure any loose parts of the T-connector with the cable ties provided.
6. Route the 4-flat wire to the center of the vehicle and out the hatch when in use. When not in use roll up and store in an out of the way location in the rear cargo area.

### WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.