

55486

TOYOTA RAV-4

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

05/13/09

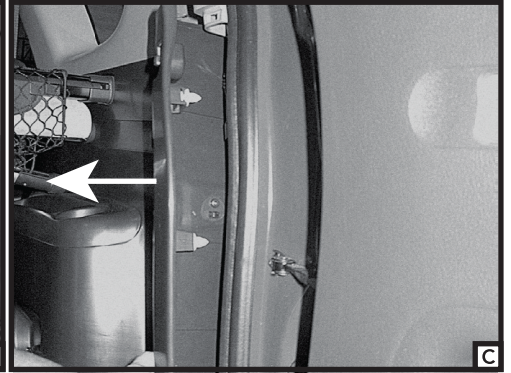

English

1. Open the hatch and remove the rear scuff panel, floor coverings, storage covers, and privacy screen. **A** On both sides remove all trim fasteners and slightly pull out on the rear trim panels. **B** **C**

2. Starting on the passenger side locate the vehicles taillight wiring harness the harness will have connectors similar to those on the T-connector and insert the T-connector end with the green wire in-between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.

3. Route the T-connector end with the yellow wire out from behind the passenger side trim panel, along the removed scuff panel, and behind the passenger's side trim panel. Repeat step 2 on the driver's side using the T-connector end with the yellow wire.

4. Route the 4-flat wire to the center of the vehicle and out the hatch when in use. When not in use roll up and store in an out of the way location in the rear cargo area.

WARNING!

Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.