

56125 CHEVROLET CRUZE

WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.

¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filée.

11/02/2010

English

1. Open the trunk and remove the spare tire cover (A). Remove the rear scuff panel by removing two plastic fasteners and pulling up (B,C).

2. Starting on the driver side pull back on the felt trunk liner to reveal the vehicle's taillight wiring harness (D). The harness will have connectors similar to those on the T-Connector harness. Separate the connectors taking care not to damage the locking tabs (E). Insert the T-Connector end with the yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.

WARNING!




Verify miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and/or personal injury.


3. Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle's frame or drill a 3/32" hole and secure white ground wire using eyelet and screw provided.

4. Route the T-Connector end with the green wire across to the passenger side behind the rear scuff panel. Repeat Step 2 on the passenger side using the T-Connector end with the green wire.

5. Re-install all items removed during install.

INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-800-798-0813

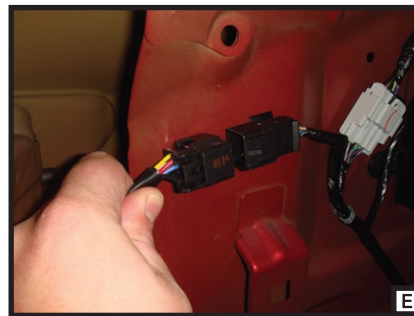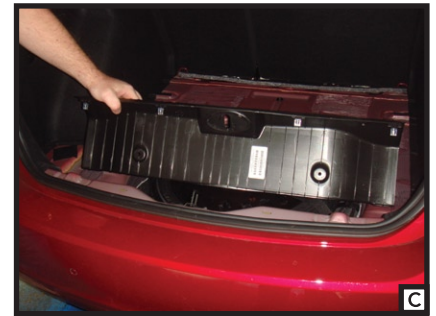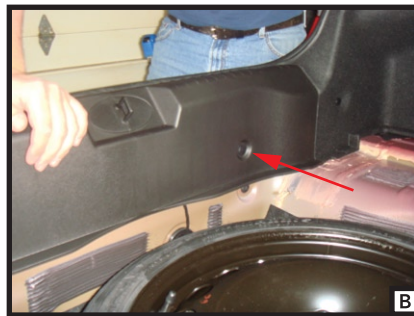

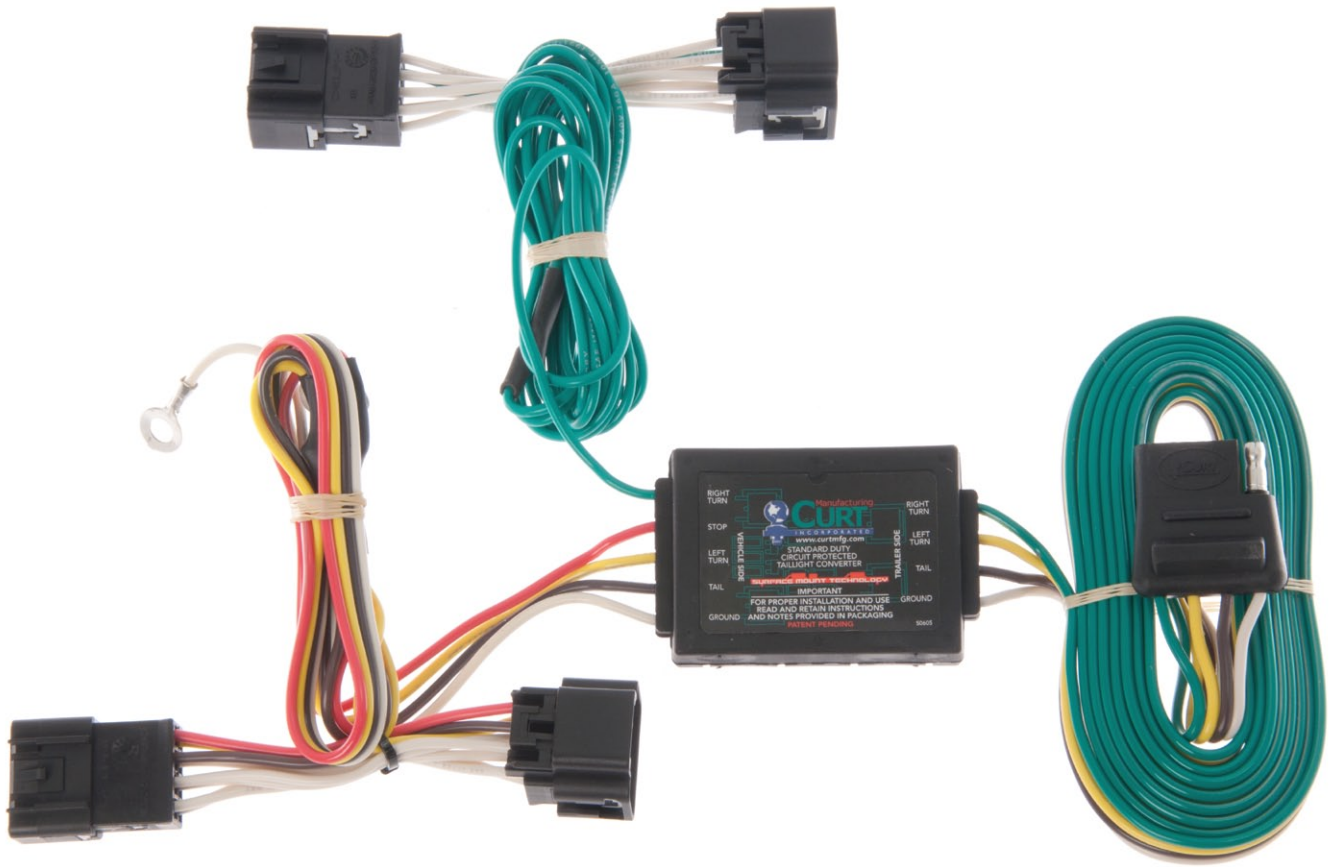

56125