



INSTALLATION INSTRUCTIONS

⚠ WARNING: DO NOT EXCEED PRODUCT RATING OR TOW VEHICLE LAMP LOAD RATING, WHICHEVER IS LOWER

APPLICATIONS

Make	Model
Toyota	Prius

CUSTOM WIRING HARNESS

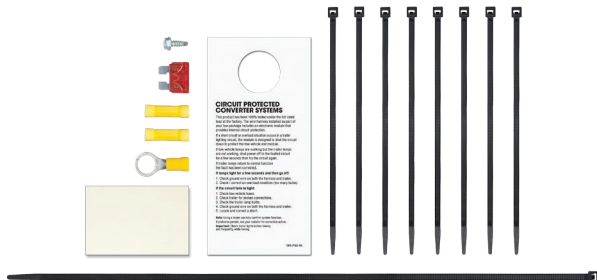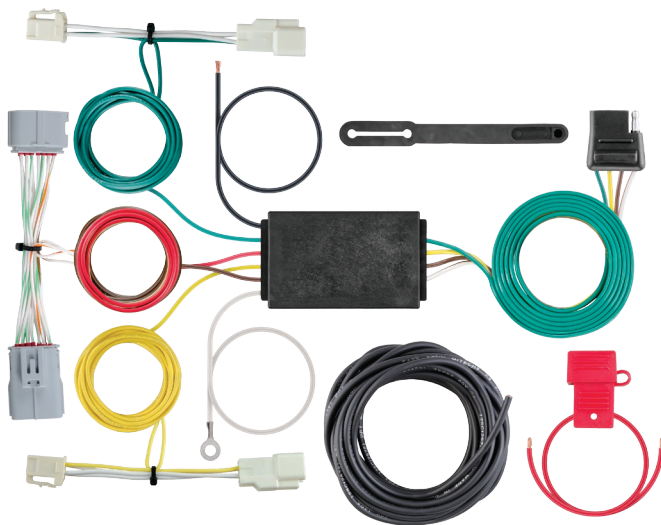

WIRING LOCATION GUIDE


PASSENGER CARS (P)

Representative vehicle shown below

P3 - Behind driver side taillight housing, inside of trunk

P4 - Behind passenger side taillight housing, inside of trunk

P6 - Behind center of rear bumper

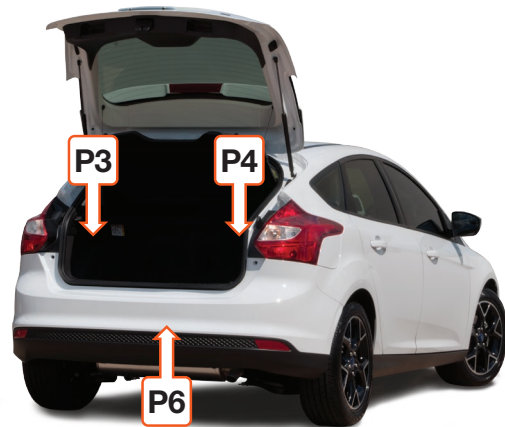

NOTICE

All steps must be followed to ensure the wiring harness will function properly. Once installed, test for proper function by using a test light or connecting a properly wired trailer.

TOOLS NEEDED

Ratchet	Wire stripper
10mm socket	Wire crimper
Flat blade screwdriver	Cutting tool
Panel trim removal tool	Sealant (included)

⚠ WARNING ⚠ ⚡

The battery connection must be fuse-protected, 10-amp max. Exceeding the product rating can cause loss of warranty, overheating and potential fire. Do not exceed product rating or tow vehicle lamp load rating, whichever is lower.

Signal Circuits - 3.0 amps per side

Tail / Running Circuits - 6.0 amps total

Check vehicle owner's manual or contact the vehicle manufacturer for more information.

INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Locate the vehicle battery on the driver side under the hood and disconnect the negative battery terminal.

Step 2

Open the trunk. Remove all trunk floor coverings (A).

Step 3

Remove the fasteners holding the storage trays in place. Remove the trays (B). Use a flathead screwdriver to remove the rear fastener in the storage trays (C). Remove the front plastic hold down by using a trim panel removal tool and carefully prying upwards (D).

Step 4

Remove the fasteners securing the rear scuff panel (E). Remove the scuff panel by pulling out on the bottom and then up. Take care not to damage the alignment tabs on the back (F).

Step 5

Starting on the driver side, remove the fasteners and cargo tie downs securing the side trunk liner in place. Using a flathead screwdriver, locate the small slot on the tie down and press inwards to release the plastic tie down (G).

Step 6

Remove the two 10mm fasteners securing the upper plastic trim panel (H). Remove the panel.

Step 7

Pull back on the side trunk liner to locate the vehicle taillight wiring harness connectors. Take care not to damage the alignment tabs on the back. Separate the connector from the trunk light before pulling the side trunk liner all of the way out (I).

Step 8

Locate the vehicle taillight wiring harness connectors (J). The connectors will be similar to those on the custom wiring harness. Separate the connectors from the taillight housing taking care not to damage the locking tabs (K).




Step 9

Insert the custom wiring harness end with yellow wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.

Step 10

Locate a suitable grounding point near the connector such as an existing screw with nut in the vehicle frame or drill a 3/32" pilot hole for the provided screw. The area should be free of rust, dirt and paint. Secure the white ground wire using the ring terminal and provided screw.

 **WARNING:** Check for miscellaneous items that may be hidden behind or under any surface before drilling to avoid damage and / or personal injury.

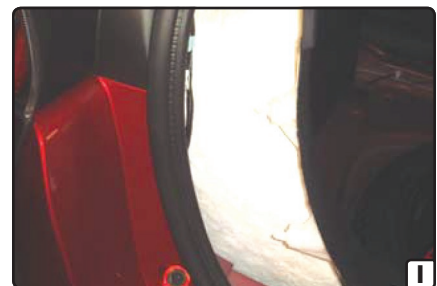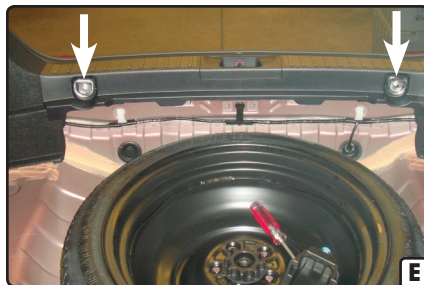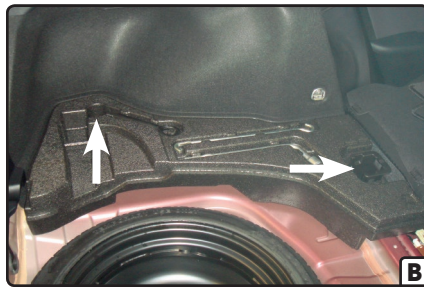

INSTALLATION / SAFETY INSTRUCTIONS

Step 11

On the outside of the vehicle, under the rear bumper, locate the center trim panel (L). Remove the fasteners holding the trim panel in place.

Step 12

Remove the center trim panel to locate the vehicle taillight connector (M). The connectors will be similar to those on the custom wiring harness. Separate the connectors taking care not to damage the locking tabs.

Step 13

Locate the grommet behind the taillight where the vehicle taillight wiring passes through from inside the cabin to the taillight (N). Remove the grommet and cut a slit large enough to route the custom wiring harness through (O).

Step 14

Route the custom wiring harness ends with the brown and red wires out through the grommet opening and through the slit in the grommet. Insert the custom wiring harness end with brown and red wire between the separated connectors. Make sure the connectors are fully inserted with locking tabs in place.

Step 15

Reseat the grommet using the provided sealant to seal the cut in the grommet and around all the wires.

Step 16

Locate a flat spot inside the vehicle, near the taillight. Adhere the black converter box using the provided double-sided tape.

Step 17

Route the custom wiring harness end with the green wire to the passenger side behind the removed scuff panels. Repeat steps 5-9 on the passenger side using the harness end with the green wire.

Step 18





Route the black power wire from the vehicle battery as shown on the included CME-PCL-INS sheet.

Step 19

When in use, route the 4-flat to the center of the vehicle and out of the trunk. When not in use, roll up and store in a convenient, out of the way location inside the trunk. Secure any loose wires with the provided cable ties.

Step 20

Reinstall all items removed during install and reconnect the negative battery terminal. Install the provided 4-flat dust cover to help prevent corrosion.

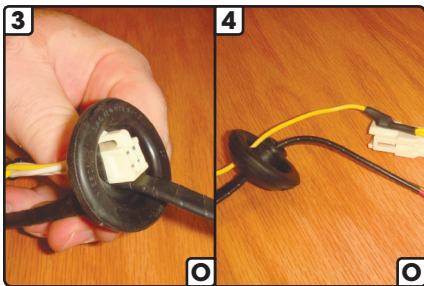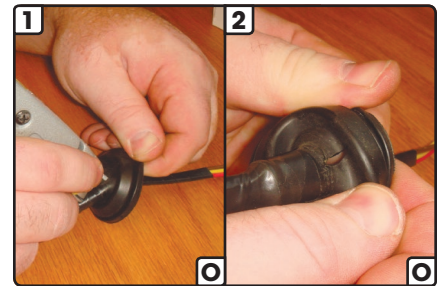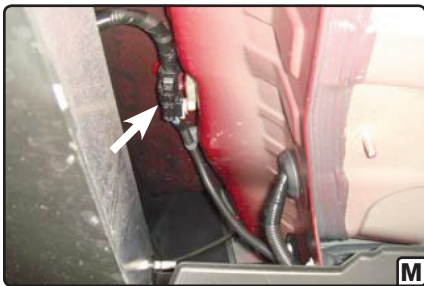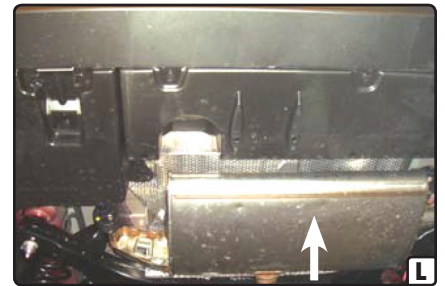

HOJA DE INSTRUCCIONES DEL CONDUCTOR DEL ADAPTADOR ALIMENTADO POR BATERÍA




NOTICE AVIS / AVISO

Illustrations are for reference only. Battery location may differ depending on the vehicle.

Les images ne sont fournies qu'à des fins de référence. L'emplacement de la batterie peut varier en fonction du véhicule.

Las ilustraciones son solo para referencia. La ubicación de la batería puede variar según el vehículo.

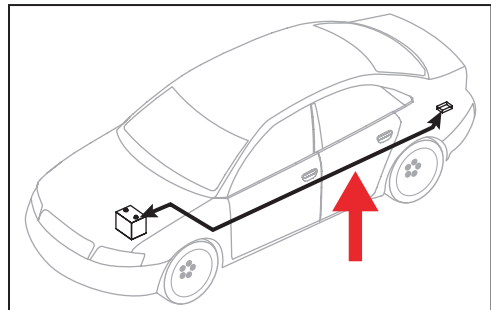

WARNING
AVERTISSEMENT / ADVERTENCIA

Route 12 GA wire to vehicle battery location, taking care to avoid any pinch points and hot or rotating components.

Acheminer le câble de calibre 12 à la batterie du véhicule en prenant soin d'éviter les points de pincement et les éléments chauds ou pivotants.

Pase el cable calibre 12 hacia la ubicación de la batería del vehículo, con cuidado de evitar atascos y componentes calientes o giratorios.



WARNING
AVERTISSEMENT / ADVERTENCIA

To avoid personal injury or property damage, check for miscellaneous items that may be behind or under any surface before drilling.

Pour éviter les blessures et les dommages matériels, vérifier les divers articles qui peuvent se trouver derrière ou sous la surface avant de percer.

Para evitar lesiones personales o daños materiales, verifique que no haya ningún elemento detrás o debajo de la superficie antes de perforar.



NOTICE AVIS / AVISO

1. This converter system is to be used only on 12 volt negative ground systems.
2. Secure power wire to vehicle chassis using cable ties provided.
3. When passing the power wire through sheet metal, use an existing grommet, add a grommet or use silicone to protect the power wire from sharp edges.
4. Overall T-connector design may differ from illustration. The illustration should be used for power lead instruction only. Illustration is not to scale.

1. Ce système de convertisseur ne doit être utilisé qu'avec une prise de masse de polarité négative de 12 volts.
2. Fixer le câble d'alimentation au châssis du véhicule à l'aide des courroies d'attache de câble fournies.
3. Utiliser un œillet existant, ajouter un œillet ou appliquer du silicone pour protéger le câble d'alimentation des rebords tranchants au moment de le passer à travers la tôle.
4. La disposition générale du connecteur en T peut différer de l'illustration. Celle-ci ne doit être utilisée que pour le convertisseur d'alimentation. L'illustration n'est pas à l'échelle.

1. Este sistema de adaptadores solo se debe utilizar con sistemas con polo negativo a masa de 12 voltios.
2. Sujete el cable de alimentación al chasis del vehículo utilizando los sujetacables suministrados.
3. Al pasar el cable de alimentación por la lámina de metal, utilice la arandela pasacable existente, agregue una arandela pasacable o utilice silicona para proteger el cable de alimentación de los bordes filosos.
4. El diseño general del conector T puede ser distinto de la ilustración. La ilustración solo se debe utilizar para la instrucción del conductor de alimentación. La ilustración no está a escala.

