

# 56673

FORD FREESTAR  
MERCURY MONTEREY

## WIRING LOCATION GUIDE GUÍA DE UBICACIÓN DEL CABLEADO IDE D'EMPLACEMENT DES FILS



### MUST READ FIRST!

All steps must be followed to ensure correct function of the T-Connector. To verify proper installation once installed, test by connecting a test light or properly wired trailer.


### ¡DEBE LEERSE PRIMERO!

Debe seguirse todos los pasos para asegurar el correcto funcionamiento del Conector-T. Para verificar la correcta instalación, pruebe conectando una luz de prueba o un remolque debidamente cableado.

### À LIRE D'ABORD!

Pour assurer le bon fonctionnement du T-Connector, il faut suivre toutes les étapes. Pour vérifier que l'installation a été bien effectuée, branchez un feu de test ou une remorque correctement filéée.

10/30/08

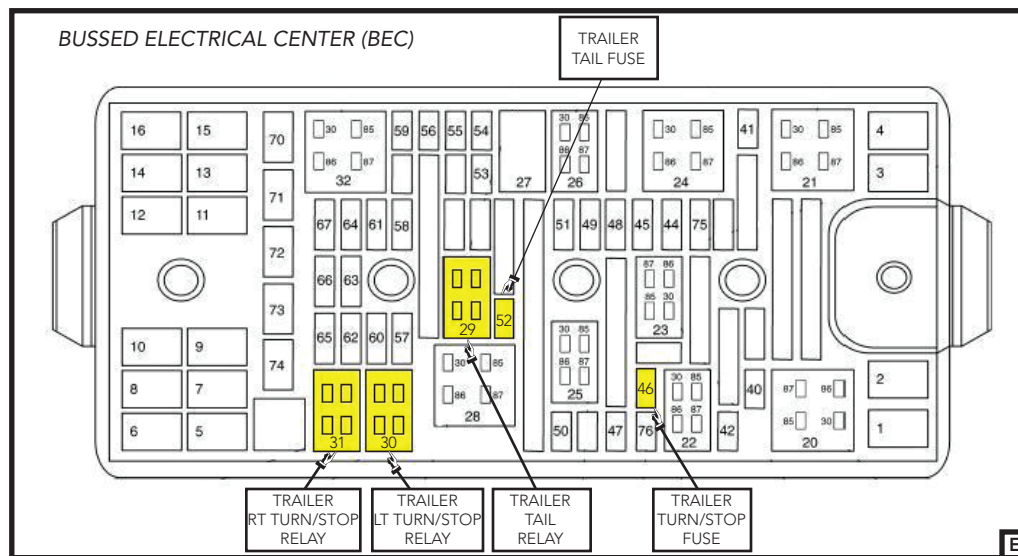

### English

1. Locate the vehicles taillight wiring harness behind the rear bumper(S6). **A**

2. Remove the protective dust cover from the factory harness connector. The connector will be similar in appearance to that on the T-connector harness. Clean away any dirt, dust or debris from the connector. **B**

3. Insert the T-connector harness end into the factory harness connector. Firmly press the ends together until the locking tabs engage. **C**

### Español

### Français

