91-95 TOYOTA MR2


12/10/2012

11713

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT. ***DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.***

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY 18050 STABILIZING STRAPS.

** FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY** HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-877-287-8634

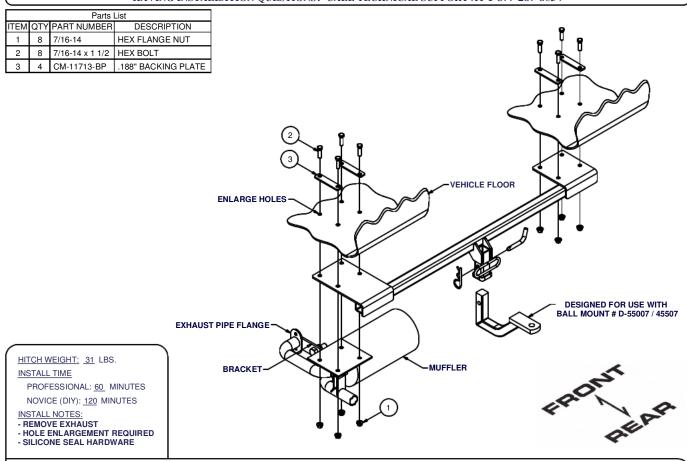

INSTALLATION STEPS

- 1. Temporarily remove the muffler and attached exhaust pipes from the vehicle. Only the muffler system from the attaching flange rearward needs to be removed. Removing the muffler includes disconnecting the pipe flange, disconnect bracket near the flange, and remove (2) exhaust hanger plates on each side of the vehicle above the muffler.
- 2. There are hanger plates that are connected to the vehicle's floor with (4) weldnuts per side. These weldnuts can be located from inside the trunk by temporarily pulling away the carpet and floor panels in the trunk until the nuts are accessible. Weldnuts need to be removed and the holes enlarged to accept 7/16" hardware. The (4) holes in each exhaust plate also need to be enlarged to accept 7/16" hardware.
- Position the hitch against the underside of the vehicle floor as shown, with the hitch behind the rear panel. Support the muffler and hanger plates below the hitch side plates. Install hardware as shown with the (4) CM-11713-BP reinforcement plates inside the vehicle, opposite the hitch.
- 4. Torque all 7/16" fasteners to 70 lb-ft.
- 5. Reconnect exhaust bracket and flange.
- 6. Use silicone sealant to seal hardware installed through vehicle floor.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.