# 11701 MERCEDES BENZ E SEDAN, WAGON (EXCL. SPORT EDITION)

### 11/03/2020


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 2,000 LBS. TRAILER WEIGHT & 200 LBS. TONGUE WEIGHT. \*\*\*DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.\*\*\*

WARNING: ALL NON-TRAILER LOADS APPLIED TO THIS PRODUCT MUST BE SUPPORTED BY AUXILIARY STABILIZING STRAPS.

#### \*\* FAILURE TO PROPERLY SUPPORT NON-TRAILER LOADS WILL VOID PRODUCT WARRANTY\*\*

HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 877-287-8634

Parts List			
1	2	30-00186	WASHER,FLAT,3/8,YZ
2	4	CM-3806-UBR	3/8-16 x 3.44 x 5.00 U-BOLT
3	2	10-10234	HHCS,3/8-16 UNC,1-1/2,GRD8,YZ
4	10	20-00102	NUT,SER-FLANGE,3/8-16 UNC,GRD8,YZ
5	1	11701-INS	INSTRUCTION SHEET
6	1	POLY BAG	CLEAR POLY BAG

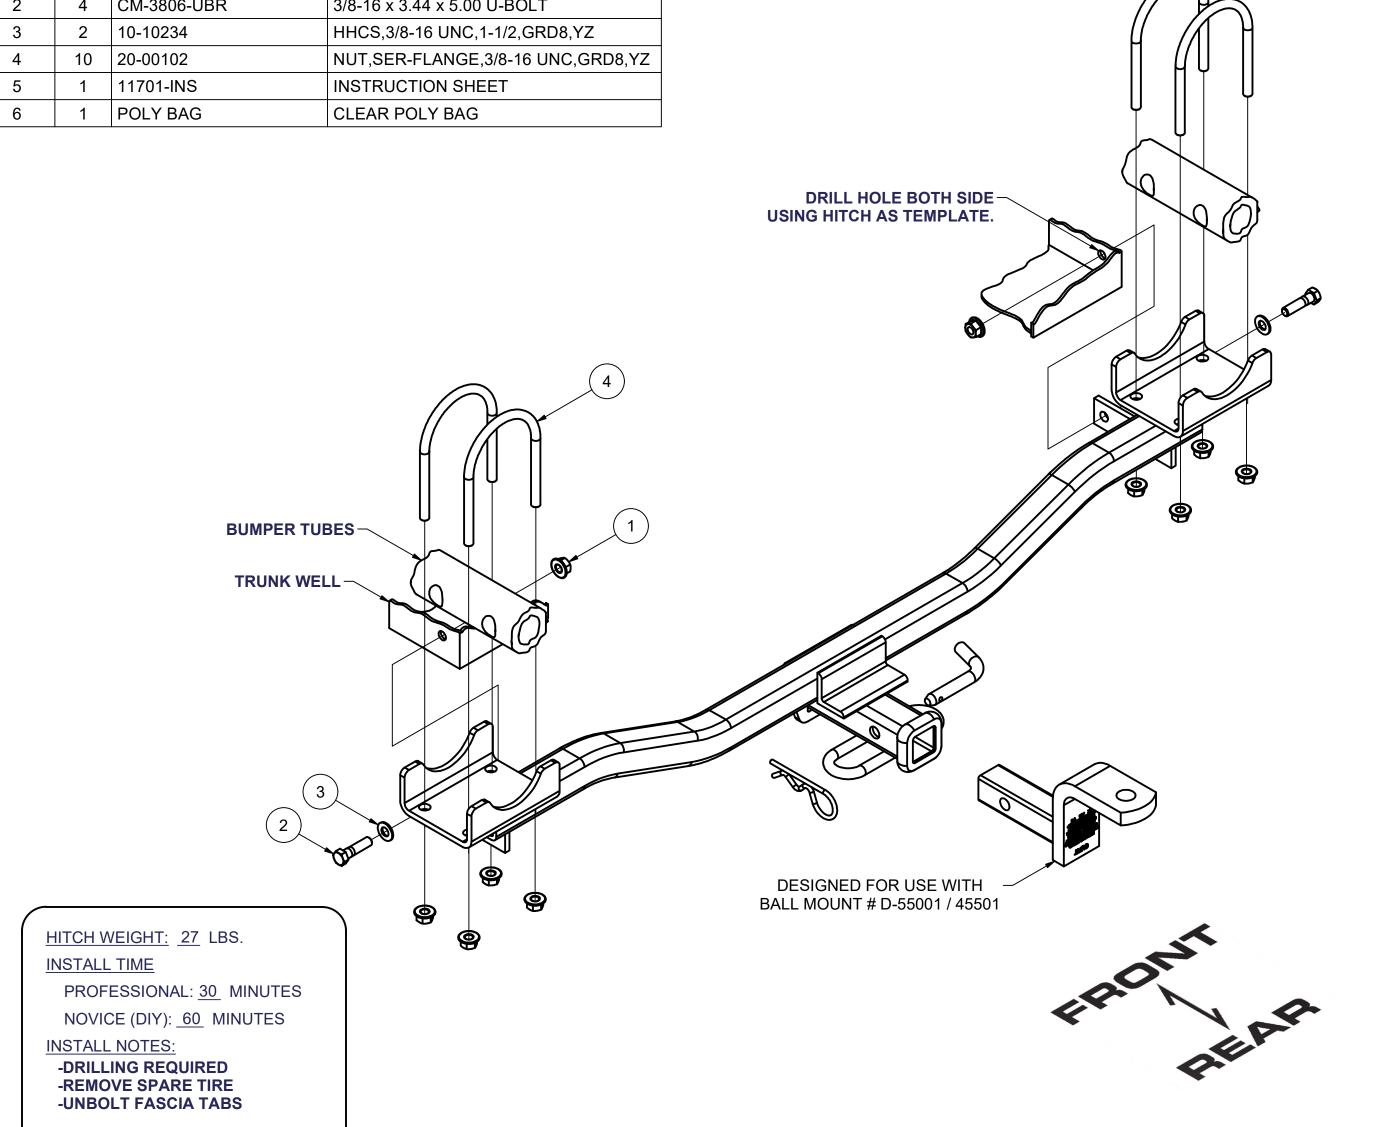

## **INSTALLATION STEPS**

- 1. Clear trunk well by removing tire and moving battery as far left as possible without disconnecting power cables.
- 2. Unbolt fascia tabs from body.
- 3. Fasten hitch to bumper tubes with U-bolts as shown.
- 4. Drill remaining mounting holes using hitch as a template. Install 3/8" hardware provided through drilled holes.
- 5. Torque all fasteners to 45 lb.-ft.

### PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

Curt Manufacturing Inc., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, Curt Manufacturing Inc., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. Curt Manufacturing Inc.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.

### 25701 / 247701