

31074

CHEVROLET COLORADO & CANYON

6/8/2020

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 5,000 LBS. TRAILER WEIGHT & 500 LBS. TONGUE WEIGHT.

GROSS LOAD CAPACITY WHEN USED AS A STRAIGHT LINE PULL: 9,000 LBS. MAX. LINE PULL.

*** DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY. ***


HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 1-877-287-8634

Parts List

ITEM	QTY	PART NUMBER	DESCRIPTION
2	4	10-10282	BOLT,CAR,7/16-14 UNC,1-1/2,GRD8,YZ
3	4	7_16 FISHWIRE	7/16" FISHWIRE
4	4	20-00103	NUT,SER-FLANGE,7/16-14 UNC,GRD8,YZ
1	4	CM-SP11	.250 x 1.00 x 2.50" SQUARE HOLE SPACER

FISHWIRE TECHNIQUE


INSERT COILED END OF FISHWIRE TOOL THROUGH HITCH MOUNTING HOLE IN VEHICLE FRAME RAIL AND OUT THE ACCESS HOLE. PASS COILED END OF FISHWIRE THROUGH SPACER AND THREAD BOLT INTO COIL. KINK WIRE TO KEEP SPACER SEPARATE FROM BOLT AS SHOWN. PULL FISHWIRE, SPACER, AND BOLT THROUGH FRAME AND OUT MOUNTING HOLE. USE FISHWIRE TO GUIDE HITCH DURING MOUNTING AND PREVENT LOSS OF BOLT / SPACER INSIDE FRAME RAIL.

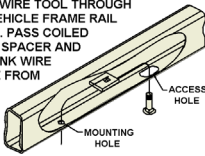

NOTE: SOME VEHICLES MAY FISHWIRE THROUGH END OF FRAME**

TOOLS REQUIRED

RATCHET
TORQUE WRENCH
AVIATION SHEARS
11/16" SOCKET
15mm SOCKET
10mm SOCKET
11/16" OPEN END WRENCH

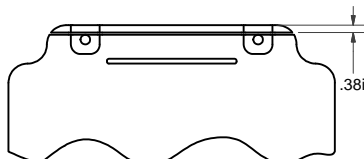

SKID PLATE TRIM DETAIL

HITCH WEIGHT: 35 LBS.


INSTALL TIME

PROFESSIONAL: 45 MINUTES

NOVICE (DIY): 90 MINUTES

INSTALL NOTES:

- NO DRILLING REQUIRED
- MAY REQUIRE FASCIA TRIMMING OR REMOVAL

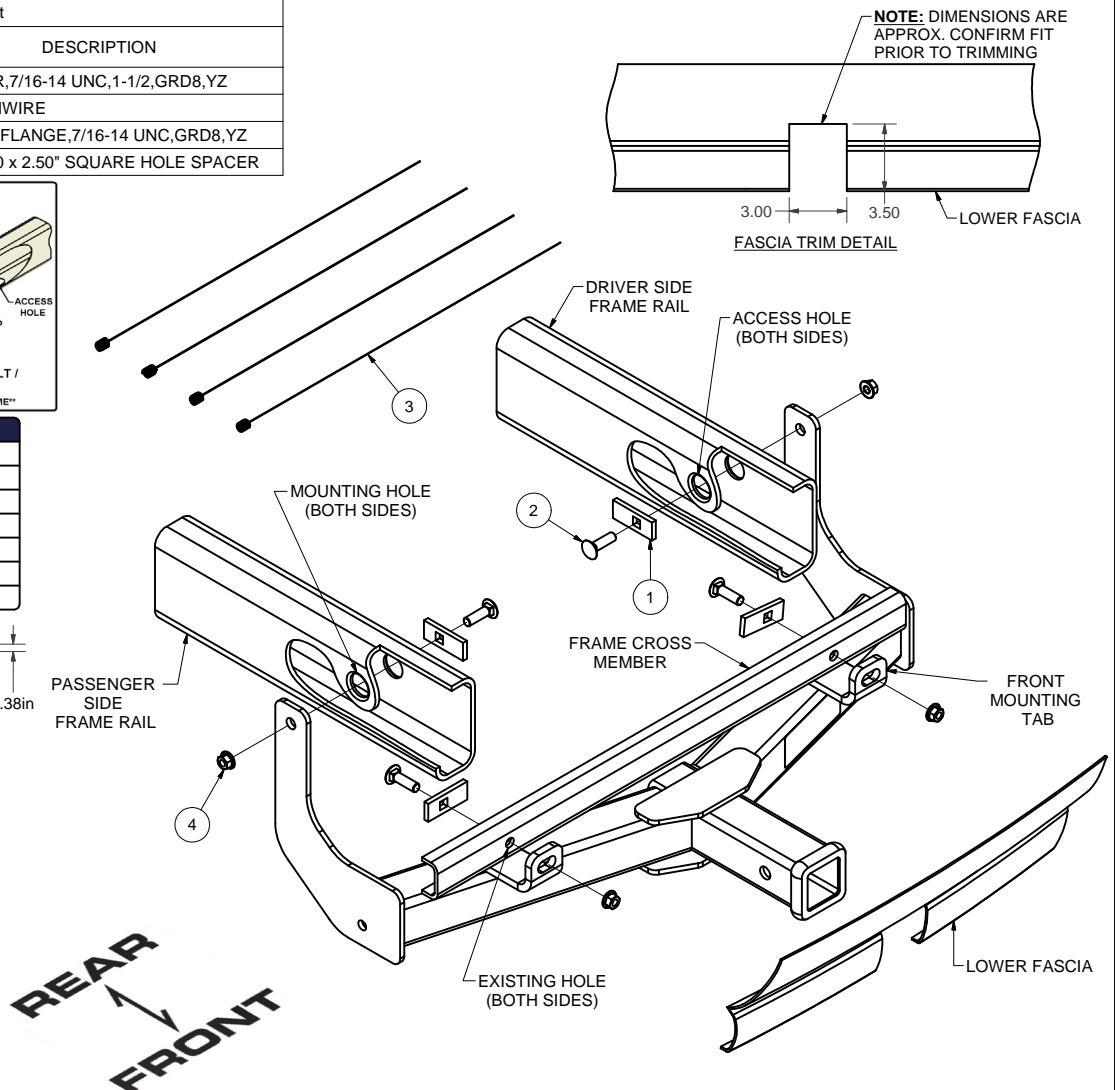

INSTALLATION STEPS

- 1) Determine if trimming is required on vehicle by raising hitch into position. If needed, mark and trim lower fascia, as shown above, or remove lower fascia and return to owner. **Note:** Check for proper fit prior to trimming.
- 2) Remove skid plate. OPTIONAL-Trim 1/2" from edge and replace later (SEE SKID PLATE TRIM DETAIL)
- 3) Raise hitch into position aligning the mounting holes with the upper holes in hitch on both sides.
- 4) Fishwire (2) 7/16" carriage bolts and SP2 spacers into position through the access holes as shown.
- 5) Loosely install nuts, being careful not to push bolt into the frame.
- 6) Rotate the hitch into position aligning holes in the frame cross member with the slots in the front mounting tabs.
- 7) Install remaining (2) 7/16" carriage bolts and SP2 spacers in each hole. Loosely install nuts.
- 8) Ensure the hitch is aligned to the trimmed lower fascia. Adjust as needed.
- 9) Torque all 7/16" fasteners to 69 ft-lbs.
OPTIONAL-Replace trimmed skid plate.
Installation complete.

PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.



Scan for more information

CURT Manufacturing LLC., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, CURT Manufacturing LLC., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. CURT Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.

DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY.

FRONT MOUNTED ACCESSORIES

1) Do not exceed front axle Gross Weight Rating (GAWR). Consult owners manual or specification plate located on driver's door frame. Measure gross front axle weight by placing front wheels of loaded vehicle on a scale.

WARNING: Exceeding GAWR may overload the front axle and/or suspension. This could result in **accident, property damage and personal injury.**

- 2) Reposition front mounted license plate if obstructed.
- 3) Do not obstruct vehicle lights.
- 4) Allow free air flow into grille opening.
- 5) Rear wheel traction may be reduced. This could effect handling. Reduce speed and drive with caution.
- 6) Accessories extend front of vehicle. This may reduce approach angle. Use caution when parking and maneuvering.
- 7) Do not obstruct driver view.


VEHICLE RECOVERY AND WINCHING TIPS

1) Use OEM tow hooks, recovery eyes or a clevis mount for attachment of a tow strap or winch cable.

WARNING: NEVER use a ball and/or ball mount as an anchor point for tow strap or winch cable. Severe personal injury or death could result.

- 2) Observe winch manufacturer's recommendations, cautions and warnings.
- 3) Attach return cable to tow hook or recovery eye when using a snatch block (See figure 1).

CAUTION: Do not attach return cable to winch mount. This may overload winch mount and/or front mounted receiver.


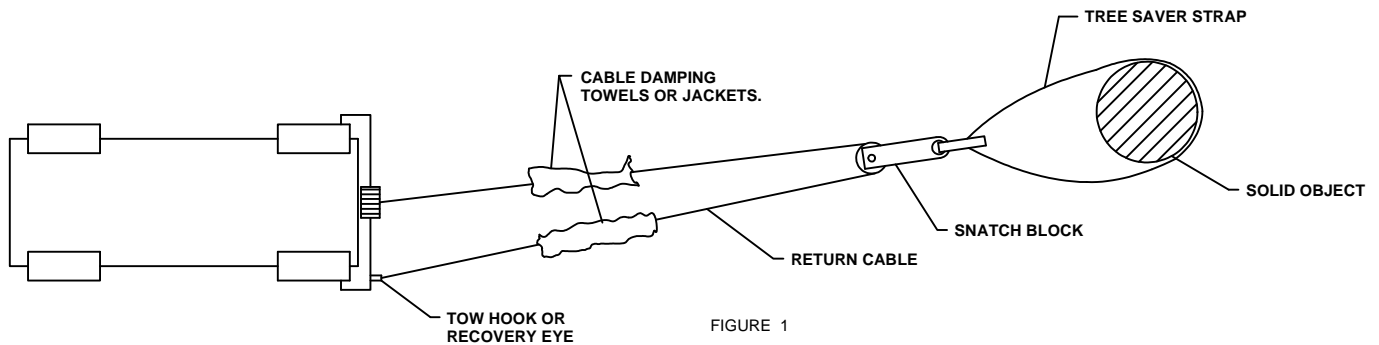


RATING

For **Maximum** line pull rating, winch cable must not exceed:

- 15 degree angle up or down from horizontal (See Figure 2).
- 45 degree angle left or right from straight ahead (See Figure 3).


CAUTION: Exceeding the maximum line pull rating may over load winch, winch mount, and/or front mounted receiver.

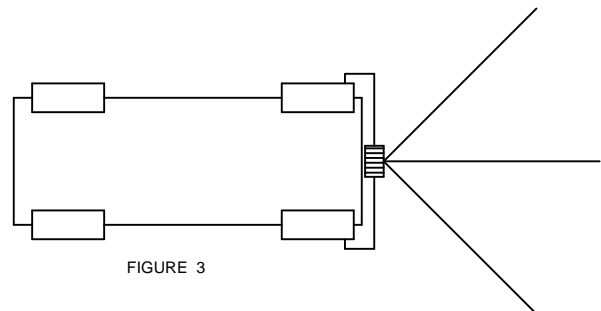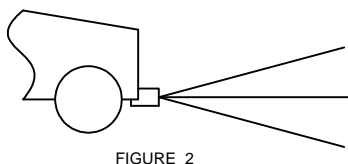

ï DÁÁQ } • cæ || Á ! ^ { æ ä } ä } * Á Ç G D Á Ì Ð F Î Ä Ä & æ ! i ä æ * ^ Á à [| c • Á æ } ä Á Ù Ú G Á Á Á Á Á •] æ & ^ ! • Á ä } Á ^ æ & @ @ [| ^ É Á Š [[• ^ | ^ Á ä } • cæ || Á } ~ c • È



ï DÁÁÒ } • ~ ! ^ Á c @ ^ Á @ ä c & @ Á ä • Á æ | ä * } ^ á Á c [Á c @ ^ Á c i ä { { ^ á Á | [, ^ ! Á - æ • & ä æ É Á Á Á Á Á Á C E ä b ~ • c Á æ • Á } ^ ^ á ^ á È

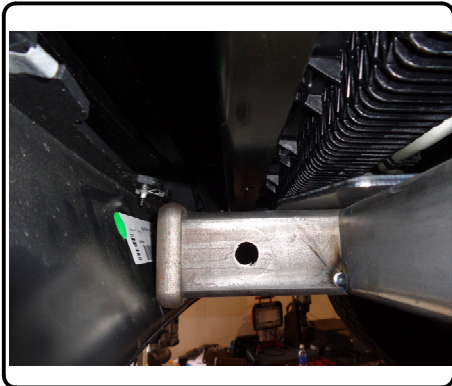

J D Á V [! ~ ^ Á æ || Á Ì Ð F Î Ä Ä - æ • c ^ } ^ ! • Á c [Á Î J Á - c È | ä • È
Á
Á Á Á Á U Ú V Q U P C E Š È Ü ^] | æ & ^ Á c i ä { { ^ á Á • \ ä ä Á } | æ c ^ È
Á
Á Á Á Á Q } • cæ || æ c ä [} Á & [{ } | ^ c ^ È

