## 

#### 15801 INSTALLATION INSTRUCTIONS


Safety glasses should be worn at all times while installing this product.

YEARS: 2016-PRESENT

MAKE: RAM

MODEL: 2500 / 3500 (SHORT BOX MODELS)

**STYLE: PICKUP** 

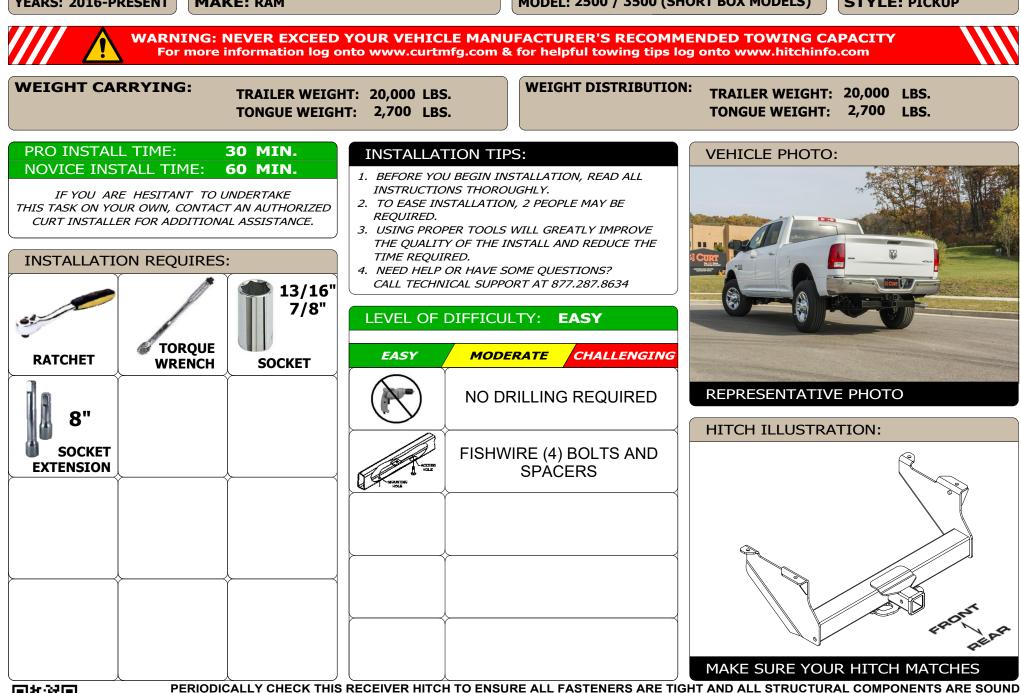




CURT Manufacturing LLC. warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, CURT Manufacturing LLC. may repair or replace the product at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. CURT Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage. For more information log onto www.curtmfg.com

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C.Regulation V-5 and SAE J684.

#### **INSTALLATION WALKTHROUGH:**


	Parts List					
ITEM	QTY	PART NUMBER	DESCRIPTION			
1	2	9_16 FISHWIRE	9/16" FISHWIRE			
2	6	20-00104	NUT,SER-FLANGE,9/16-12 UNC,GRD8,YZ			
3	2	10-10500	HHCS,9/16-12 UNC,2,GRD8,YZ			
4	4	10-10328	BOLT,CAR,9/16-12 UNC,1-3/4,GRD8,YZ			
5	2	CM-SP74	.313 x 1.50 x 3.00" 9/16" SQUARE HOLE SPACER			
6	2	CM-SP68	.313 x 2.13 x 2.13" 9/16" SQUARE HOLE SPACER			
7	2	30-00202	WASHER,FLAT,9/16,YZ			
8	6	CM-SP8	.188 x 1.25 x 1.50" ROUND HOLE SPACER			

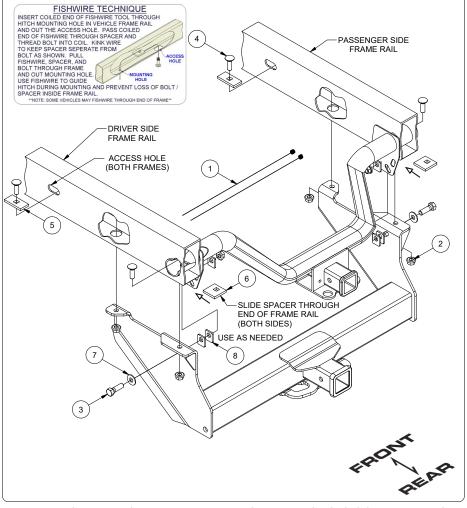

For more information log onto www.curtmfg.com, & for helpful towing tips log onto www.hitchinfo.com

 Raise hitch into position by aligning holes in hitch side plates with holes in frame rails. <u>Note</u>: If equipped with factory hitch, you may need to loosen the hitch/bumper beam and push it towards the rear of vehicle to create additional space for the CURT hitch.



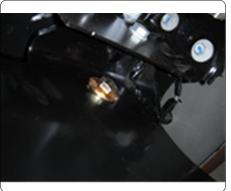


- 2. Slide CM-SP68 spacers through ends of frame rails and align holes in spacers with rear mounting holes.
- Fishwire 9/16" carriage bolts and CM-SP74 spacers through access holes in side of frame rails into postion, as shown. (See FISHWIRE TECHNIQUE diagram.)






#### **INSTALLATION WALKTHROUGH:**

- 4. Fishwire 9/16" carriage bolts through bumper beam and through CM-SP68 spacers from Step 2, as shown.
- 5. Align slots in hitch with slots in vehicle tow loops and secure hitch with 9/16" hex flange nuts onto carriage bolts.

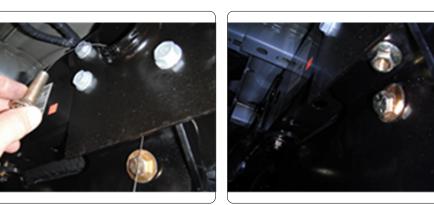

6. Install 9/16" hex bolts and flat washers with enough CM-SP8 spacers between tow loops and hitch side plates to prevent the tow loops from pulling into hitch when the hex bolts are tightened, as shown.

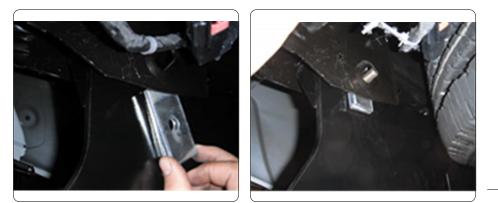

For more information log onto www.curtmfg.com, & for helpful towing tips log onto www.hitchinfo.com

- 7. Secure hex bolts with CM-SP8 spacers and 9/16" hex flange nuts, as shown.
  - 8. Torque all 9/16" hardware to 150 lb-ft.






#### TOWING SAFETY INFORMATION


#### Gross Trailer Weight / GTW

The Gross Trailer Weight is the weight of the trailer & cargo. Measure this by putting the fully loaded trailer on a vehicle scale.



#### Tongue Weight / TW

The downward force that is exerted on the hitch ball by the coupler. The tongue weight will vary depending on where the load is positioned in relationship to the trailer axle(s). To measure the tongue weight, use either a commercial scale or a bathroom scale with the coupler at towing height. When using a bathroom scale with heavier tongue weights, use the method shown and multiply the scale reading by 3.



#### Weight Carrying / WC

The total weight of both the trailer and the cargo inside. Never exceed the weight capacity of your trailer hitch.

#### Weight Distribution / WD


Used to balance the weight of the cargo between the front and rear wheels throughout the trailer, allowing for better steering, braking, and level riding.



#### Sway Control

A device used to reduce the lateral movements of the trailer that are caused by the wind. This works in conjunction with a weight distribution hitch. Do not use this on a class 1 or 2 hitch, or with surge brakes.

#### How Much Can You Safely Tow?

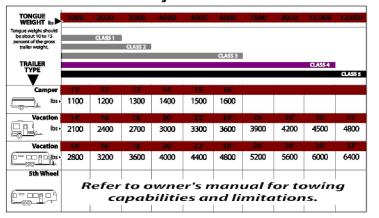

#### Ball Mount

The ball mount is placed inside the opening of the receiver hitch which is mounted to the vehicle. Make sure a hitch pin and clip is properly securing the ball mount to the receiver hitch before you begin towing.

A: Rise. B: Drop. C: Hole Size. D: Length.



#### Trailer Ball

The connection from the hitch to the trailer. There are many factors that determine the correct hitch ball:

- Number one is the hitch ball's gross trailer weight rating.
- The mounting platform must be at least 3/8" thick.
- The hole diameter must not be more than 1/16" larger
- than the threaded shank. · Every time you tow, check the nut and lock washer to
- A: Ball Dia. B: Shank Length. C: Shank Dia. D: Shank Rise.

#### Coupler

The component that is placed over the trailer ball to connect the vehicle to the trailer. Be sure that the coupler size matches the size of the hitch ball and that the coupler handle is securely fastened. To determine what size hitch ball you need for your application you will need to know the size of coupler that is on the trailer. Be sure your coupler is properly adjusted to the ball you are using.

NOTE: For added security the use of safety devices such as Coupler Safety Pins and Locks is stronaly recommended.

#### Safety Chains

Safety chains are a requirement and should be crossed under the tongue of the trailer so that the tongue will not drop to the road if it becomes separated from the hitch. Always leave enough slack so you can turn. Never allow the safety chains to drag on the ground and never attach the chains to the bumper.


Trailer Classification: Safety Chain Breaking Force - Minimum Class 1: 2,000 lbs. (8.9 kN) Class 2: 3,500 lbs. (15.6 kN) Class 3: 5,000 lbs. (22.2 kN)


The strength rating of each length of safety chain or its equivalent and its attachments shall be equal to or exceed in minimum breaking force the GVWR (Gross Vehicle Weight Rating) of the trailer.

#### Electrical

Trailer lights, Electric Brakes, Break-away systems - Every time you tow, be sure to check that all components are working properly.

Wiring identification by color:

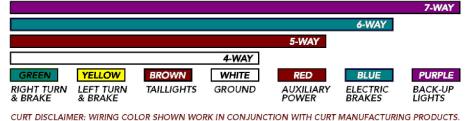



# **RAM SHORT BOX 2500 / 3500**

### 12/1/2020

15801


GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 20,000 LBS. TRAILER WEIGHT & 2,700 LBS. TONGUE WEIGHT. GROSS LOAD CAPACITY WHEN USED AS A WEIGHT DISTRIBUTION HITCH: 20,000 LBS. TRAILER WEIGHT & 2,700 LBS. TONGUE WEIGHT



## WARNING: \*\*\* DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY. \*\*\*

FOR MORE INFORMATION LOG ONTO WWW.CURTMFG.COM & FOR HELPFUL TOWING TIPS LOG ONTO WWW.HITCHINFO.COM HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 877-287-8634

			Parts List	
TEM	QTY	PART NUMBER	DESCRIPTION	
1	2	10-10500	HHCS,9/16-12 UNC,2,GRD8,YZ	
2	2	9_16 FISHWIRE	9/16" FISHWIRE	
3	2	30-00202	WASHER,FLAT,9/16,YZ	
4	6	20-00104	NUT,SER-FLANGE,9/16-12 UNC,GRD8,YZ	
5	4	10-10328	BOLT,CAR,9/16-12 UNC,1-3/4,GRD8,YZ	
6	2	CM-SP68	.313 x 2.13 x 2.13" 9/16" SQUARE HOLE SPACER	
7	2	CM-SP74	.313 x 1.50 x 3.00" 9/16" SQUARE HOLE SPACER	FRAME RAIL
8	6	CM-SP8	.188 x 1.25 x 1.50" ROUND HOLE SPACER	
			ORIVER SIDE FRAME RAIL	
	1		-ACCESS HOLE (BOTH SIDES)	
	I			
				BUMPER

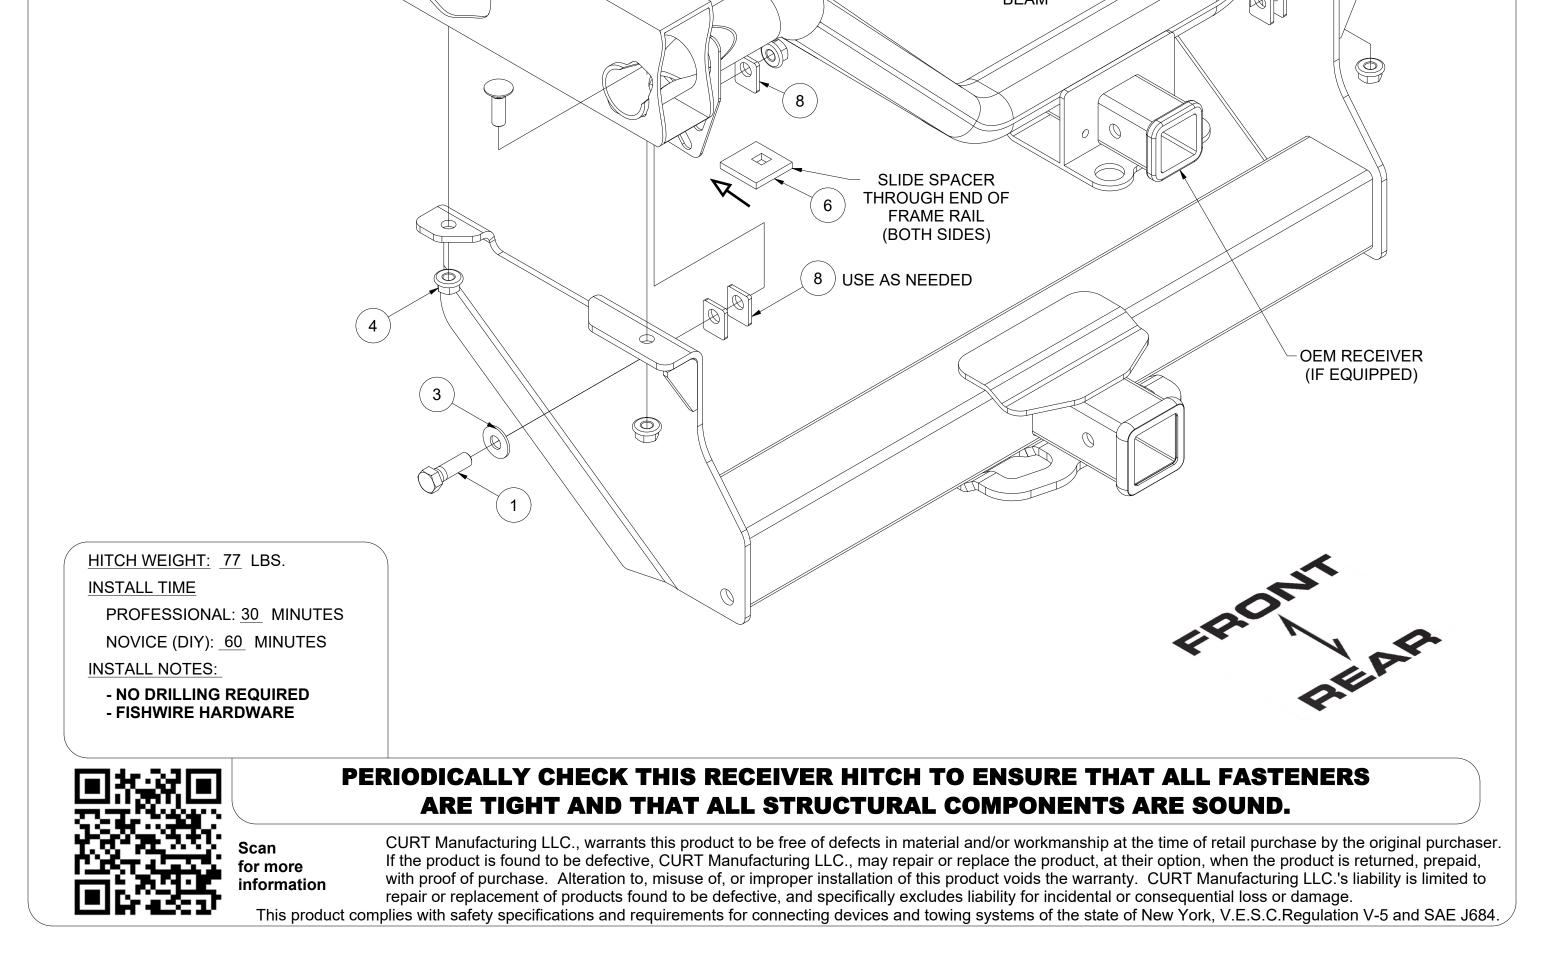

# **RAM SHORT BOX 2500 / 3500**

### 12/1/2020

15801

GROSS LOAD CAPACITY WHEN USED AS A WEIGHT CARRYING HITCH: 20,000 LBS. TRAILER WEIGHT & 2,700 LBS. TONGUE WEIGHT. GROSS LOAD CAPACITY WHEN USED AS A WEIGHT DISTRIBUTION HITCH: 20,000 LBS. TRAILER WEIGHT & 2,700 LBS. TONGUE WEIGHT



BOLT AS SHOWN. PULL

FISHWIRE, SPACER, AND

USE FISHWIRE TO GUIDE

SPACER INSIDE FRAME RAIL.


BOLT THROUGH FRAME AND OUT MOUNTING HOLE.

## WARNING: \*\*\* DO NOT EXCEED VEHICLE MANUFACTURER'S RECOMMENDED TOWING CAPACITY. \*\*

FOR MORE INFORMATION LOG ONTO WWW.CURTMFG.COM & FOR HELPFUL TOWING TIPS LOG ONTO WWW.HITCHINFO.COM HAVING INSTALLATION QUESTIONS? CALL TECHNICAL SUPPORT AT 877-287-8634



	TOOLS REQUIRED	
	SOCKET WRENCH	
	TORQUE WRENCH	
	8 in. SOCKET EXTENSION	
	13/16" & 7/8" SOCKET	$\rightarrow$
$\sim$		

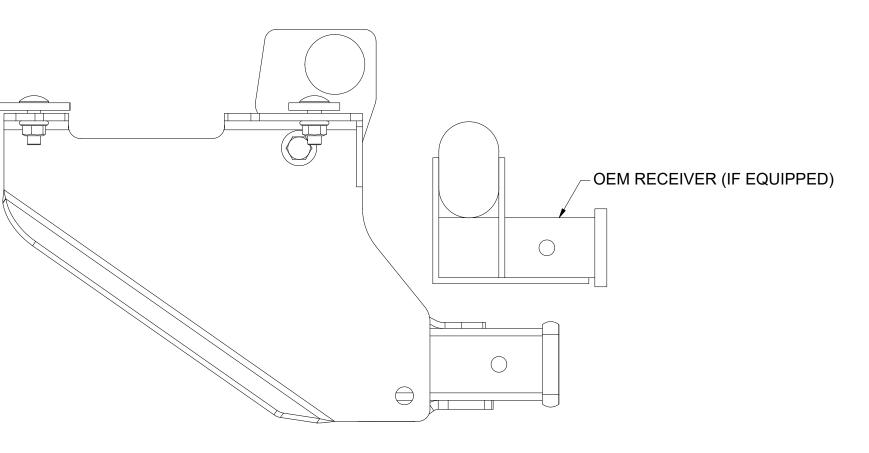

**INSTALLED HITCH POSITION** 

## **INSTALLATION STEPS**

FISHWIRE TECHNIQUE

HITCH DURING MOUNTING AND PREVENT LOSS OF BOLT /

\*\*NOTE: SOME VEHICLES MAY FISHWIRE THROUGH END OF FRAME\*

ACCESS

HOLE

MOUNTING

INSERT COILED END OF FISHWIRE TOOL THROUGH HITCH MOUNTING HOLE IN VEHICLE FRAME RAIL AND OUT THE ACCESS HOLE. PASS COILED END OF FISHWIRE THROUGH SPACER AND THREAD BOLT INTO COIL. KINK WIRE TO KEEP SPACER SEPARATE FROM

- 1. Raise hitch into position by aligning holes in hitch side plates with holes in frame rails. **Note:** If equipped with factory hitch, you may need to loosen the hitch/bumper beam and push it towards the rear of vehicle to create additional space for the CURT hitch.
- 2. Slide CM-SP68 spacers through ends of frame rails and align holes in spacers with rear mounting holes.
- 3. Fishwire 9/16" carriage bolts and CM-SP74 spacers through access holes in side of frame rails into postion, as shown. (See FISHWIRE TECHNIQUE diagram.)
- 4. Fishwire 9/16" carriage bolts through bumper beam and through CM-SP68 spacers from Step 2, as shown.
- 5. Align slots in hitch with slots in vehicle tow loops and secure hitch with 9/16" hex flange nuts onto carriage bolts.
- 6. Install 9/16" hex bolts and flat washers with enough CM-SP8 spacers between tow loops and hitch side plates to prevent the tow loops from pulling into hitch when the hex bolts are tightened, as shown.
- 7. Secure hex bolts with CM-SP8 spacers and 9/16" hex flange nuts, as shown.
- 8. Torque all 9/16" hardware to 150 lb-ft.

## PERIODICALLY CHECK THIS RECEIVER HITCH TO ENSURE THAT ALL FASTENERS ARE TIGHT AND THAT ALL STRUCTURAL COMPONENTS ARE SOUND.

CURT Manufacturing LLC., warrants this product to be free of defects in material and/or workmanship at the time of retail purchase by the original purchaser. If the product is found to be defective, CURT Manufacturing LLC., may repair or replace the product, at their option, when the product is returned, prepaid, with proof of purchase. Alteration to, misuse of, or improper installation of this product voids the warranty. CURT Manufacturing LLC.'s liability is limited to repair or replacement of products found to be defective, and specifically excludes liability for incidental or consequential loss or damage.

This product complies with safety specifications and requirements for connecting devices and towing systems of the state of New York, V.E.S.C.Regulation V-5 and SAE J684.