

INSTALLATION INSTRUCTIONS

51523 APPLICATIONS

| Make | Model |
|-------|-------|
| Acura | MDX |

BRAKE CONTROL HARNESS




NOTICE

All steps must be followed to ensure the CURT brake control harness will function properly. Once installed, test for proper function by following the brake control unit instruction manual.

LOCATION GUIDE

Representative vehicle shown below

BH1 - Under dash, left of steering column, near emergency brake pedal

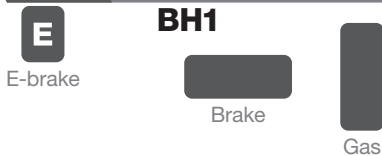

INSTALLATION / SAFETY INSTRUCTIONS

Step 1

Locate the vehicle brake control harness connector underneath the dash, to the left of the steering wheel, taped to another harness near the emergency brake pedal. The connector will be similar to that on the CURT brake control harness.

Note: In some cases it may be easier to locate the vehicle connector if you partially remove the small trim panel located in front of the vehicle electric brake control connector location. Remove the Phillips screw securing the trim panel in place (A,B).

Step 2

Remove any foam padding from the connector.

Step 3

Insert the connector on the CURT brake control harness into the vehicle connector. Make sure the connector is fully inserted with locking tabs in place (C).

Step 4

Insert the brake control harness black connector into the brake control quick plug connector. Secure the brake control harness with the provided cable ties, avoiding any pinch points.

Step 5

Reinstall all removed items during the install.

Step 6

Complete the installation using the brake control instructions. Mount the unit as directed and perform test procedures as instructed in the brake control user manual.

